Assembly Instructions

Lightline® Architectural Walls

September 2017



Furnishing Knowledge®

Parts Identification

Tools 3
Aluminum Extrusions 4
Layout Typicals 6

Installation

Ceiling Channel 8
Removable Ceiling Grid Clips & Seismic Bracing 10
Ceiling Corner Brackets 13
Unloading Panels 14
Panel Installation on Hard Floor 15
Door Post to Drywall Connection 16
Glass Panels and Wall Mounted Glass Panels 17
Panel Height Adjustment 19
Glass-to-Glass Panel Joints 20
Glass-to-Door Frame & Posts Panel Joints 26
Trim Installation 27
Universal Posts 34

LJS-G Full-Height Glass Sliding Door 39
LJS-A/LJS-W Full Height Aluminum/Wood Sliding Door 42
LUS-G Full-Height Glass Sliding Door 45

LUP-G Full-Height Glass Pivot Door 48
LUP-W Full-Height Wood Pivot Door 51

LUDS-G Double Full-Height Sliding Door 53


LUCS Double Full-Height Glass Sliding Door 56

LUPT-G Transom-Height Pivot Door 59
LUPT-W Transom-Height Wood Pivot Door 62


Door Pivot Adjustment 65
Sliding Door Sound Seal 66
Pivot Door Reversal 67
Door Closer 71
Freeform Panels 73

CAUTION


Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

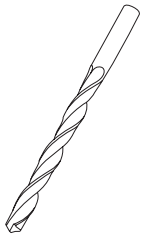


Drill Bits
(5/32", 3/16", 9/32")




Allen Wrenches
(1/16, 1/8)

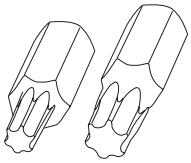


Torx Bits
(T20, T25, T30)

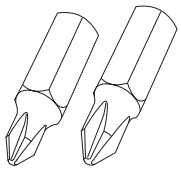


Phillips Bits
(#2, #3)

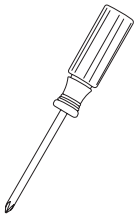


Phillips Screw Driver

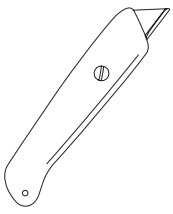


Utility Knife

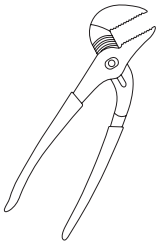


Channel Locks

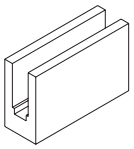


Rigid Seal Alignment Tool

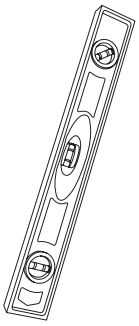


Level
(2', 4' and 6')

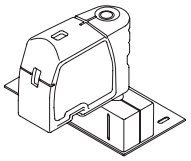


Laser Alignment Tool

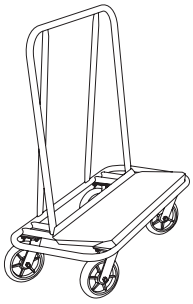


Padded Drywall Cart

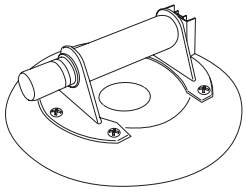

Woods Powr-Grip® N-Series
Vacuum Cup

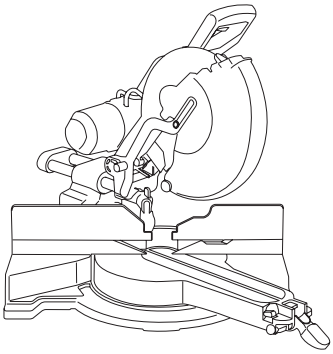

Miter Saw with Non-Ferrous Blade
Note: Cut station must be equipped with stands, tarps and a shop vac.

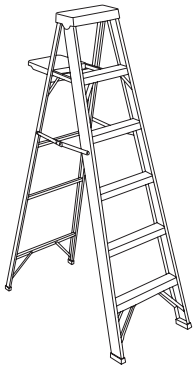


Ladder - OSHA approved
Note: Two ladders for every three persons doing install is required

Lightline® Architectural Walls - Parts Identification - Aluminum Extrusions


Assembly Instructions

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.




Horizontal Ceiling Trim
(50.1088)



3¼" Horizontal Floor Trim
(50.1085)



4" Horizontal Floor Trim
(50.1087)

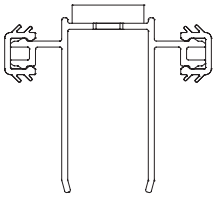


Ceiling Rail
(50.1095)




½" Angled Panel Glazing Seal Extrusion
(50.1708)

CAUTION


Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.



End Post - Butt Glass
(50.1121)




Inline Genius to Butt Glass Post
(50.1117)

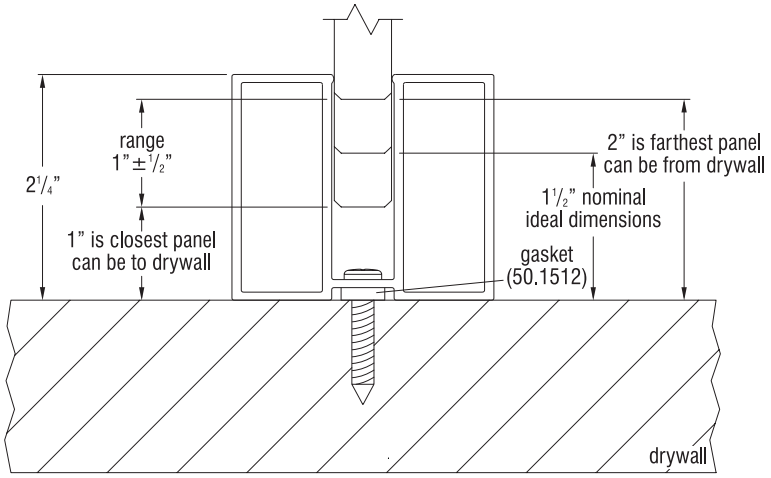


2¼" Wall Start Post
(50.1669)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

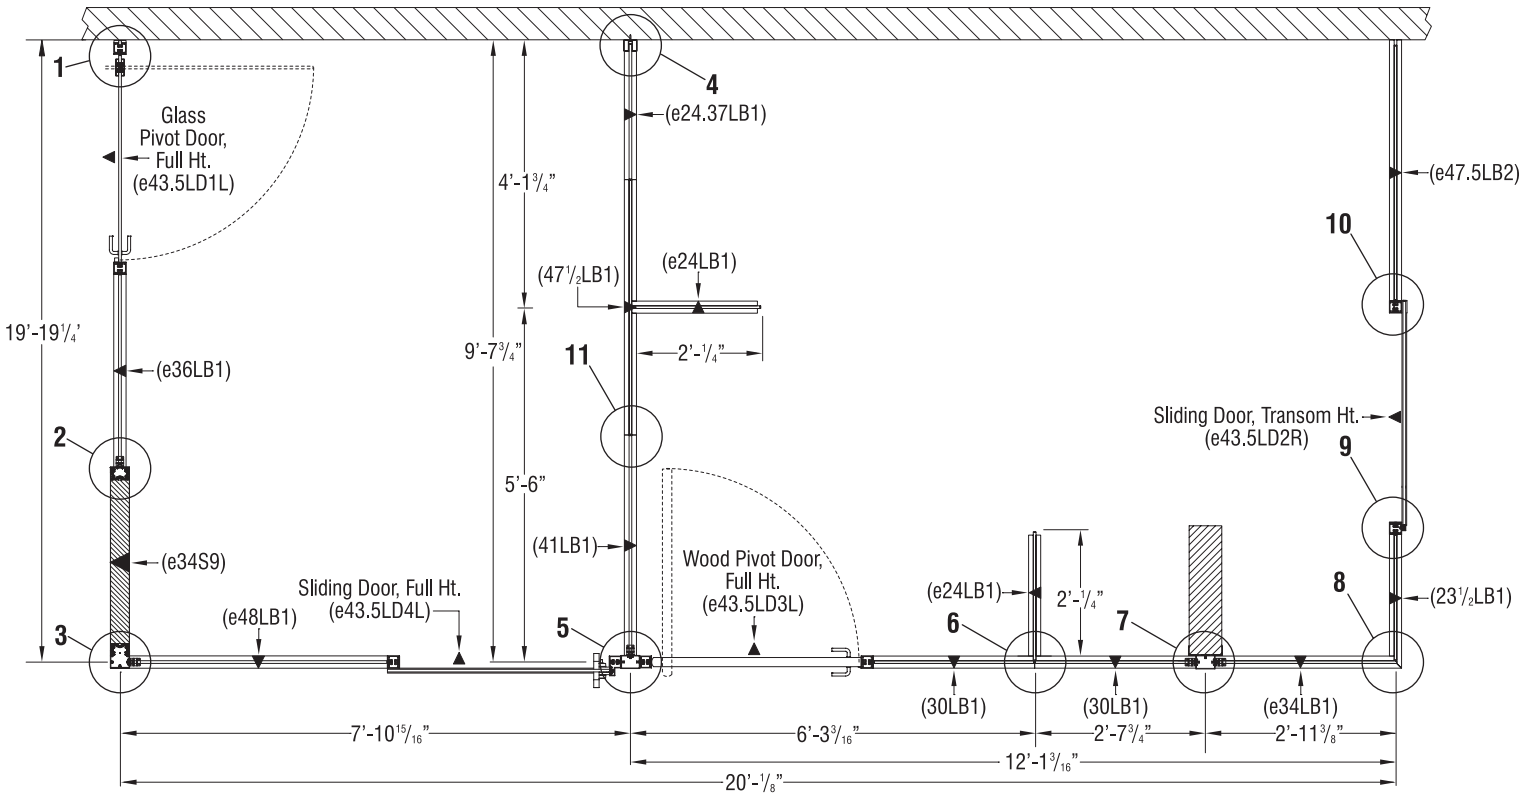


Layout Typical - Plan View

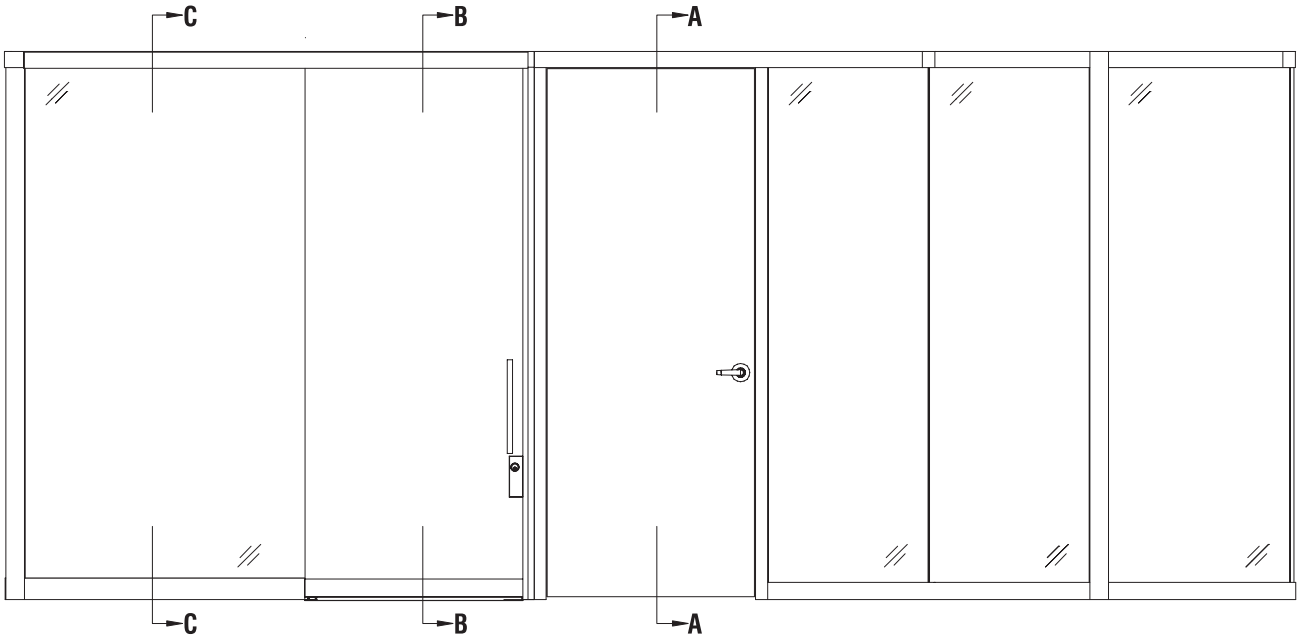

Layout Typical - Elevation View


CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

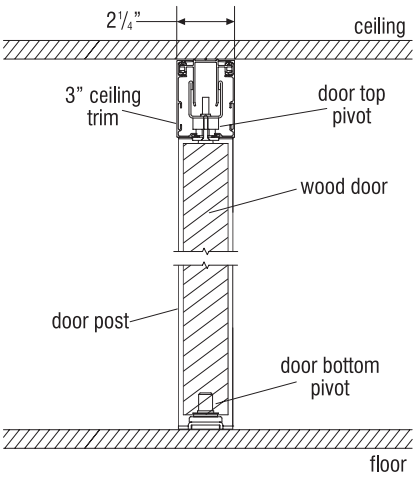


Full-Height
Wood Pivot Door

A

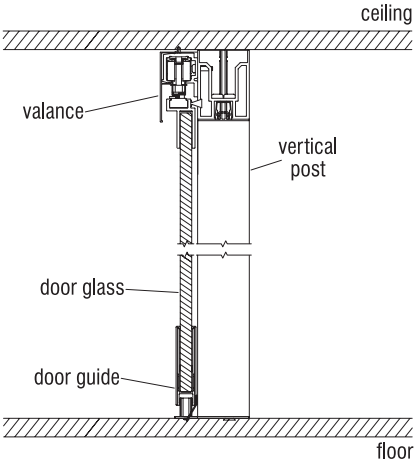


Full-Height
Sliding Door

B

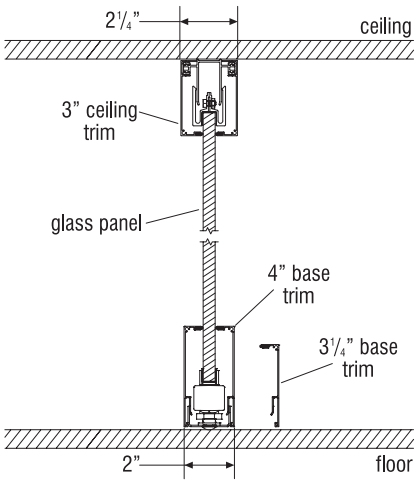


Glass Panel,
Ceiling & Base Trim

C

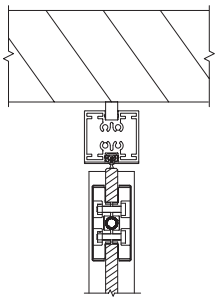


Lightline
Pivot Door

1




Lightline
to Genius

2

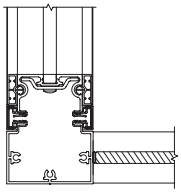


Genius to Lightline
90° Angle Post

3

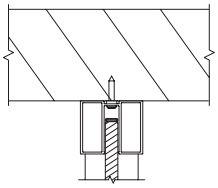


Lightline
to Drywall

4

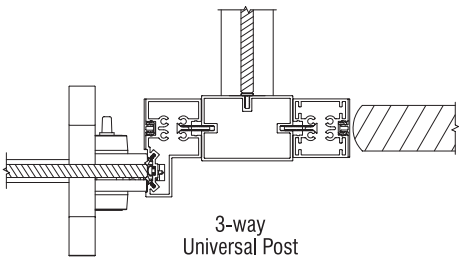


3-way
Universal Post

5

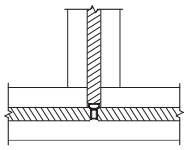


3-way
Panel Intersection

6

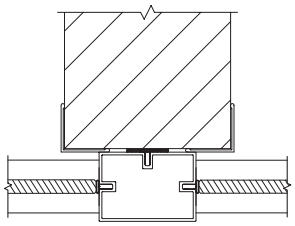


Universal Post
to Drywall

7




Lightline
Corner

8




Sliding Door
Stop

9



Lightline Glass
Sliding Door Guide
(at floor)

10



Lightline Glass
In-Line Connection

11

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Ceiling Rail Installation

1. Many ceiling grids accept standard 9/16" and 15/16" wide Caddy® style ceiling clips. When ceiling clips are used in a recessed grid, spring spacers and closed cell foam must be used. Use backer plates by KI to prevent scratching of the grid (Figure 1). Fineline® 9/16" grids with a 1/4" reveal use 1/4 -20 T-bolts and 9/16" grids with a 1/8" reveal use 1/8 -20 T-bolts (Figure 2). Drywall and hidden grid ceilings require direct attachment of the rail with screws or anchors (Figure 2).

   Note: A ceiling rail layout must be completed to verify fit of Lightline components. Ceiling rail must be securely in place before positioning the various components. Accurate installation of ceiling rail per the final KI Installation Drawings (shop prints) is critical to a satisfactory installation. If any discrepancies exist, please contact your KI project coordinator.

2. Using the final KI Installation Drawings (shop prints) for reference and working in teams of two, fasten the ceiling rail hardware to the ceiling grid securely. For 15/16" grids, install the backer plate inside the clip, then twist the clip onto the grid. If the ceiling rail is recessed, add in the spacer and/or shims as needed. For Fineline 9/16" grids, slide the T-bolt into the grid and install the washer and nut to secure the T-bolt into position (Figures 2 & 4).

   Caution: Do not over tighten ceiling clips, screws or anchors. Only install with hand drivers.

3. On drywall and hidden grid ceilings, mark location of channel centerline or edge.

4. On straight runs, the ceiling rail is spliced with factory installed black plastic molding clips and the in-line splice plate. First, slide on two moulding clips to cover both sides of the seam. Next, attach the in-line splice plate to the ceiling rails using four #10-16 x ½" self-drilling Torx head screws (Figure 3). Refer to "Ceiling Corner Brackets" instructions (page 13) for assembly of corner conditions.

5. Measure from wall, column or other starting point to the first attachment point. Cut ceiling rail accordingly so that the slots in the rail match the grid layout (Figure 4).

6. After positioning and securing the ceiling rail with flanged lock nuts (Figures 2 & 5), ensure that it cannot slide, does not push up ceiling tiles and that there are no light gaps between the ceiling and rail. Once the panels are up, adjustments to the ceiling rail location cannot be made without removing the panels.

7. Check fit and strength. Verify accuracy of all measurements. Plumb-bob down for panel centerline and snap chalk lines. Or, you may plumb panels later using a level as they are connected.

   Note: If ceiling is not stable, reinforcement may be necessary through use of suitable materials above the tiles. This work is not included in the installation bid.

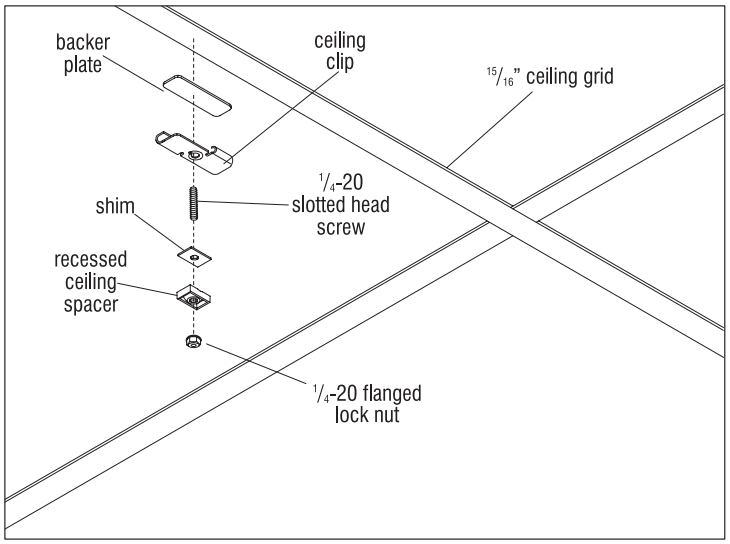


Figure 1 - 9/16" Ceiling Grid with Caddy Clips

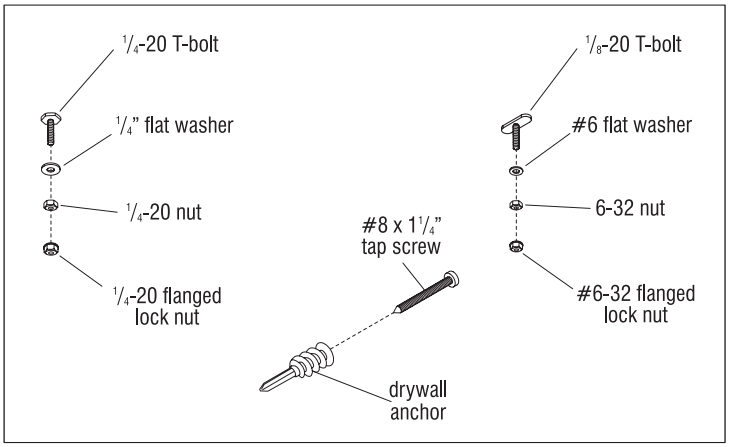


Figure 2 - Types of T-bolts & Anchor Assemblies

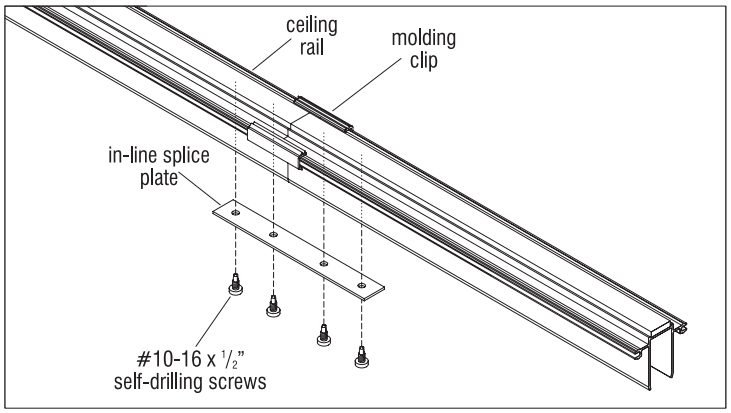


Figure 3

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

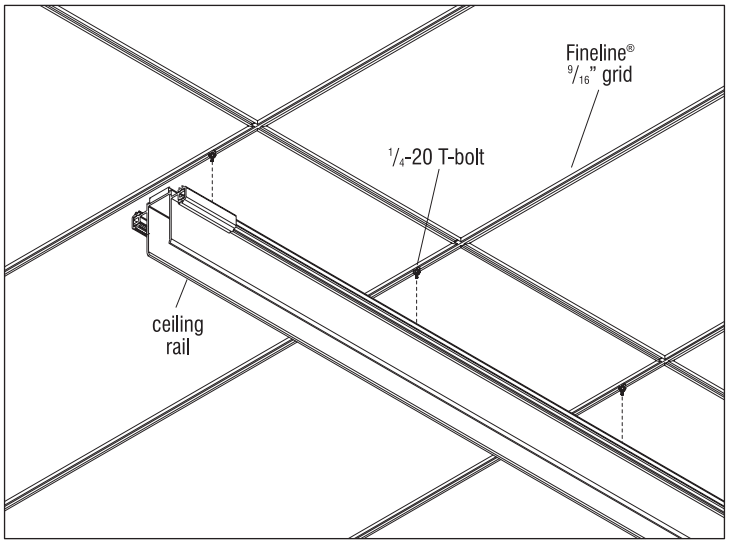


Figure 4

8. Ceiling rail end-of-run conditions can be secured to intersecting walls with the ceiling rail end bracket kit. Using the #10-16 x ½" self-drilling Torx head screws supplied with the kit, secure the U-shaped end bracket to the ceiling rail (Figure 6). If attaching to door frame at corner see step 10.

9. If attaching to drywall, use the supplied #8 x 1¼" tap screws, drywall anchors and secure the ceiling rail with bracket to the drywall (Figure 7).

10. Align ceiling rail so trim sits flush when installed. Use the supplied #10-16 x ½" self-drilling screws to attach the ceiling rail to the door frame header (Figure 8).

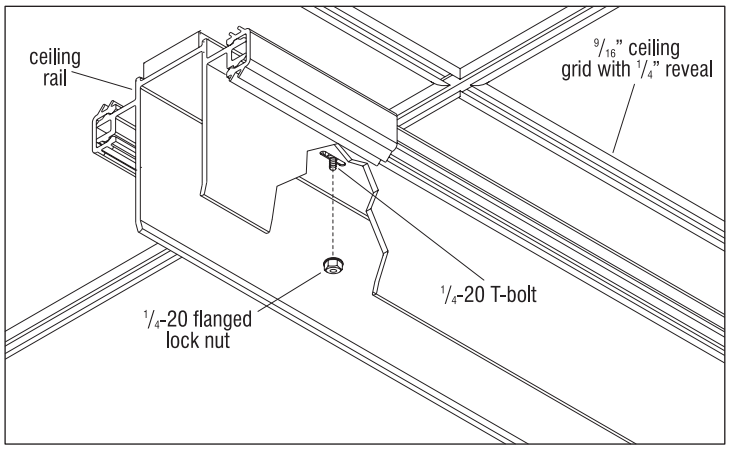


Figure 5

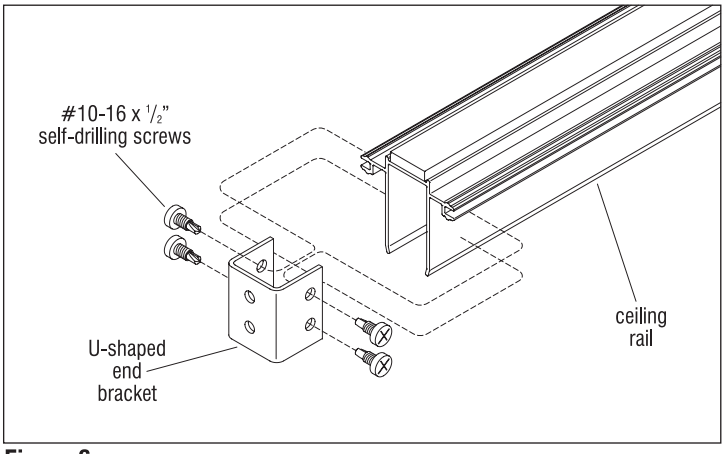


Figure 6

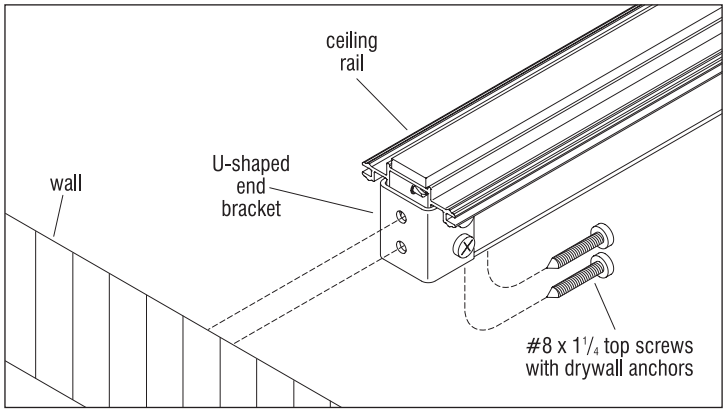


Figure 7

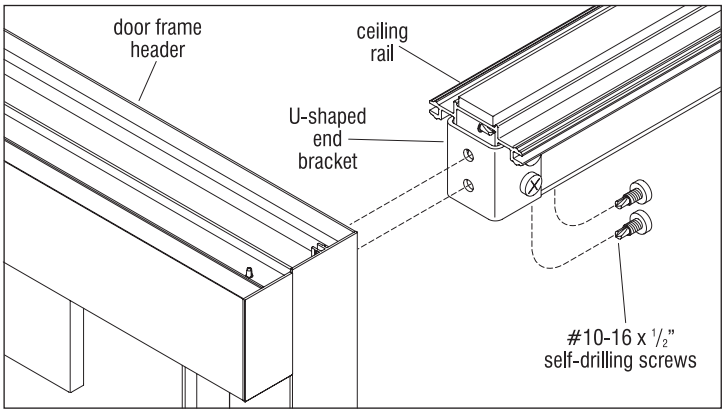


Figure 8

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Seismic Conditions
Due to the varied seismic conditions around the world, please refer to KI seismic documents, site specific documents, or final KI-Installation Drawings (shop prints) for information.

Lightline is a custom product and additional technical information may be required. For additional information please contact:

KI
P.O. Box 8100
Green Bay, WI 54308-8100
Tel (800) 424-2432
Fax (920) 468-2743
www.ki.com

Removable Ceiling Grid Clips
Removable ceiling grid clips are used to temporarily attach the ceiling rail to the ceiling grid until seismic bracing assemblies are installed.

See Final KI-Installation Drawings for approved floor and ceiling anchorage details. Approval can vary by jurisdiction.

Note: Four kit types are available for various ceiling grid and ceiling tile applications

- 50.1661 - Used on $^{3}/_{8}$" drop reveal tile with $^{15}/_{16}$" ceiling grid
- 50.1663 - Used on $^{3}/_{8}$" drop reveal tile with $^{9}/_{16}$" ceiling grid
- 50.1665 - Used on $^{1}/_{4}$" drop reveal tile with $^{9}/_{16}$" or $^{15}/_{16}$" ceiling grid
- 50.1667 - Used on a flat ceiling tile with $^{9}/_{16}$" or $^{15}/_{16}$" ceiling grid

Note: Shimming of the ceiling rail may be required. Use appropriate ceiling clip kit for proper fitment.

1. Place the clip over the top of the main ceiling grid (Figure 1).

   Caution: Do not screw up through the ceiling grid. Always screw from the top to allow the clip to be removed if required, after panels are installed.

2. Secure clip to ceiling rail using two #10-16 x ¾" self-drilling screws (Figures 2 & 3).

3. Secure clip to ceiling grid using one #10-16 x ¾" self-drilling screw (Figures 2 & 3).

4. Repeat the installation procedure to install the remaining clips as required.

5. Once ceiling rail and clips are in place, see KI Installation Drawings for Approved Seismic Bracing Design and the following Seismic Bracing Assembly Instructions.

6. Clips need to be removed once seismic bracing assemblies are installed.

Seismic Bracing
Note: Two different seismic brackets are available, an in-plane and out-of-plane seismic brackets. Removable ceiling grid clips can be used to temporarily hold the ceiling rail in place until the seismic brackets are installed. Ceiling grid clips must be removed once seismic brackets are installed.

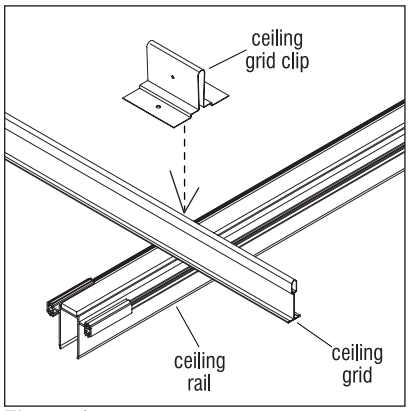


Figure 1

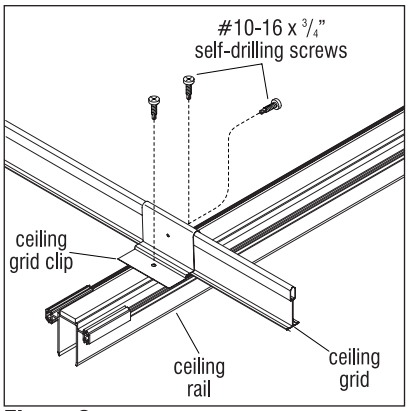


Figure 2

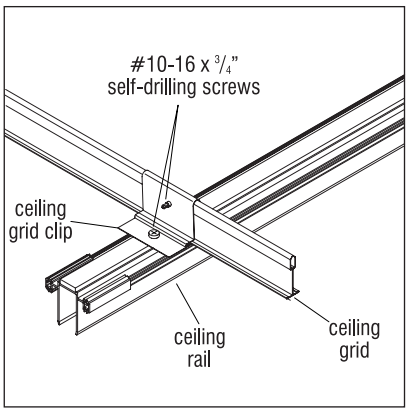


Figure 3

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


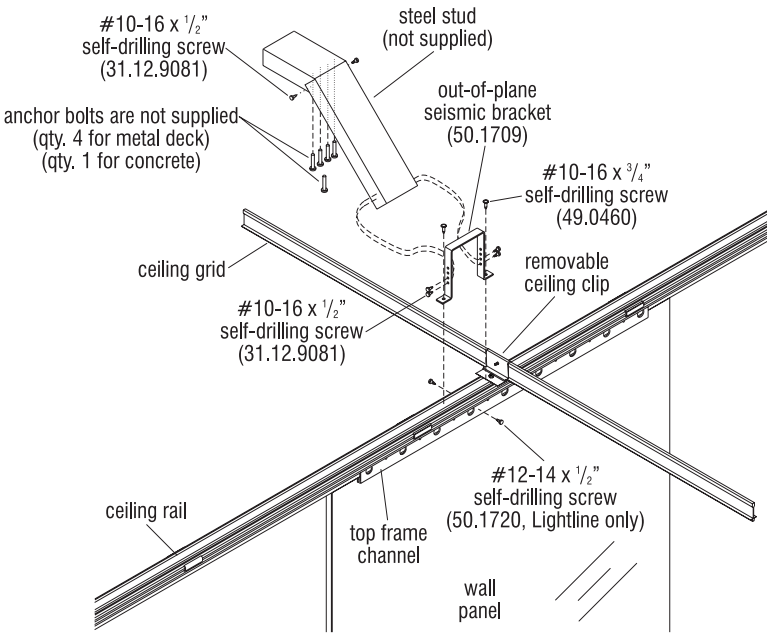


Figure 1 - Out-Of-Plane Seismic Bracing Assembly

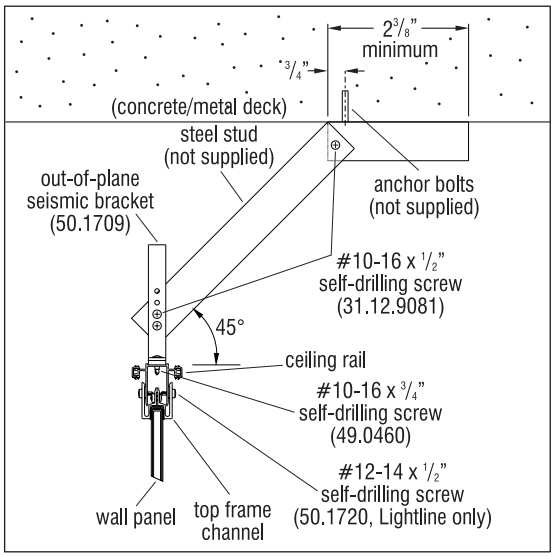

Detail A

Out-of-Plane Seismic Bracing
Note: Steel studs and anchor bolts are not supplied.

1. Take an appropriate length (final length will be trimmed down precisely in step 3) steel stud section in hand, measure a $2\frac{3}{8}$" minimum length off one end, snip the flange at both sides, then bend the stud section, hinging it inward as illustrated, allowing the flanges to fold over (Figure 1 & Detail A).
2. With the assistance of a second person, align and install the steel stud to the underside of the concrete or metal deck ceiling using appropriate anchoring hardware. Four anchors (metal deck) or one anchor (concrete) should be installed $\frac{3}{4}$" back from the bend, following manufacturer's installation instructions (Figure 1 & Detail A).
3. Perform a dry-fit of the ceiling installed steel stud section, bent down to the location of the out-of-plane seismic bracket (50.1709) held in position on the panel ceiling rail. The steel stud must meet the out-of-plane seismic bracket to be at a 45° angle off the ceiling rail as illustrated. Trim the steel stud to size and trim corners from the flanges near the ceiling rail as required for correct fitment (Figure 1 & Detail A).
4. Secure the out-of-plane seismic bracket to the top of the panel ceiling rail using two #10-16 x $\frac{3}{4}$" self-drilling screws (49.0460) (Figure 1 & Detail A).
5. Make final alignment of steel stud end to mounted out-of-plane seismic bracket and secure stud to bracket using four #10-16 x $\frac{1}{2}$" self-drilling screws (31.12.9081) (Figure 1 & Detail A).
6. At the top bend of the steel stud, install two #10-16 x $\frac{1}{2}$" self-drilling screws (31.12.9081) into the overlapping flanges to secure as illustrated (Figure 1 & Detail A).
7. For Lightline panels only, install two #12-14 x $\frac{1}{2}$" self-drilling screws (50.1720) directly under each out-of-plane seismic bracket to secure the top frame channel of the panel frame to the ceiling rail (Figure 1 & Detail A).
8. Repeat the procedures above to install the remaining out-of-plane seismic brackets where required.
9. Remove seismic ceiling clips as required by local codes (Figure 1).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

In-Plane Seismic Bracing
Note: Steel studs and anchor bolts are not supplied.

1. Take an appropriate length (final length will be trimmed down precisely in step 3) steel stud section in hand, measure a 2 3/8" minimum length off one end, snip the flange at both sides, then bend the stud section, hinging it inward as illustrated, allowing the flanges to fold over (Figure 2 & Detail B).

2. With the assistance of a second person, align and install the steel stud to the underside of the concrete or metal deck ceiling using appropriate anchoring hardware. Four anchors (metal deck) or one anchor (concrete) should be installed 3/4" back from the bend, following manufacturer's installation instructions (Figure 2 & Detail B).

3. Perform a dry-fit of the ceiling installed steel stud section, bent down to the location of the in-plane seismic bracket (50.1715) held in position on the panel ceiling rail. The steel stud must meet the in-plane seismic bracket to be at a 45° angle off the ceiling rail as illustrated. Trim the steel stud to size and trim corners from the flanges near the ceiling rail as required for correct fitment (Figure 2 & Detail B).

4. Align the in-plane seismic bracket to the steel stud and secure the in-plane seismic bracket to the top of the panel ceiling rail using two #10-16 x 3/4" self-drilling screws (46.0460) (Figure 2 & Detail B).

5. Position the hanging steel stud onto the mounted in-plane seismic bracket and secure stud to bracket using four #10-16 x 1/2" self-drilling screws (31.12.9081) (Figure 2 & Detail B).

6. At the top bend of the steel stud, install two #10-16 x 1/2" self-drilling screws (31.12.9081) into the overlapping flanges to secure as illustrated (Figure 2 & Detail B).

7. For Lightline panels only, install two #12-14 x 1/2" self-drilling screws (50.1720) directly under each in-plane seismic bracket to secure the top frame channel of the panel frame to the ceiling rail (Figure 2 & Detail B).

8. Repeat the procedures above to install the remaining in-plane seismic brackets where required.

9. Remove seismic ceiling clips as required by local codes (Figure 2).


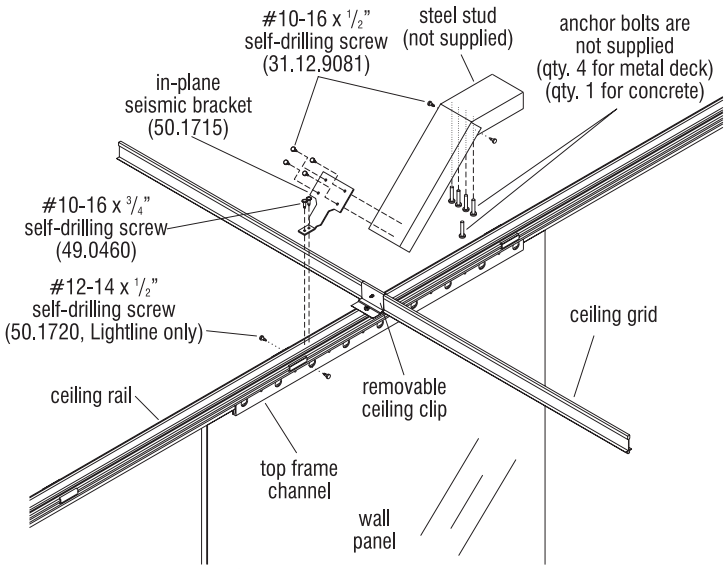


Figure 2 - In-Plane Seismic Bracing Assembly

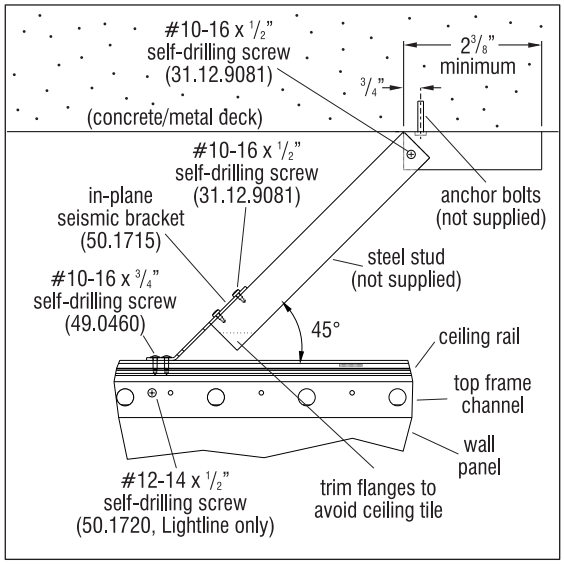

Detail B

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

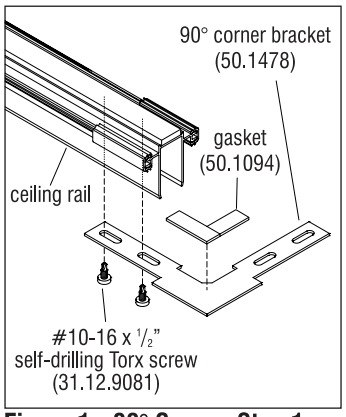


Figure 1 - 90° Corner, Step 1

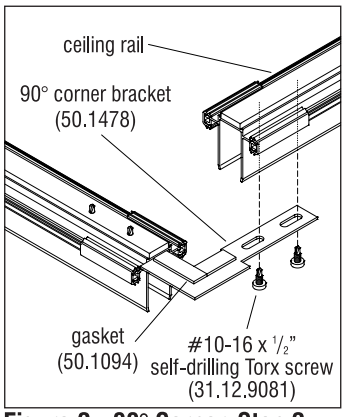


Figure 2 - 90° Corner, Step 2

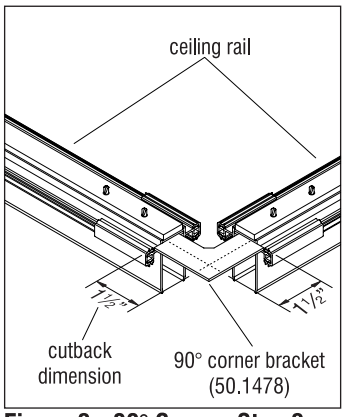


Figure 3 - 90° Corner, Step 3
Note: Gasket not shown so that cutback dimension can be visible.

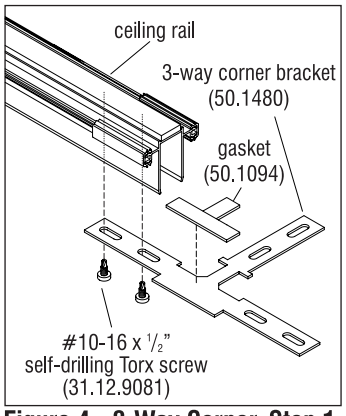


Figure 4 - 3-Way Corner, Step 1

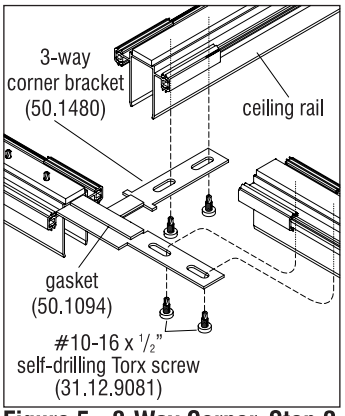


Figure 5 - 3-Way Corner, Step 2

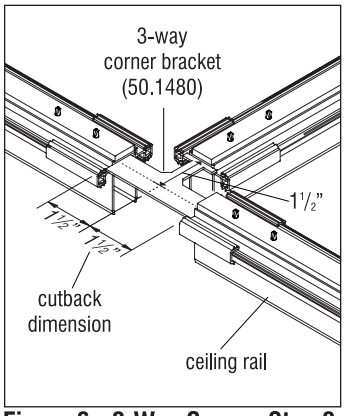


Figure 6 - 3-Way Corner, Step 3
Note: Gasket not shown so that cutback dimension can be visible.

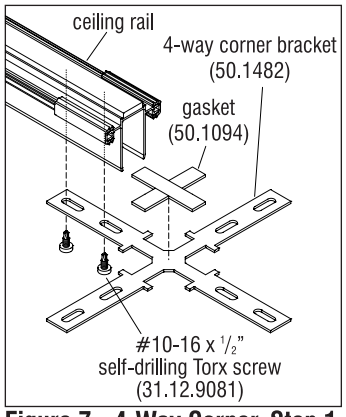


Figure 7 - 4-Way Corner, Step 1

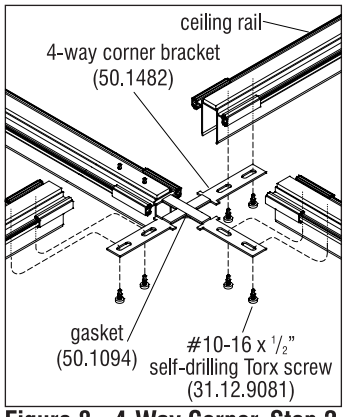


Figure 8 - 4-Way Corner, Step 2

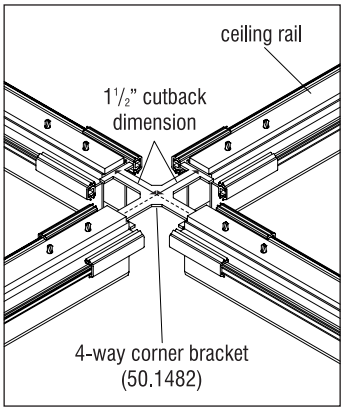


Figure 9 - 4-Way Corner, Step 3
Note: Gasket not shown so that cutback dimension can be visible.

Ceiling Corner Brackets
The figures on this page show the installation process of different ceiling corner brackets.

Note: The splice kits will create the proper offset dimension for correct ceiling rail installation.

1. Ceiling rail 90° corner conditions are spliced using the 50.1479 splice kit (includes corner bracket 50.1478) (Figures 1, 2 & 3).
2. Ceiling rail 3-way conditions are spliced using the 50.1481 splice kit (includes corner bracket 50.1480) (Figures 4, 5 & 6).
3. Ceiling rail 4-way conditions are spliced using the 50.1483 splice kit (includes corner bracket 50.1482) (Figures 7, 8 & 9).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Unloading

Warning: Shipping skids are designed to be moved with a pallet jack or slid along the floor using a fork lift. If no dock available to remove the skid at grade with the bed of the trailer, the panels must be unloaded by hand one at a time. FAILURE TO COMPLY MAY RESULT IN DAMAGED PRODUCTS AND/OR INJURY.

1. It's highly recommended that the panels be staged with factory edge protectors on and other protection between the panels. Lean panels vertically against a wall at a slight angle. If panels must be leaned on edge, no more than 12 panels of like size should be in one leaning stack. Stack panels with padding against the wall or on floor to prevent damage.

2. As each Lightline panel or component is unloaded, it should be checked against the packing list and/or drawing to ensure completeness of order. All items are identified by both a part number sticker and a carton number sticker.

3. Use panel hooks enclosed in one of the component boxes to lift panels from skid or truck. Inspect each panel for shipping damage as it is removed from the truck. If damage exists, notify KI of carton number, type of damage and probable cause of damage within 24 hours of unloading. Full product information is located on KI labels on the floor channel.

4. **Damage must be indicated on bill of lading to file a freight claim. Report all other on-site damage as soon as possible to ensure prompt replacements. To transport panels on site, use a well-padded drywall cart to eliminate damage of edges and of glass.**

5. It is recommended to install the ceiling channel and clips ahead of the panel/frame delivery. This allows the panels/frames to move directly from the truck to the office location and alleviates double handling.



CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


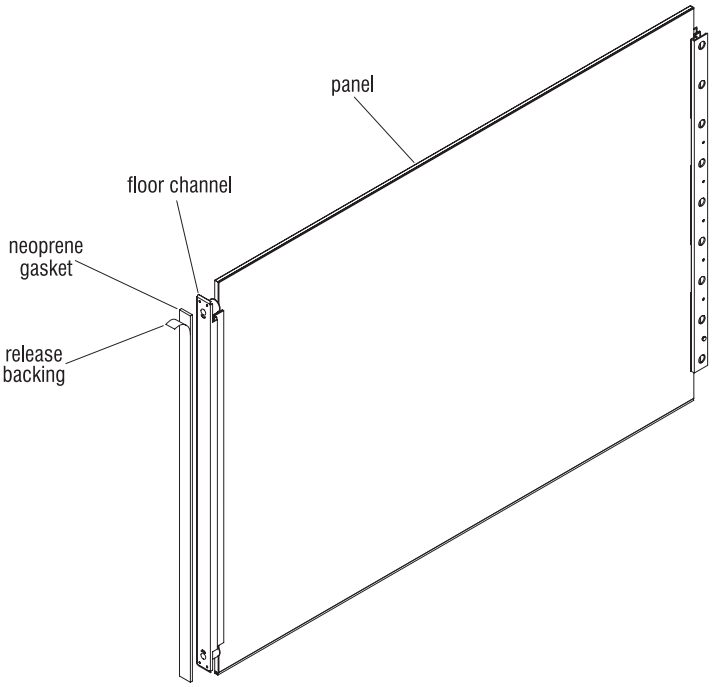


Figure 1

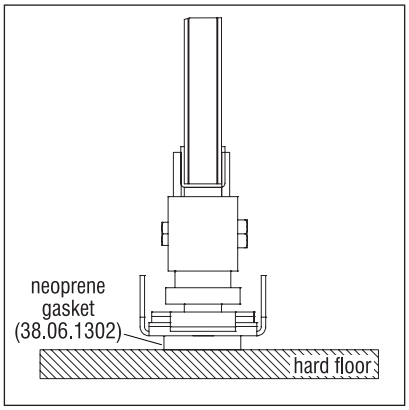

Detail A - Hard Floor Gasket

Panel Installation on Hard Floor

Note: It may be necessary to mechanically attach the floor channel to the floor to meet local codes.

Note: When Lightline is installed onto hard floors, neoprene gasket must be installed to the bottom of the floor channel to prevent slipping. Gasket material ships in 50' rolls (part # 38.06.1302).

1. If at all possible, position panel near the final installation location.
2. With the panel on edge, begin by attaching the neoprene gasket from the 50' roll, to the bottom center of the floor channel (Figure 1).
3. Attach the gasket centered, onto the full length of the floor channel (Figure 1 & Detail A).
4. Press firmly along the entire length of the channel, then trim gasket with a utility knife at the end of the floor channel (Figure 1).
5. Finish gasket application process by removing the release backing (Figure 1).
6. Take care when positioning the panel so the gasket does not get damaged or removed.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Door Post To Drywall Connection

Note: In addition to the standard door frame, a door post to drywall kit is provided when a door frame starts directly from drywall. The bottom end of the frame that the kit is attached to must be cut 1/16" shorter to make room for the attachment plate at the bottom of the post (Figure 1).

1. Start by removing the outer center cap (not shown) from the frame that butts up to the drywall. This can be put into stock because it will not be needed in this condition (Figure 1).

2. **Make sure the frame bottom is cut 1/16" shorter before installing the attachment plate.** Screw the attachment plate (50.1390) to the bottom of the door post using two 1/4-20 x 1 1/2" self-tapping screws (12.2709) (Figure 1).

3. Next, apply gasket (50.1332) into the groove in the post where the outer center cap was removed (Figure 1).

4. Remove the inner center cap from the door post. Stand the door frame following the instructions for that frame. Install a #10-24 x 3/8" carpet gripper screw (31.12.9070) into the attachment plate hole visible inside the groove in the post (Figure 1).

5. Cut a notch in the fins of the removed inner center cap, which will interfere with the carpet gripper screw head. Reinstall the notched inner center cap (Figure 1).

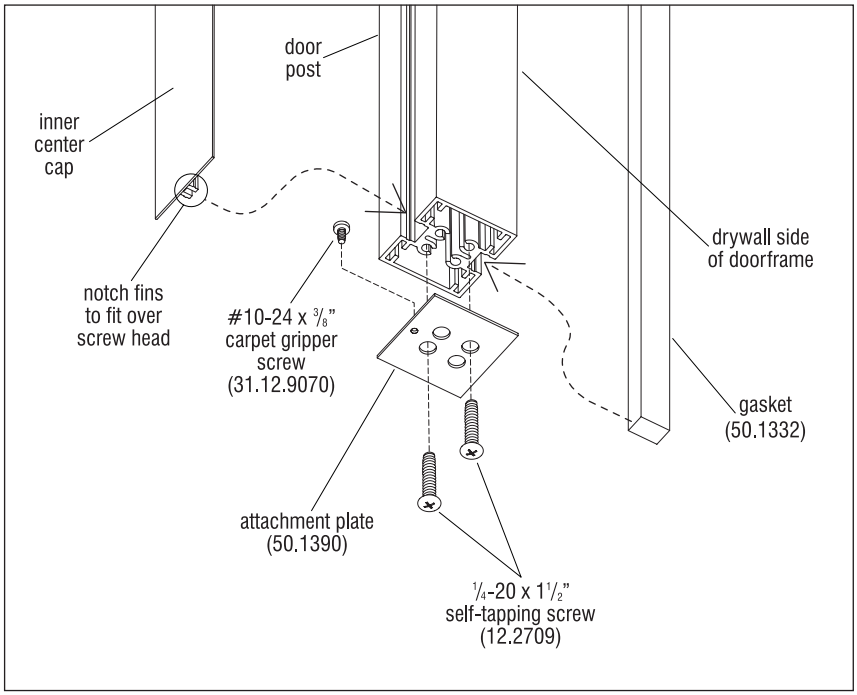


Figure 1 - Door Post To Drywall Connection

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

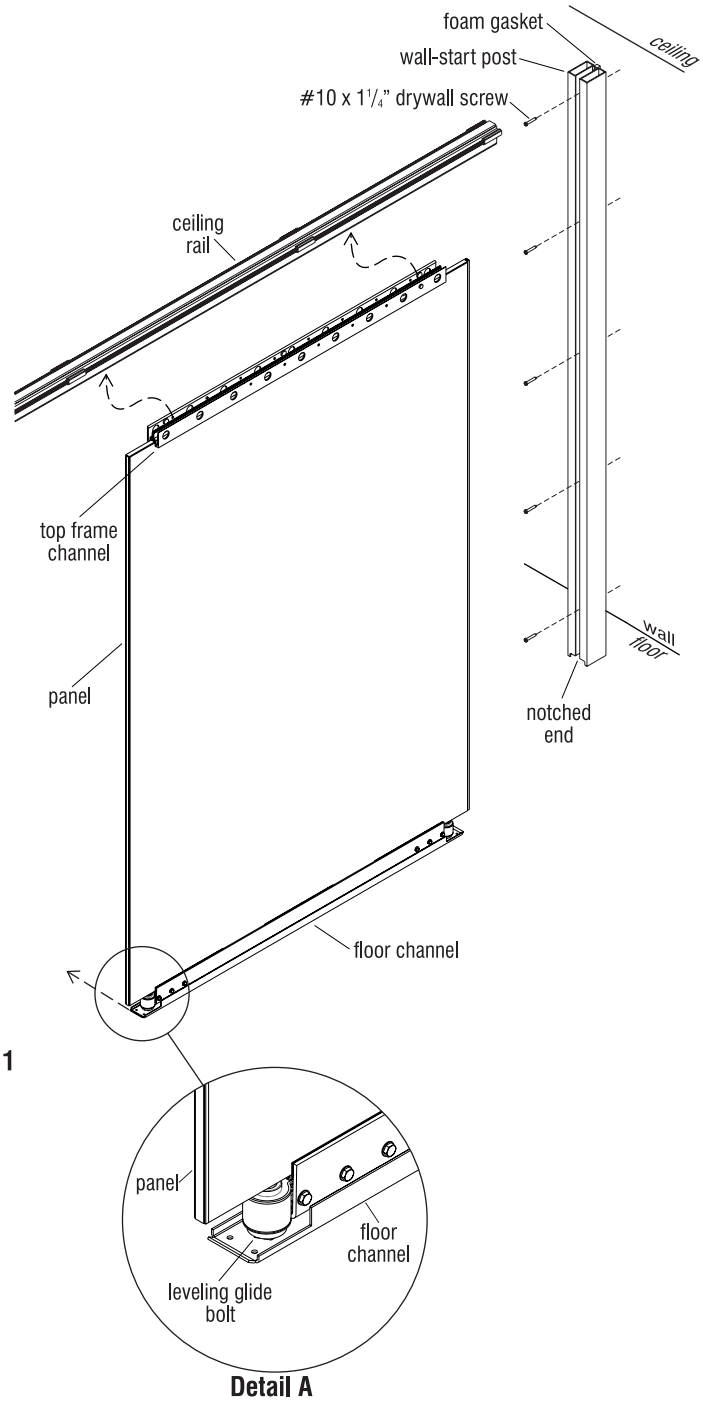


Figure 1

Detail A

Wall Mounted Glass Panels

1. Measure from the ceiling to the floor along the wall, making allowance for how far the wall-start post will sink into the carpet.

2. Transfer the measurement to the wall-start post and cut the post to size at the end opposite the "notched end" (Figure 1).

3. Position the wall-start post plum against the wall, with the foam gasket side against the wall and the notch end at the floor. Secure using five drywall screws evenly spaced (Figure 1).

Positioning Glass Panels

Note: To save time and space, move all panels into installation sequence. If possible, do this as the panels are unloaded from the truck, eliminating double handling and potential damage.

Caution: Prior to placing any panels into position, first verify that both the top frame and floor channels are firmly attached to the glass panel. If not, re-tighten the mounting screws (Figure 1).

Note: Make sure the leveling glide bolt is loose on each end before standing the panel into position (Detail A).

4. With the assistance of a second person, using rubber suction disks, stand the panel on its base and slightly inclined (Figure 1).

5. Holding the panel securely, lift the panel into position underneath the ceiling rail first, then plumb the panel to the wall-start and prepare to nest it into the wall-start post (step 6, page 18) (Figure 1).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Wall-Mounted Glass Panels (cont.)

6. To mount the glass panel against a wall-start post, position glass panel into the notch in the post (Figure 2, Details B & C). Adjust the position of the glass panel as needed (Detail D).

7. Continue setting panels into position following appropriate instructions in this manual (as in pages 19 through 24).

8. Follow "Panel Height Adjustment" instructions on page 19. Once all panels are in position and plumb, secure each panel to the ceiling rail using two #8-18 x 1/2" Tek screws (49.0587), one screw on each side of the top frame channel (Figure 2).


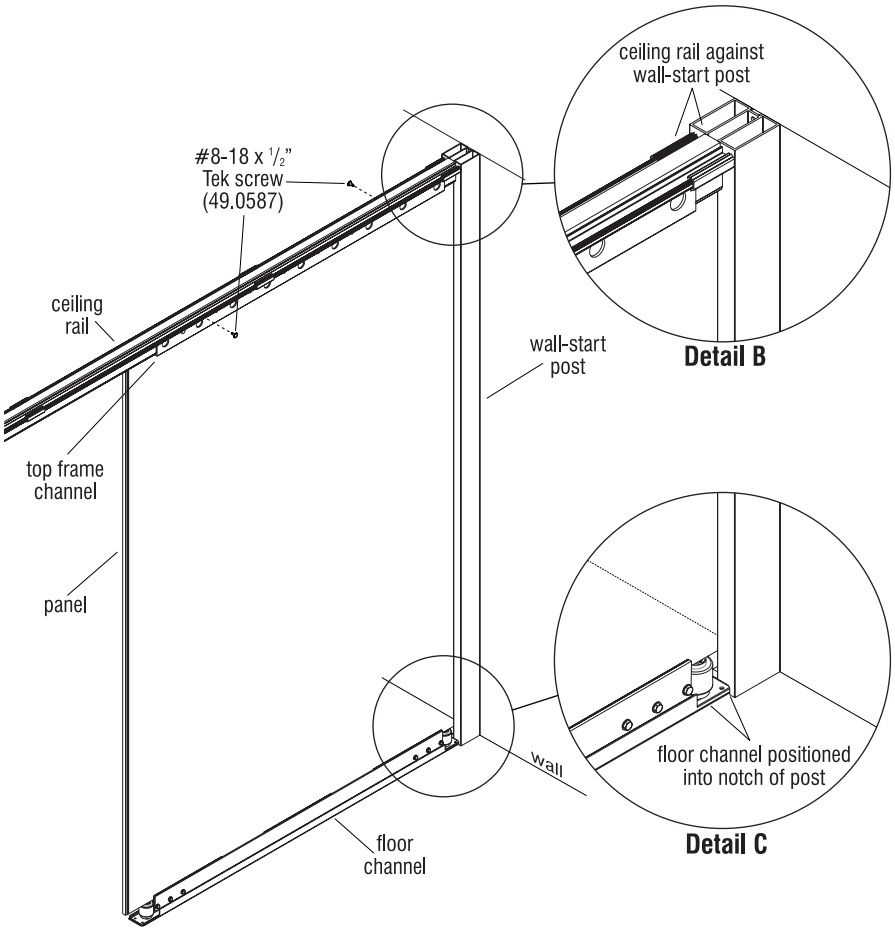


Figure 2

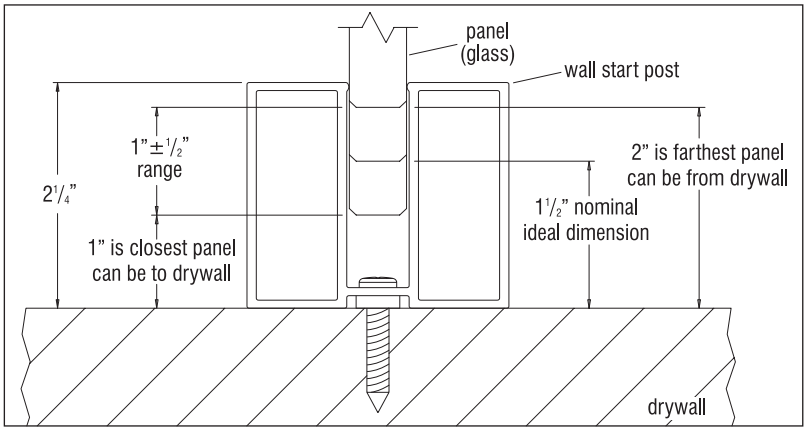

Detail D

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

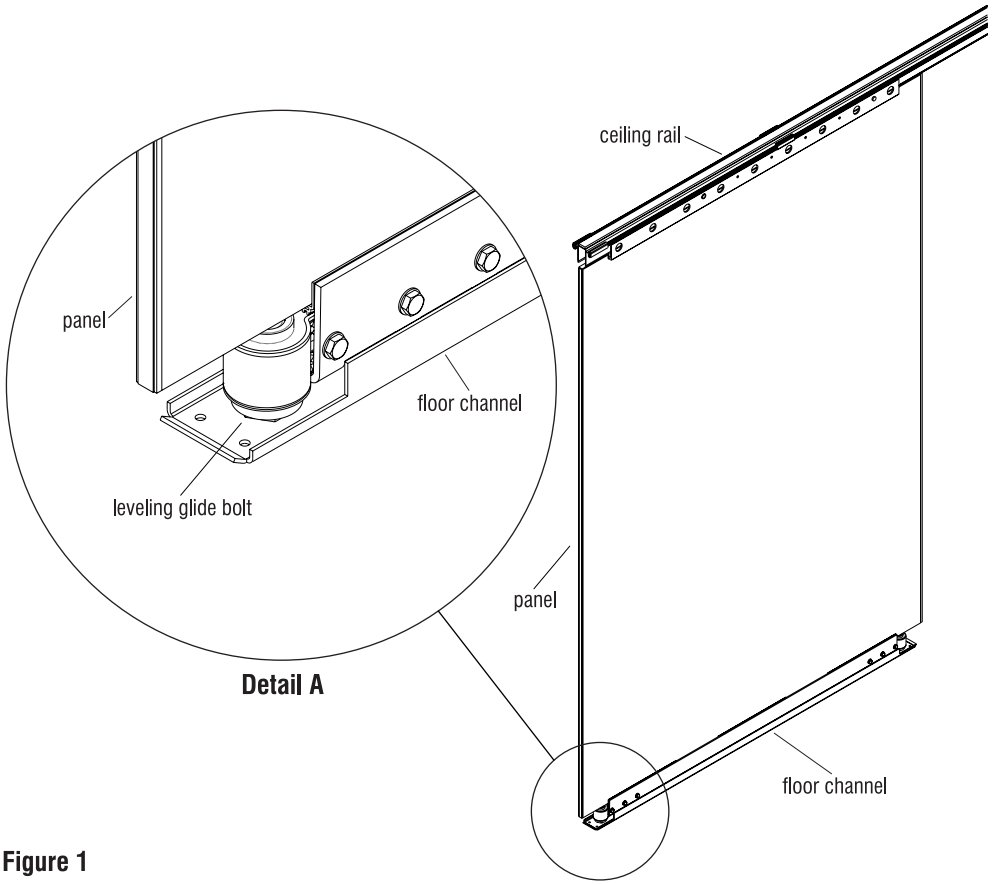


Figure 1

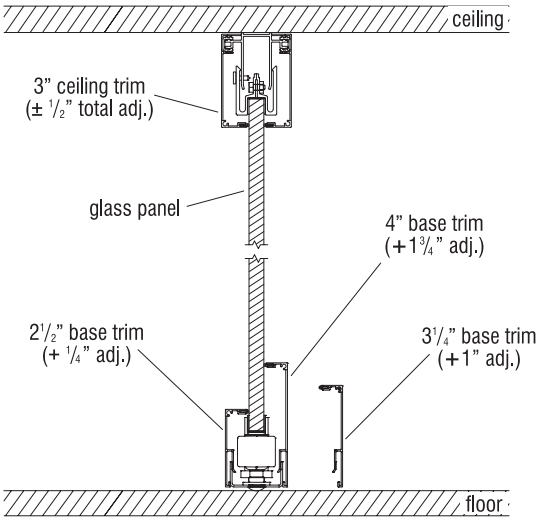


Figure 2 - Base Trim & Ceiling Adjustment

Panel Height Adjustment

Note: Make sure the leveling glide bolt is loose on each end before standing the panel up to position (Detail A).

1. Using pliers or a channel lock, readjust the level and height of the panel as required by turning the leveling glide bolts at both ends of the floor channel (Figure 1 & Detail A).

2. Ensure that panels are properly plumb by leveling in both the horizontal and vertical directions (Figure 2).

3. After the first panel is positioned and leveled, subsequent adjustment can be made visually by aligning adjacent panels to the first leveled panel.

   Important: Figure 2 shows the maximum adjustment using different available base trim sizes.

4. As panel heights are adjusted, periodically use a test section of ceiling and base trim to confirm that heights are within adjustment limits for the base and ceiling trim of the specific job site.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Glass-To-Glass Panel Joint Configurations

The figures on this page show the layout of different glass panel joints. Reference the appropriate instructions in pages to follow, to make appropriate panel connections

Important: All flexible and rigid seals must be properly cleaned just prior to installation. Using a clean, lint-free cloth with the supplied solution (SIlane Glase Treatment AP115), clean the seal(s) being installed to glass.

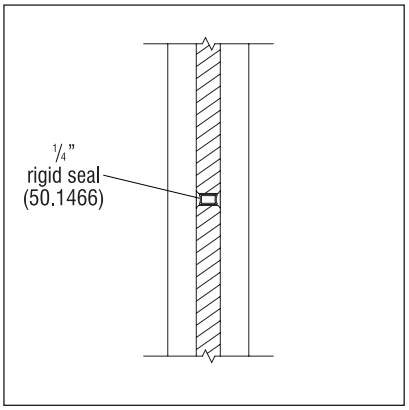


Figure 1 - In-line Connection (Page 21)

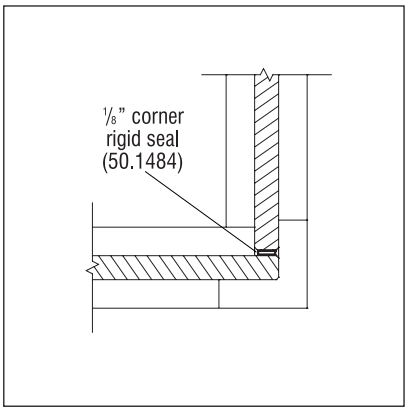


Figure 2 - Corner Connection (Page 22)

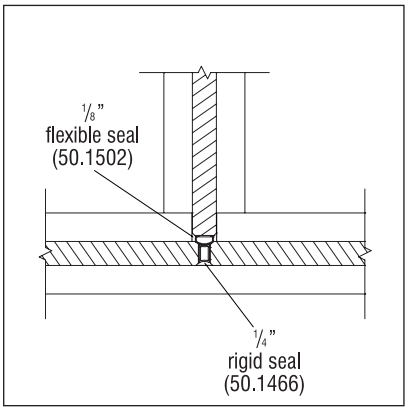


Figure 3 - 3-Way Connection (Page 23)

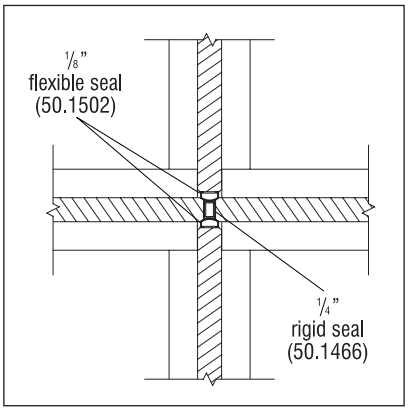


Figure 4 - 4-Way Connection (Page 24)

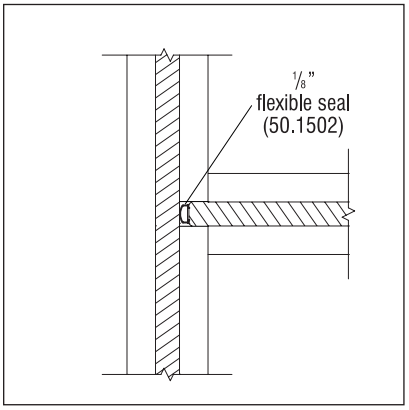


Figure 5 - Off Module 3-Way Connection (Page 25)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

In-line Panel Connection - Glazing Seal

Important: Follow the instructions in this manual (pages 8 through 20) to install the ceiling rails per the final KI-Installation Drawings.

As instructed below, it is important to stage, level and plumb the glass panels at their final installation location prior to connecting panels together with glazing seal.

Note: The glass panels come from the factory with adhesive tape pre-applied to both edges of the glass.

1. Remove the protective shipping channel from both panel edges to expose the tape. Stand and level the panels.
2. Slide one of the panels to the side, opening up the sealed joint to approximately 2" (Figure 1).
3. Dry-fit the 1/4" rigid seal (50.1466) between the glass by sliding the glass together and pinching the rigid seal between the glass panels. Make sure there are no gaps between the glass and the rigid seal (Figure 2). If there are gaps, re-level the panels.
4. Clean the 1/4" rigid seal (50.1466) using a clean, lint-free cloth with the supplied solution (Silane Glass Treatment AP115). Follow directions on the bottle.
5. Pull the panels back apart approximately 1/2". Remove the release backing from the tape on one edge of the glass (Figure 3).
6. Apply the 1/4" rigid seal (50.1466) to the tape using the rigid seal alignment tool (Figure 4).
7. Remove the release backing from the second piece of tape on the panel to be joined to. Align the pieces of glass and hold them in-plane with a large straight edge making sure that any bow in the glass does not make an uneven joint. Carefully slide the panels together to form a bond. Force the panels tightly together using suction cups and a clamp to fully nip the tape (Figure 5).
8. Follow the instructions in this manual to complete installing the panels, posts and trim.

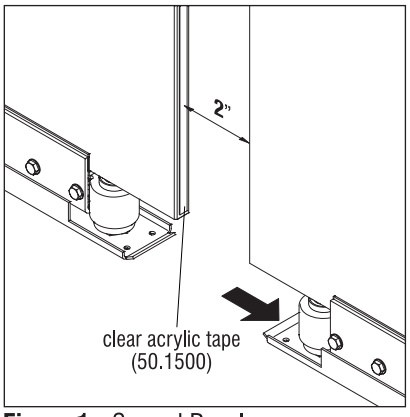


Figure 1 - Spread Panels

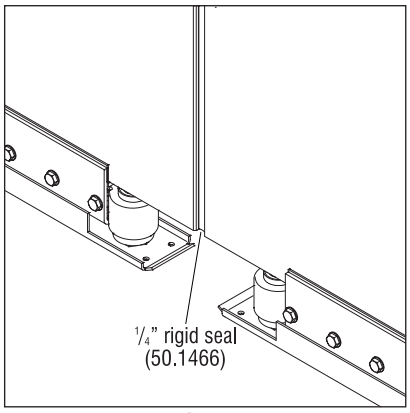


Figure 2 - Dry-fit Seal

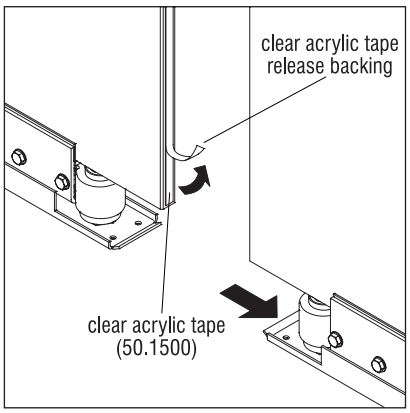


Figure 3 - Remove Release Backing

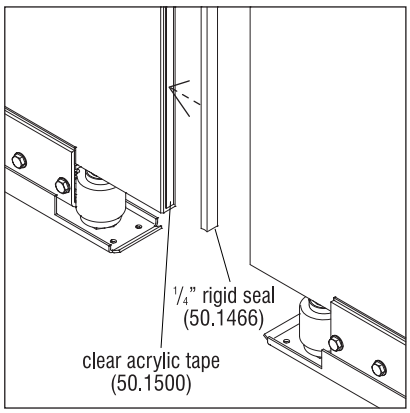


Figure 4 - Apply Rigid Seal

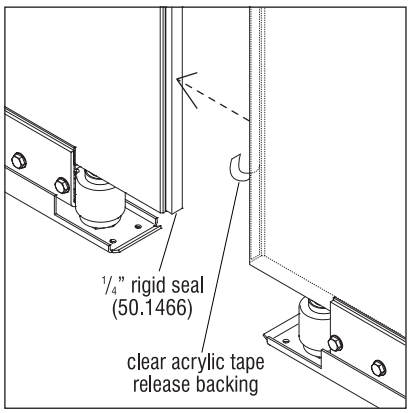


Figure 5 - Attach Panel

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Corner Panel Connection - Glazing Seal

Important: Follow the instructions in this manual (pages 8 through 20) to install the ceiling rails per the final KI-Installation Drawings. As instructed below, it is important to stage, level and plumb the glass panels at their final installation location prior to connecting panels together with glazing seal.

Note: The glass panels come from the factory with adhesive tape pre-applied to both edges of the glass.

1. Remove the protective shipping channel from both panel edges to expose the tape. Stand and level the panels.
2. Since the glass corner requires one panel to butt into the face of the other panel, the factory applied tape must be removed from the edge of the adjoining panel. This can be done with a plastic scrapper and a light oil or by using a decal eraser wheel (Whizzy Wheel®) and drill (Figure 1).
3. Using a clean, lint-free cloth with the supplied solution (Silane Glass Treatment AP115), clean the 1/8" corner rigid seal (50.1484) and the surface of the glass where the overlapping panel will contact to form the corner. Follow the directions on the bottle.
4. Dry-fit the 1/8" corner rigid seal (50.1484) between the glass by sliding the glass closer together and pinching the seal between the glass panels. Make sure there are no gaps between the glass and the rigid seal. If there are gaps, re-level the panels (Figure 2).
5. Apply clear acrylic tape to one side of the 1/8" corner rigid seal (50.1484) (Figure 3).
6. Move the butting panel back about 1/2". Remove the release backing from the tape on the butting panel edge (Figure 4).
7. Apply the 1/8" corner rigid seal (non-taped side) to the exposed tape on the butting panel edge using the seal alignment tool (Figure 4).
8. Remove the release backing from the 1/8" corner rigid seal which will butt to the adjoining panel. Align the pieces of glass and hold them in-plane with a large straight edge making sure that any bow in the glass does not make an uneven joint. Carefully slide the panels together to form a bond. Force the panels tightly together to fully nip the tape (Figure 5).
9. Follow the instructions in this manual to complete installing the panels, posts and trim.

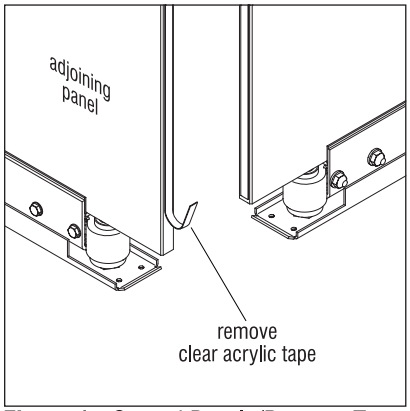


Figure 1 - Spread Panels/Remove Tape

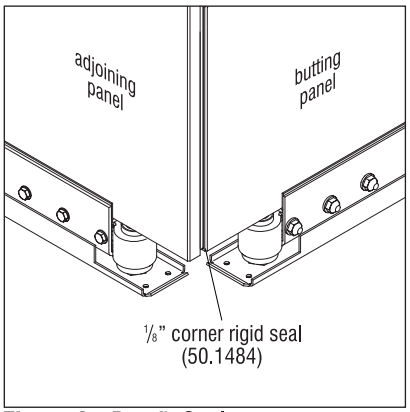


Figure 2 - Dry-fit Seal

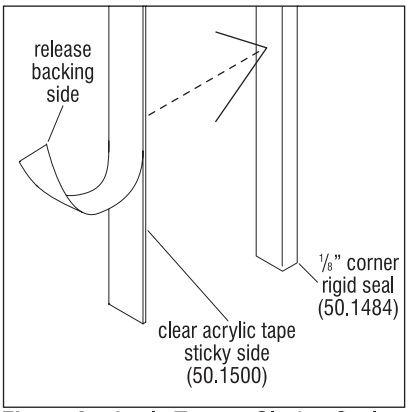


Figure 3 - Apply Tape to Glazing Seal

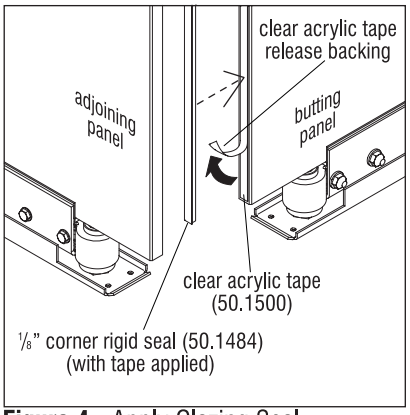


Figure 4 - Apply Glazing Seal

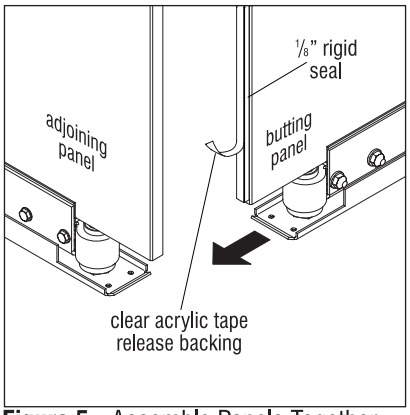


Figure 5 - Assemble Panels Together

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

3-Way Panel Connection - Glazing Seal

Important: Follow the instructions in this manual (pages 8 through 20) to install the ceiling rails per the final KI-Installation Drawings. As instructed below, it is important to stage, level and plumb the glass panels at their final installation location prior to connecting panels together with glazing seal.

Note: The glass panels come from the factory with adhesive tape pre-applied to both edges of the glass.

1. Remove the protective shipping channel from all edges to expose the tape. Stand and level the panels. Slide the panels to the side, opening up the joints to approximately 2" (Figure 1).
2. Dry-fit the 1/4" rigid (50.1466) and 1/8" flexible (50.1502) seals between the glass by sliding the panels closer together and pinching the seals between the glass panels. Make sure there are no gaps between the glass and the seals (Figure 2). If there are gaps, re-level the panels.
3. Using a clean, lint free cloth with the supplied solution (Silane Glass Treatment AP115), clean both seals before installation. Follow directions on the bottle.
4. Pull the panels back apart by about 1/2". Remove the release backing from the tape on the intersecting in-line panel edge and from the butting in-line panel edge (Figure 3).
5. Apply the 1/4" rigid seal (50.1466) to the tape on the butting in-line panel, then apply the flat side of the 1/8" flexible seal (50.1502) to the tape on the intersecting panel using the seal alignment tool (Figure 4).
6. Remove the release backing from the adjoining in-line panel (Figure 5). Align the pieces of glass and hold them in-plane with a large straight edge and a corner square making sure that any bow in the glass does not make an uneven joint. Slide the panels together to form a bond. Force the panels tightly together to fully nip the tape (Figure 6).
7. Follow the instructions in this manual to complete installing the panels, posts and trim.

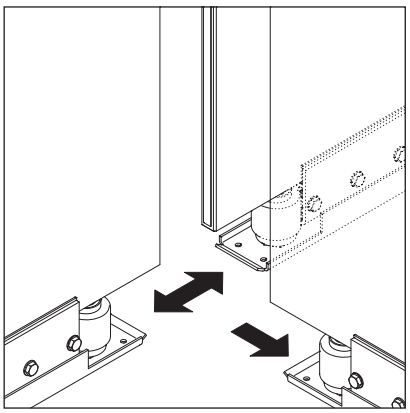


Figure 1 - Spread Panels

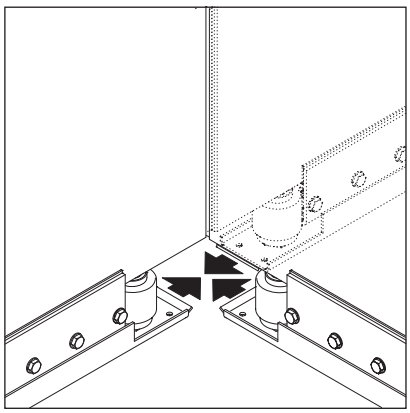


Figure 2 - Dry-fit Seals

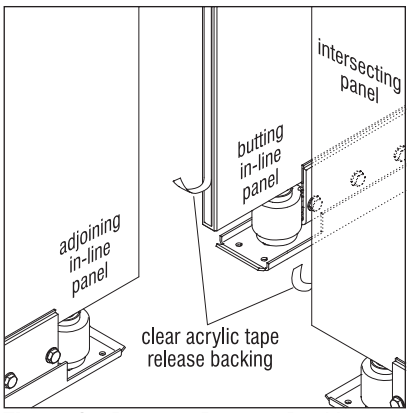


Figure 3 - Remove Release Backing

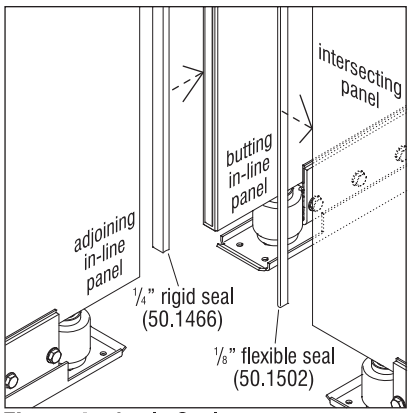


Figure 4 - Apply Seals

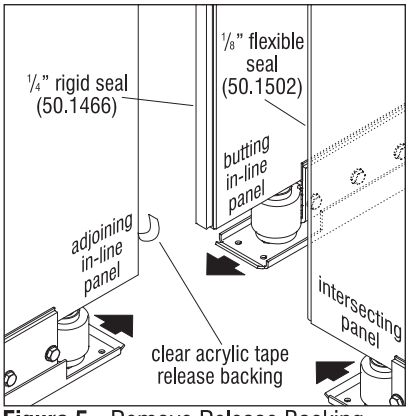


Figure 5 - Remove Release Backing

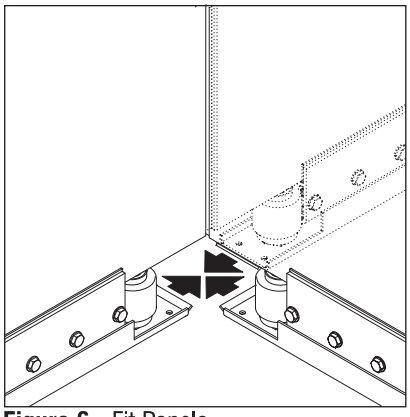


Figure 6 - Fit Panels

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

4-Way Panel Connection - Glazing Seal

Important: Follow the instructions in this manual (pages 8 through 20) to install the ceiling rails per the final KI-Installation Drawings. As instructed below, it is important to stage, level and plumb the glass panels at their final installation location prior to connecting panels together with glazing seal.

Note: The glass panels come from the factory with adhesive tape pre-applied to both edges of the glass.

1. Remove the protective shipping channel from all edges to expose the tape. Stand and level the panels. Slide the panels to the side, opening up the joints to approximately 2" (Figure 1).

2. Dry-fit the 1/4" rigid (50.1466) and two 1/8" flexible (50.1502) seals between the glass by sliding the panels closer together and pinching the seals between the glass panels. Make sure there are no gaps between the glass and the seals (Figure 2). If there are gaps, re-level the panels.

3. Pull the panels back apart by about 1/2". Remove the release backing from the tape on both intersecting panel edges, and also from the butting in-line panel edge (Figure 3).

4. Using a clean, lint free cloth with the supplied solution (Silane Glass Treatment AP115), clean both seals before installation. Follow directions on the bottle.

5. Apply the 1/4" rigid seal (50.1466) to the tape on the butting in-line panel and apply the 1/8" flexible seals (50.1502) to the tape on both intersecting panels using the seal alignment tool (Figure 4).

6. Remove the release backing from the adjoining in-line panel (Figure 5). Align the pieces of glass and hold them in-plane with a large straight edge and a corner square making sure that any bow in the glass does not make an uneven joint. Slide the panels together to form a bond. Force the panels tightly together to fully nip the tape (Figure 6).

7. Follow the instructions in this manual to complete installing the panels, posts and trim.

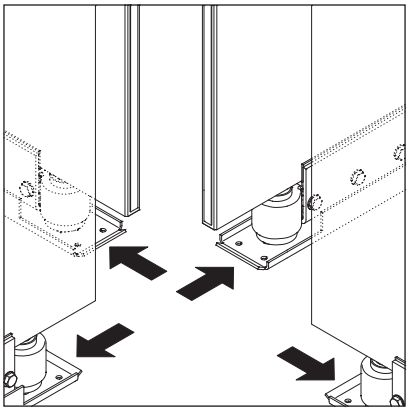


Figure 1 - Spread Panels

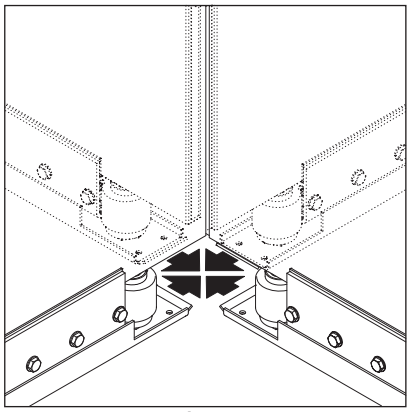


Figure 2 - Dry-fit Seals

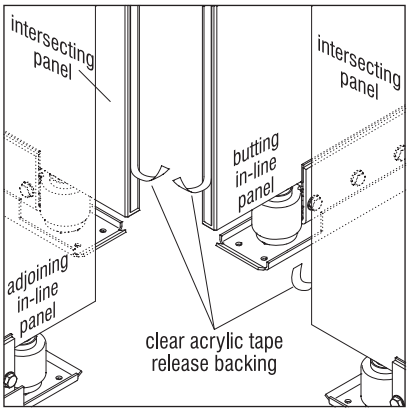


Figure 3 - Remove Release Backing

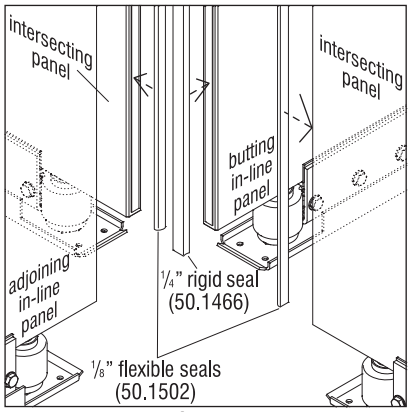


Figure 4 - Apply Seals

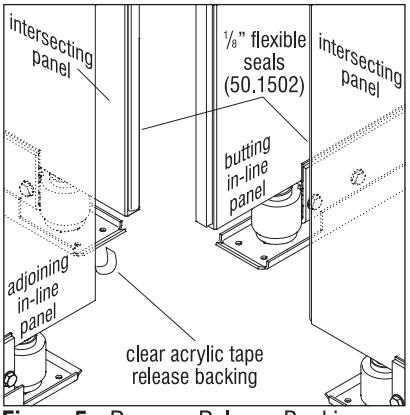


Figure 5 - Remove Release Backing

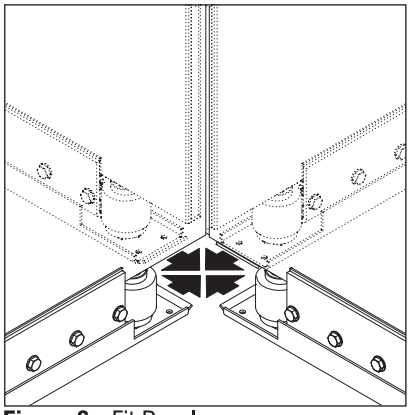


Figure 6 - Fit Panels

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Off-Module 3-Way Connection

Note: Where one panel intersects the middle of another panel, the top frame channel and ceiling rail of the panel being intersected will need to be modified. For additional ceiling corner bracket information, see "Ceiling Corner Brackets" on page 13.

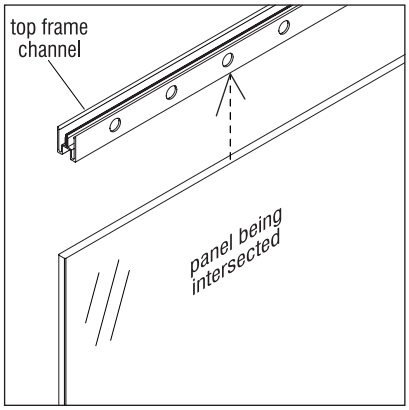


Figure 1 - Remove Top Frame Channel

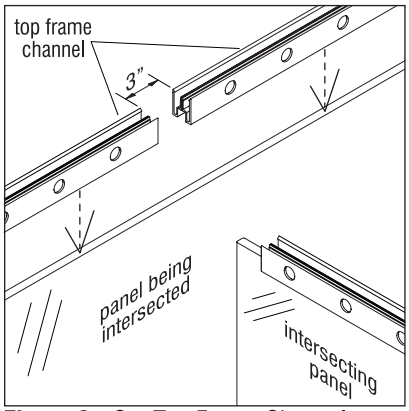


Figure 2 - Cut Top Frame Channel

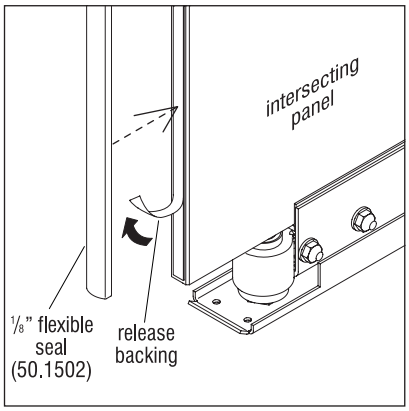


Figure 3 - Install Flexible Seal

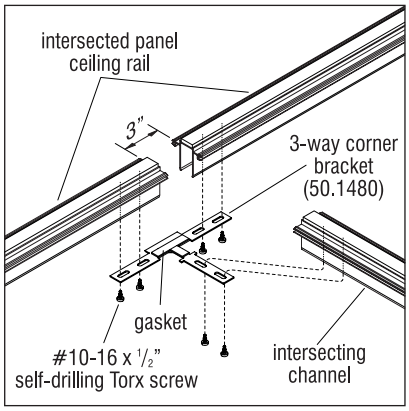


Figure 4 - Install 3-Way Bracket

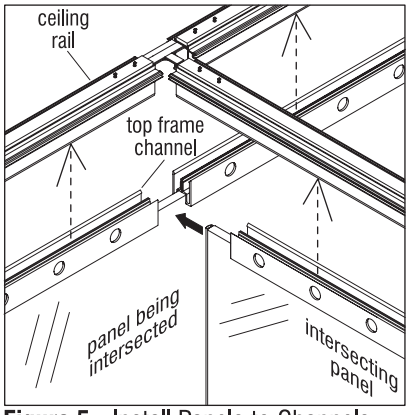


Figure 5 - Install Panels to Channels

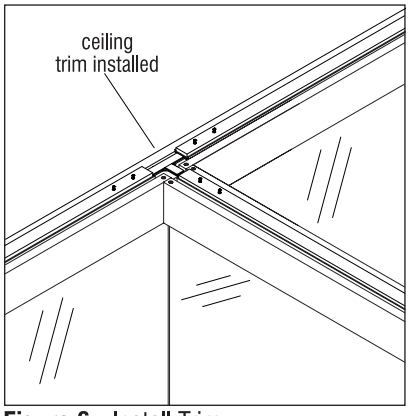


Figure 6 - Install Trim

1. To modify, first remove the top frame channel from the panel being intersected. Cut the channel into two parts and remove approximately a 3" section from the channel where the intersection is being made (Figures 1 & 2).
2. Reinstall the divided top frame channel onto the glass panel (Figure 2).
3. Using a clean, lint free cloth with the supplied solution (Silane Glass Treatment AP115), clean both seals before installation. Follow directions on the bottle.
4. Remove the release backing from the tape on the intersecting panel and apply a 1/8" flexible seal (50.1502) to the tape, using the seal alignment tool. Do not let the bottom of the seal touch the tape before it is guided precisely into position (Figure 3).
5. Cut the intersecting panel ceiling rail into two parts and remove a 3" section to fit the 3-way corner bracket (50.1480), where the intersection is being made (Figure 4).
6. Position and secure the ceiling rail to the ceiling grid (see "Ceiling Rail Installation", beginning on page 8).
7. Add a gasket section to the top of the 3-way corner bracket (50.1480), then install the bracket to all three of the ceiling rails using six #10-16 x 1/2" self-drilling Torx screws (Figure 4).
8. Stand the "panel being intersected" back under the now-divided ceiling rail, then stand the "intersecting panel" under its ceiling rail and check panels for level and a tight joint. Re-level if necessary. Press the intersecting panel against the panel being intersected, compressing the flexible seal slightly (Figure 5).
9. Install the ceiling and base trim (see "Inside Corner Trim - Ceiling" and "Inside Corner Trim - Floor" instructions on page 31) (Figure 6).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Seal at Door Frame and Posts

Important: Follow the instructions in this manual (pages 8 through 13) to install the ceiling rails per the final KI-Installation Drawings. Then follow all appropriate instructions to stage and/or install glass panels to posts with glazing seal. Door frames and/or posts may be installed before or after glass panels are installed. Follow appropriate door frame installation instructions in this manual. Also reference page 34 for universal post conditions.

Note: The glass panels come from the factory with adhesive tape pre-applied to both edges of the glass.

1. Remove the protective shipping channel from both panel edges to expose the tape. Stand and level the panels.

2. Using a clean, lint-free cloth with the supplied solution (Silane Glass Treatment AP115) clean the flexible seal (50.1502) prior to installation. Follow the directions on the bottle.

3. Apply the flexible seal to the tape using the seal alignment tool. Don't let the bottom of the flexible seal touch the tape at the bottom before it is guided properly into position (Figure 2).

4. Once, the flexible seal is installed to the edges of the panel, the panel may be mated to the installed door frame (or post) or the door frame may be moved into position against the flexible seal on the panel, and secured as per instructions in this manual (Figures 3 & 4). Reference page 34 for universal post conditions as each configuration may vary.

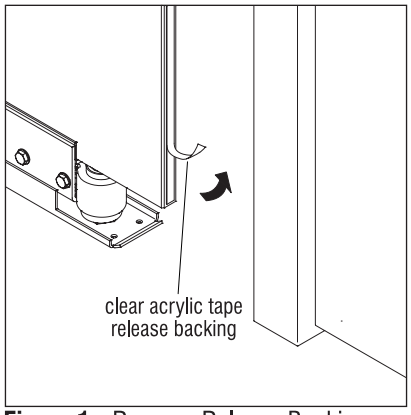


Figure 1 - Remove Release Backing

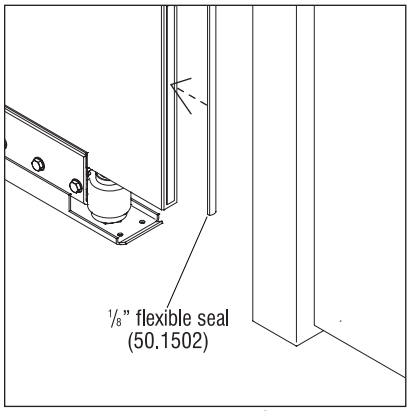


Figure 2 - Install Flexible Seal

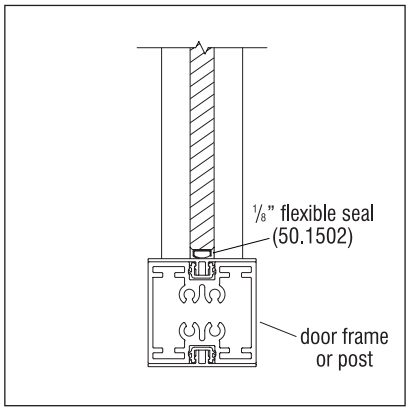


Figure 3 - Flexible Seal to Door Frame/ Post Condition

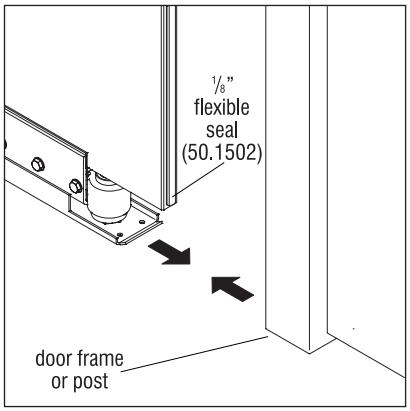


Figure 4 - Attach Panel To Post/Frame

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

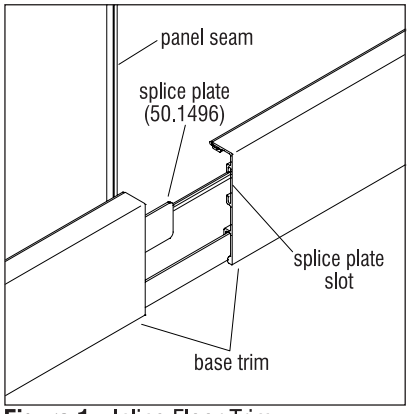


Figure 1 - Inline Floor Trim


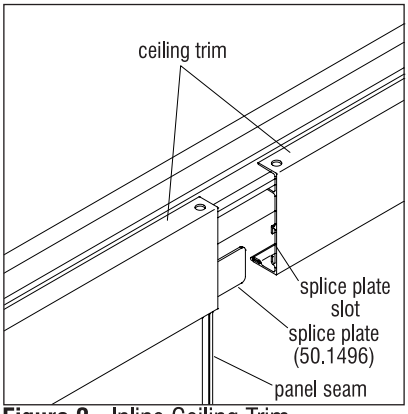


Figure 2 - Inline Ceiling Trim

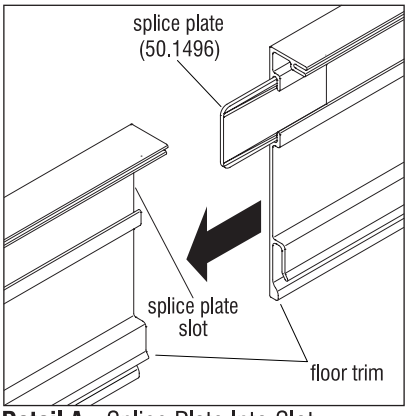

Detail A - Splice Plate Into Slot

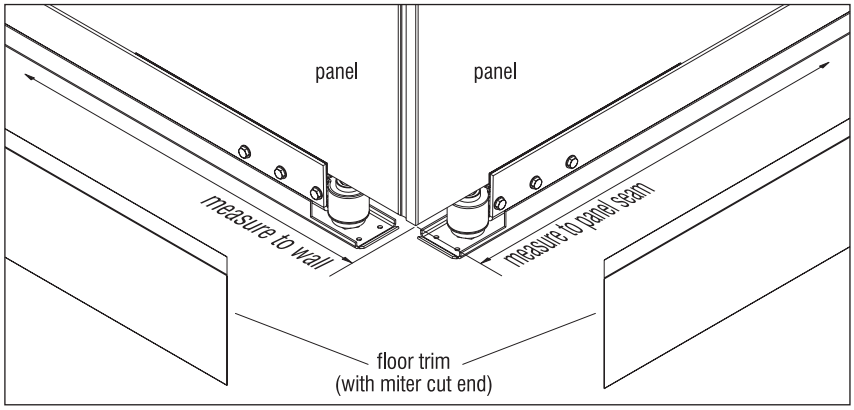


Figure 3 - Measure and Cut Floor Trim

Inline Trim Splicing - Ceiling or Floor

1. Measure and cut ceiling and floor trim to proper length. The most desirable splice is at a panel seam. Inline splices are held together with the Lightline trim splice plates (50.1496) (Figures 1 & 2) .

2. To splice two trim sections together (either floor or ceiling), first press a splice plate (50.1496) into the splice plate slot of one trim piece (Figure 1 & 2). Then press the trim together tightly, so the splice plate of the first trim inserts into the splice plate slot of the adjacent trim (Detail A).

Outside Corner Mitered Trim - Floor

1. Floor trim outside corners are made by miter cutting the trim ends where they meet, then connecting them using a steel splice plate (50.1734) bent to a 90° angle.

2. Measure from the outside edge of the glass panel to the furthest panel seam that the 10' trim will reach or to a wall or post where it will end. Add the thickness of the floor trim (0.688") and seal (0.085") to the measurement. Cut trim to that dimension and miter cut the end where the corner will be (Figure 2).

3. Repeat step 2 for the other mitered corner trim. Continue to step 4 on the next page.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Outside Corner Mitered Trim - Floor (cont.)

4. Dry fit both pieces of trim to make sure the pieces fit and that the corner gap is tight. If applicable, at the trim end away from the miter joint, remove any seal where the trim rests on a wall channel (Detail C).

5. To connect the mitered trims, bend the metal splice plate (50.1734) at the center to approximately 90° (Detail B).

6. Slide the splice plate into one trim then slide the other trim into the splice. Adjust all pieces so that the corner gap is tight (Figures 4 & 5).

7. Install the trim assembly onto the floor channel (Figure 5).

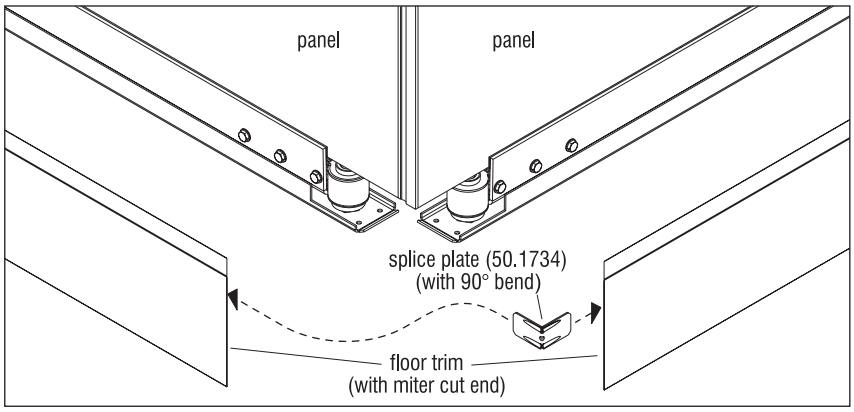


Figure 4 - Install Splice Plate



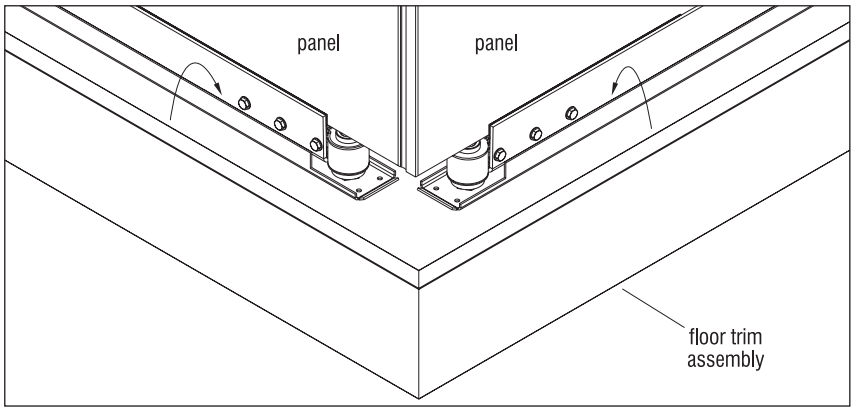


Figure 5 - Install Floor Trim Assembly

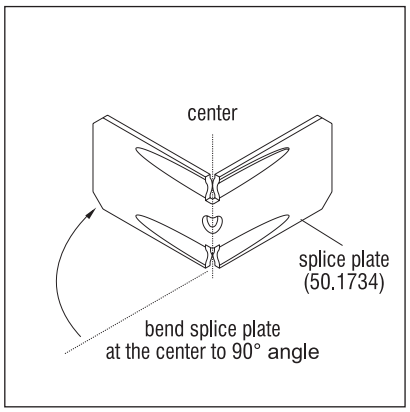

Detail B - Bend Splice Plate

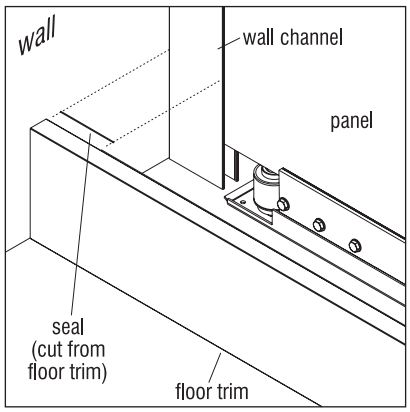

Detail C - Cut Seal From Floor Trim

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.



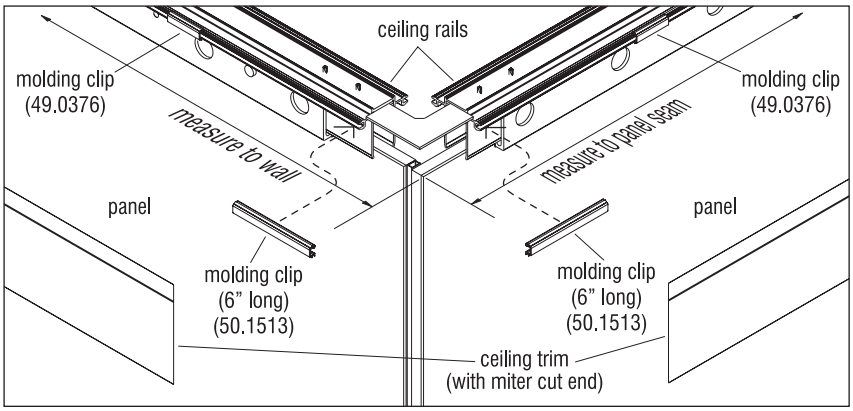


Figure 1 - Measure and Cut Ceiling Trim

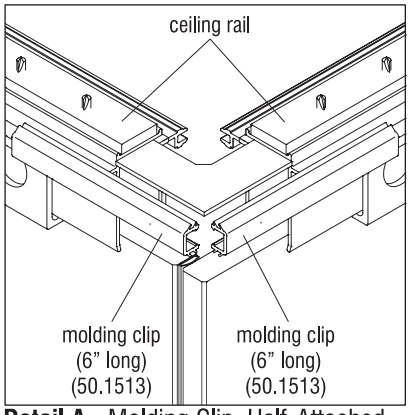

Detail A - Molding Clip, Half-Attached

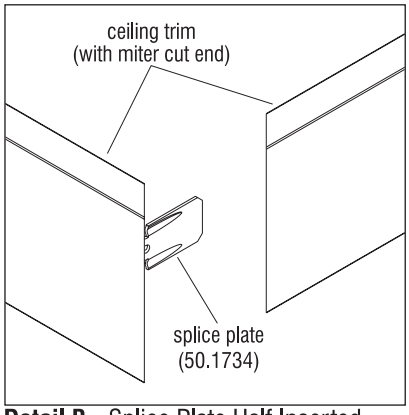

Detail B - Splice Plate Half Inserted

Outside Corner Mitered Trim - Ceiling

1. Molding clip must be attached approximately half-way onto ceiling rail to allow corner trim to make proper attachment (Figure 1 & Detail A).

2. Ceiling trim outside corners are made by miter cutting ceiling trim at the trim ends where they meet, then connecting them using a steel splice plate (50.1734) bent to a 90° angle (Figure 1 & Detail B).

3. Measure from the outside edge of the glass panel to the furthest panel seam that the 10' trim will reach or to a wall or post where it will end. Cut trim to that dimension and miter cut the end where the corner will be. Add the thickness of the ceiling trim (0.813") and seal (0.085") to the measurement. Cut trim to that dimension and miter cut the end where the corner will be (Figure 1)

4. Repeat step 3 for the other mitered corner trim. Continue to next page for step 5.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Outside Corner Mitered Trim - Ceiling (cont.)

5. Dry fit both pieces of ceiling trim to make sure the trim pieces fit and that the corner gap is tight. If applicable, at the trim end away from the miter joint, remove any seal where the trim rests on a wall channel (Figures 2 & 3 and Detail D).

6. To connect the mitered trims, bend the splice at the center to approximately 90° (Detail C).

7. Slide the metal splice plate (50.1734) into one trim then slide the other trim into the splice. Adjust all pieces so that the corner gap is tight (Figure 2).

8. Install the trim assembly onto the molding clips on the ceiling rail (Figure 3).

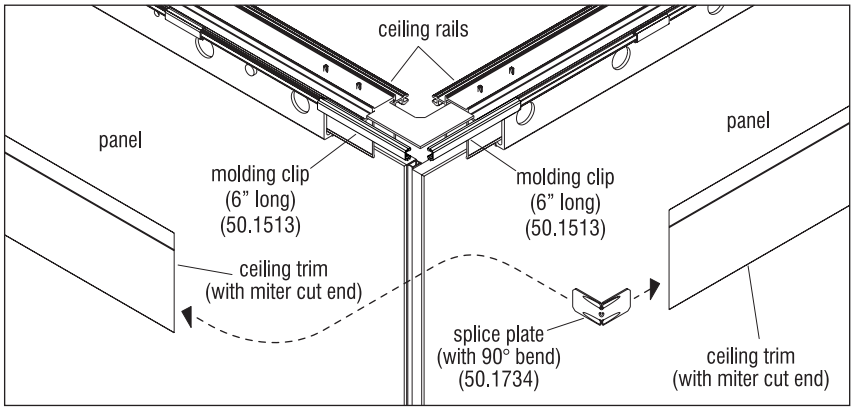


Figure 2 - Install Splice Plate



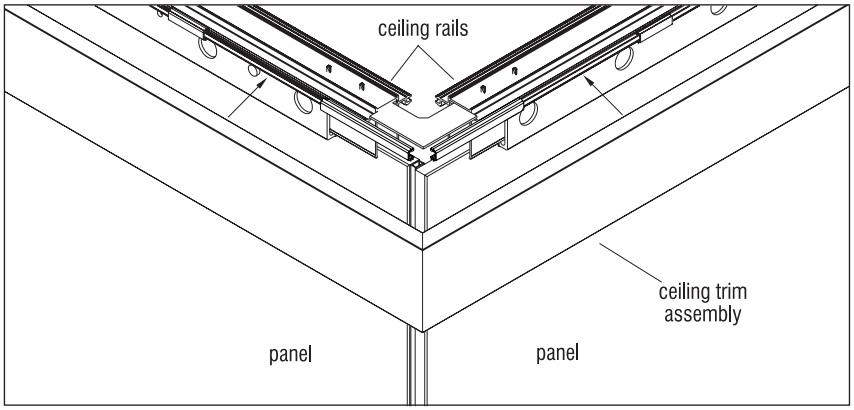


Figure 3 - Install Ceiling Trim Assembly

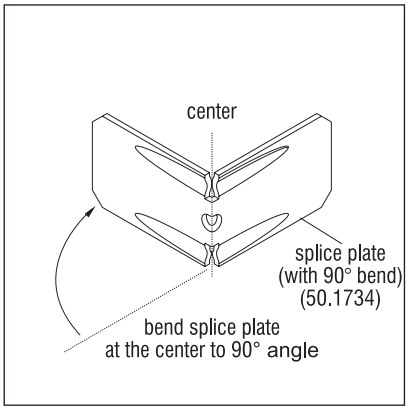

Detail C - Bend Splice Plate

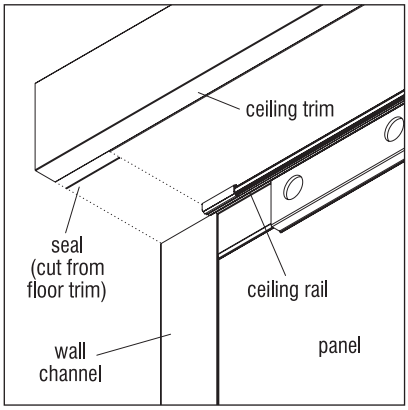

Detail D - Cut Seal From Floor Trim

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

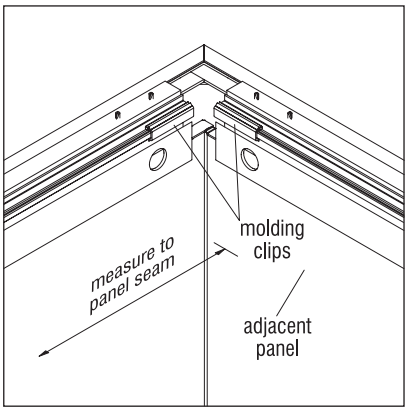


Figure 1 - Measure To Panel Seam

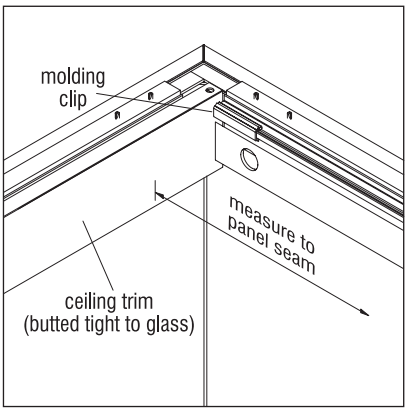


Figure 2 - Measure To Panel Seam

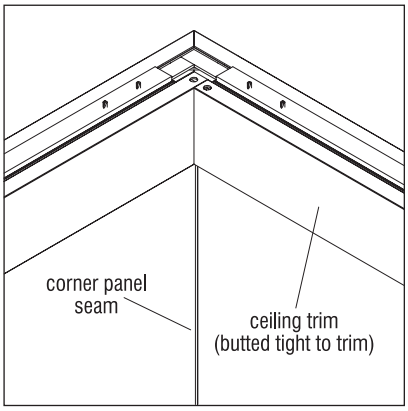


Figure 3 - Completed Ceiling Trim

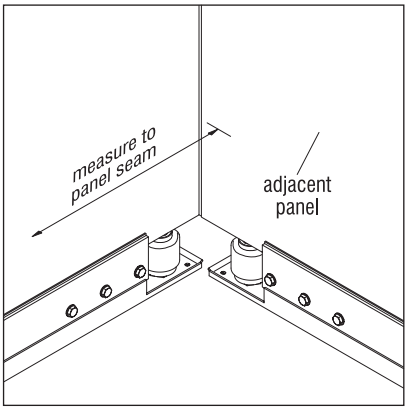


Figure 4 - Measure To Panel Seam

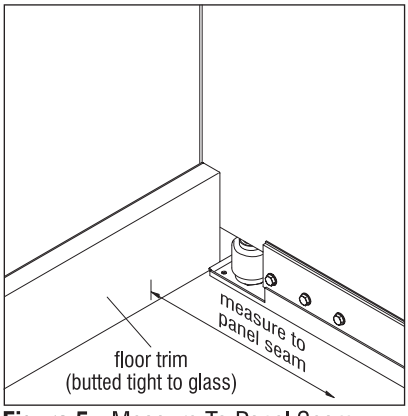


Figure 5 - Measure To Panel Seam

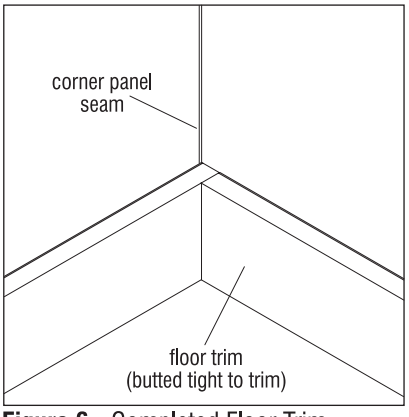


Figure 6 - Completed Floor Trim

Inside Corner Trim - Ceiling

1. Begin by measuring the length for the first side of the ceiling trim from the surface of the adjacent glass panel to the furthest panel seam that the 10' trim section can reach. Cut trim to that dimension (Figure 1).

2. Install the cut section of trim to the ceiling rail, butting it tight to the surface of the adjacent glass panel and pressing it onto the factory installed molding clips on the ceiling rails (Figure 2).

3. Next, measure from the inside surface of the previously installed trim to the furthest panel seam that the 10' trim section can reach. Cut trim to that dimension (Figure 2).

4. Install the second side of trim, butting it tight the inside surface of the previously installed trim, and pressing it onto the factory installed moulding clips (Figure 3).

Inside Corner Trim - Floor

1. Begin by measuring the length for the first side of the floor trim from the surface of the adjacent glass panel to the furthest panel seam that the 10' trim section can reach. Cut trim to that dimension (Figure 4).

2. Install the first cut trim to the floor channel, butting it tight to the surface of the adjacent glass panel (Figure 5).

3. Measure from the inside surface of the previously installed trim to the furthest panel seam that the 10' trim section can reach. Cut trim to that dimension (Figure 5).

4. Install the second cut trim to the floor channel, butting it tight to the inside surface of the previously installed trim (Figure 6).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Ceiling Trim To Door Header Splicing

1. Ceiling trim is spliced to the door header using the ceiling trim to door header splice plate (50.1503). To splice the trim, slide the splice plate into the splice slot in the ceiling trim (Figure 1).

2. Next, slide the trim with splice plate in it into the door header until the trim is tight to the door header while snapping the trim onto the molding clips on the ceiling rail (Figures 2 & 3).

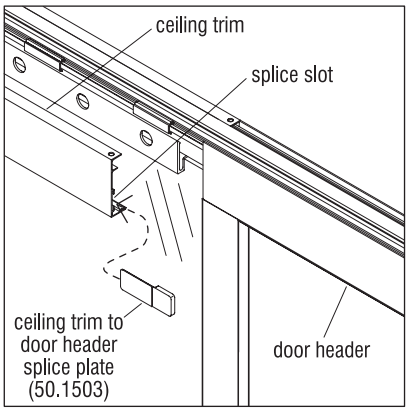


Figure 1

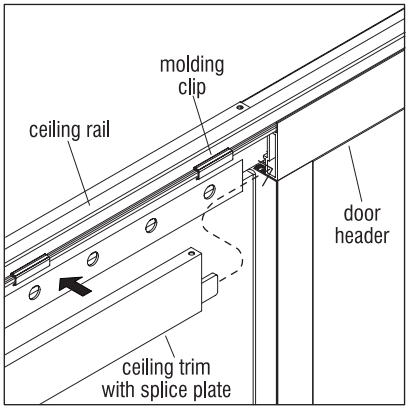


Figure 2

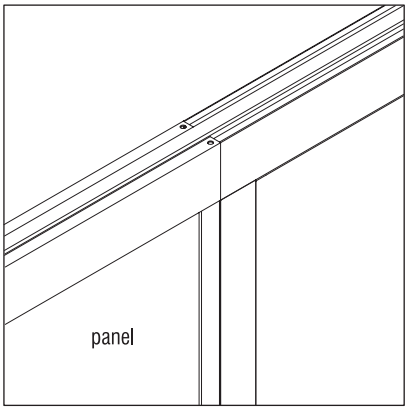


Figure 3

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

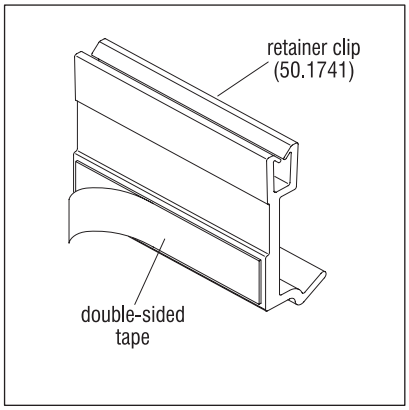


Figure 1

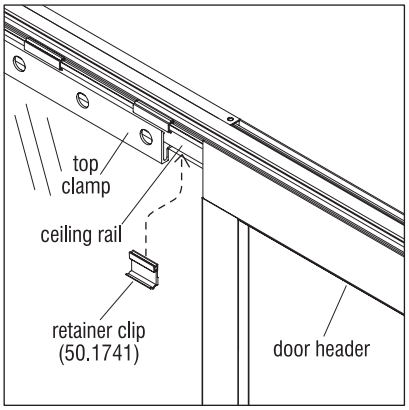


Figure 2

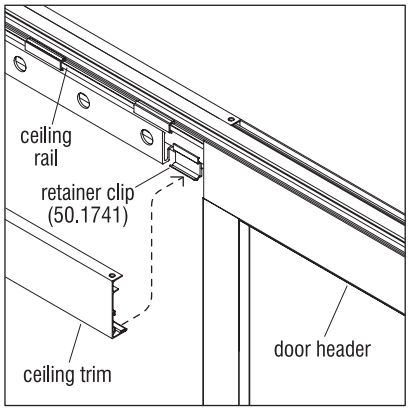


Figure 3

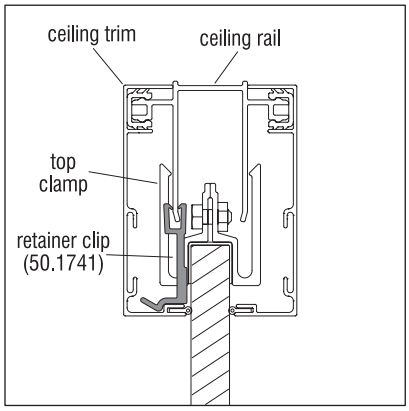


Figure 4

Ceiling Trim Retainer Clip

Note: The ceiling trim retainer clip (50.1741) is used when ceiling trim next to a door frame is less than ten feet long.

1. Before installing the retainer clip (50.1741), first remove the protective backing from the double-sided tape on the backside of the clip (Figure 1).
2. To install, position the clip as illustrated and push the top of the clip into the exposed ceiling rail located in the space between the door frame header and the panel top clamp. Make sure the adhesive back is facing the glass of the panel and press clip to glass (Figure 2).
3. Snap ceiling trim onto ceiling rail and onto retainer clip (Figures 3 & 4).


CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.


Universal Posts Identification

A. Lightline Corner Post.
B. Lightline at Drywall Corner Post.
C. Lightline to Genius Corner Post
D. Lightline 3-Way Post.
E. Lightline In-line at Drywall 3-Way Post.
F. Lightline In-line to Genius In-line 3-Way Post.
G. Lightline 3-Way Post with Door Frame Attachment.
H. Lightline to Evoke Corner Post.


Note: A general installation of the universal post is on the next page.

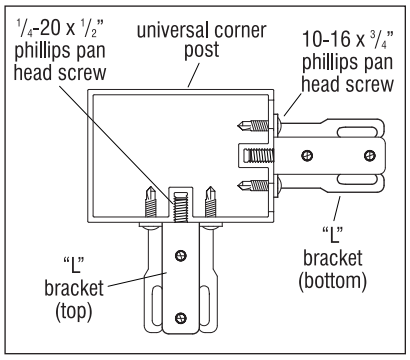


A. Lightline Corner Post

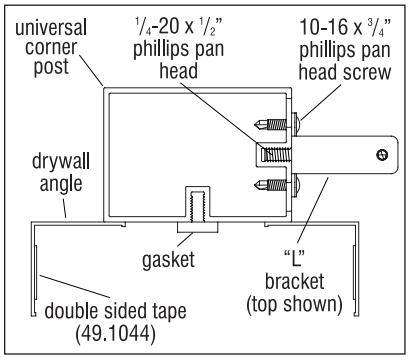


B. Lightline at Drywall Corner Post

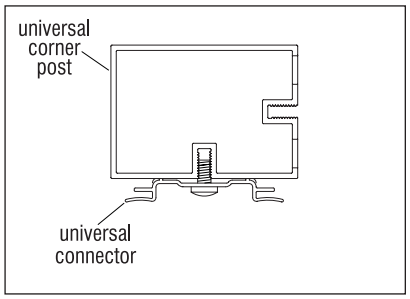


C. Lightline to Genius Corner Post

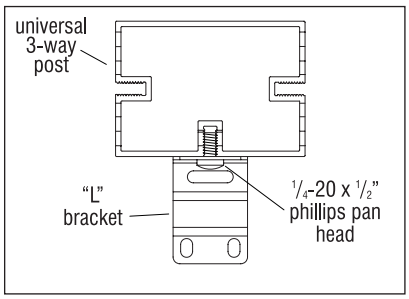


D. Lightline 3-Way Post

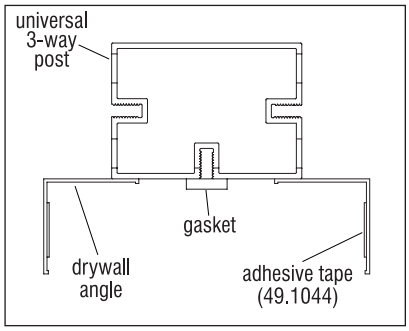


E. Lightline In-line at Drywall 3-Way Post

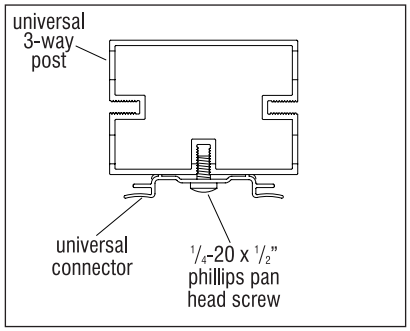

F. Lightline In-line to Genius 3-Way Post

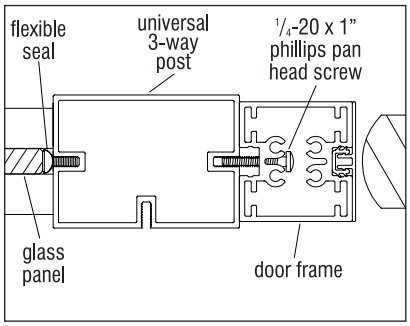


G. Lightline 3-Way Post with Door Frame Attachment

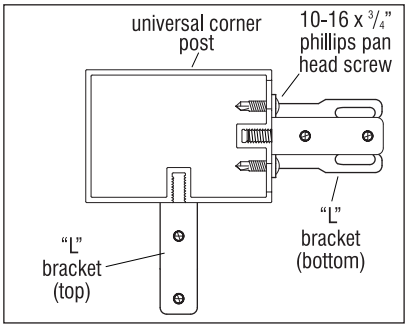

H. Lightline to Evoke Corner Post

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

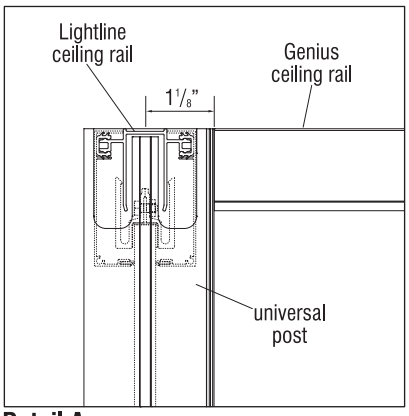

Detail A

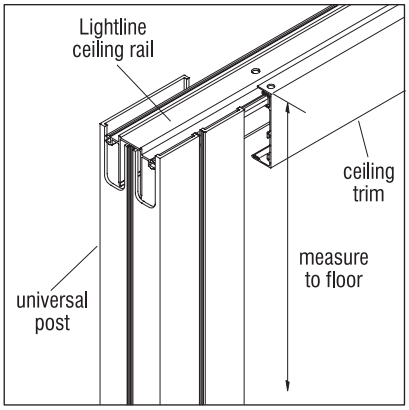


Figure 1

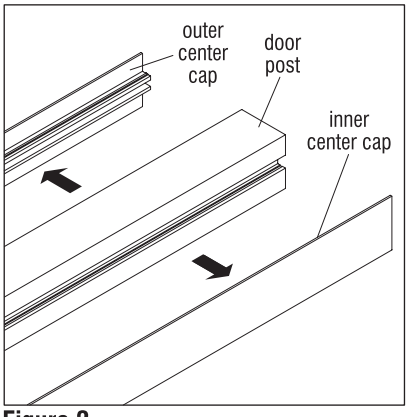


Figure 2

Universal Post Installation

Note: The instructions below are a general installation instruction for a Lightline universal post to a door post.

Note: When installing the ceiling rail for Lightline dividing walls, hold the channel back from the center line of the office front by 1 1/8" so that the universal post has room to fit in front end of the Genius ceiling rail (Detail A).

Cutting The Universal Post

1. Place a piece of ceiling trim onto the ceiling rail and measure from the top of the trim to the floor. Make allowance for how far the universal post will sink into the carpet and then cut the post to that dimension. Stand the universal post under the ceiling rail and confirm that the top of the post lines up with the top of the ceiling cover (Figure 1).

2. Following the installation instructions for the other components (i.e. panels or door frames), begin to prepare to install those items next to the universal post.

Door Frames

3. Tap both the inner and outer center caps from the door post which will install next to the universal post. To remove each cap, tap on the end of each with a block and mallet until the center cap slides out of the post. The outer cap can be put into stock but keep the inner cap for reinstallation after the door frame is connected to the universal post (Figure 2).

Note: For door frames, the door post will be attached to the universal post with screws that pass through the door post and thread into the vertical threaded groove of the universal post.

Continue to step 4, next page.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Universal Post Installation (cont.)

4. The door post has four holes drilled all the way through the post. The inside face of the post has larger clearance holes that will allow the entire screw to pass through and the outside face of the post has smaller clearance holes where just the shank of the screw will fit through. With the fully assembled door frame up against the universal post, pass a screw through the clearance hole in the inside face of the door post using a magnetic bit. Twist the screw into the vertical threaded groove in the universal post. Continue to attach the door post to the universal post by installing and tightening the rest of the screws (Figure 3).

5. Reinstall the inner door center cap to conceal the holes (Figure 4).

6. Glass panels run into the center of the universal post using a flexible glazing seal. The edge of the glass and the glazing extrusion hide the vertical threaded groove in the universal post. The glass panel connects to the universal post using a L-bracket. The L-bracket must be secured to the floor channel of the glass panel using two #10-24 x 3/8" carpet gripper screws (31.12.9070) when installing on carpet. Or, when installing an L-bracket to a floor channel over hard floor, use two #10-24 x 1/4" self-tapping screws (31.12.0936). Finally, the L-bracket attaches to the universal post with one 1/4-20 x 1/2" self-drilling screw as illustrated (Figure 5).

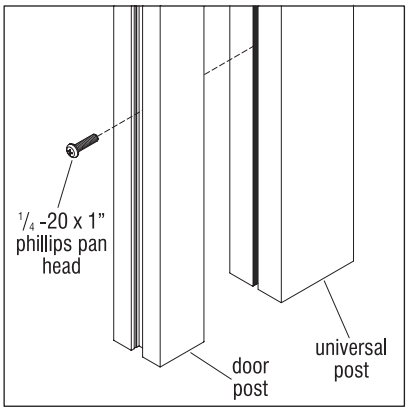


Figure 3

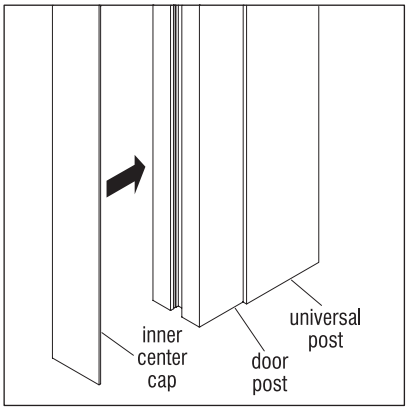


Figure 4

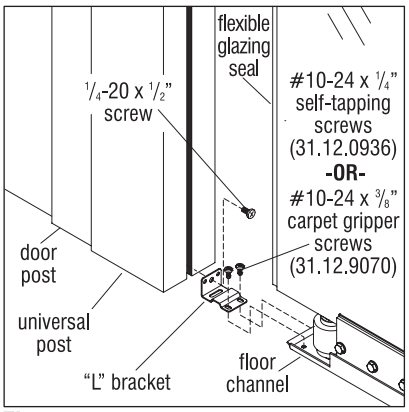


Figure 5

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Evoke Panel to Lightline Connection (2-way corner shown)
Note: Different post types may be required depending on the connection choice. Refer to Intersection Identification on pages 6 and 7. This instruction is for assembling one Lightline panel to a Evoke panel via a 2-way corner post. The in-line, 3-way and 4-way post connection types with Lightline and Evoke panels assemble the same way.

Note: Make sure the Lightline ceiling rail is aligned with the end of the Evoke panel ceiling rail, so that both panels and the post will install properly.

1. The panel shell from one side of the Evoke panel must be removed to access the screw holes for panel to post assembly. To remove panel shells, see "Evoke Architectural Wall Assembly Instructions (KI-62760, Page 31).
2. Make sure all panels have been properly height adjusted. To adjust height on Evoke panel, see "Evoke Architectural Wall Assembly Instructions (KI-62760, Page 17). For Lightline panel height adjustment, a pliers or channel locks can be used to turn the leveling glide bolts at both ends of the floor channel. For more information, see page 19).

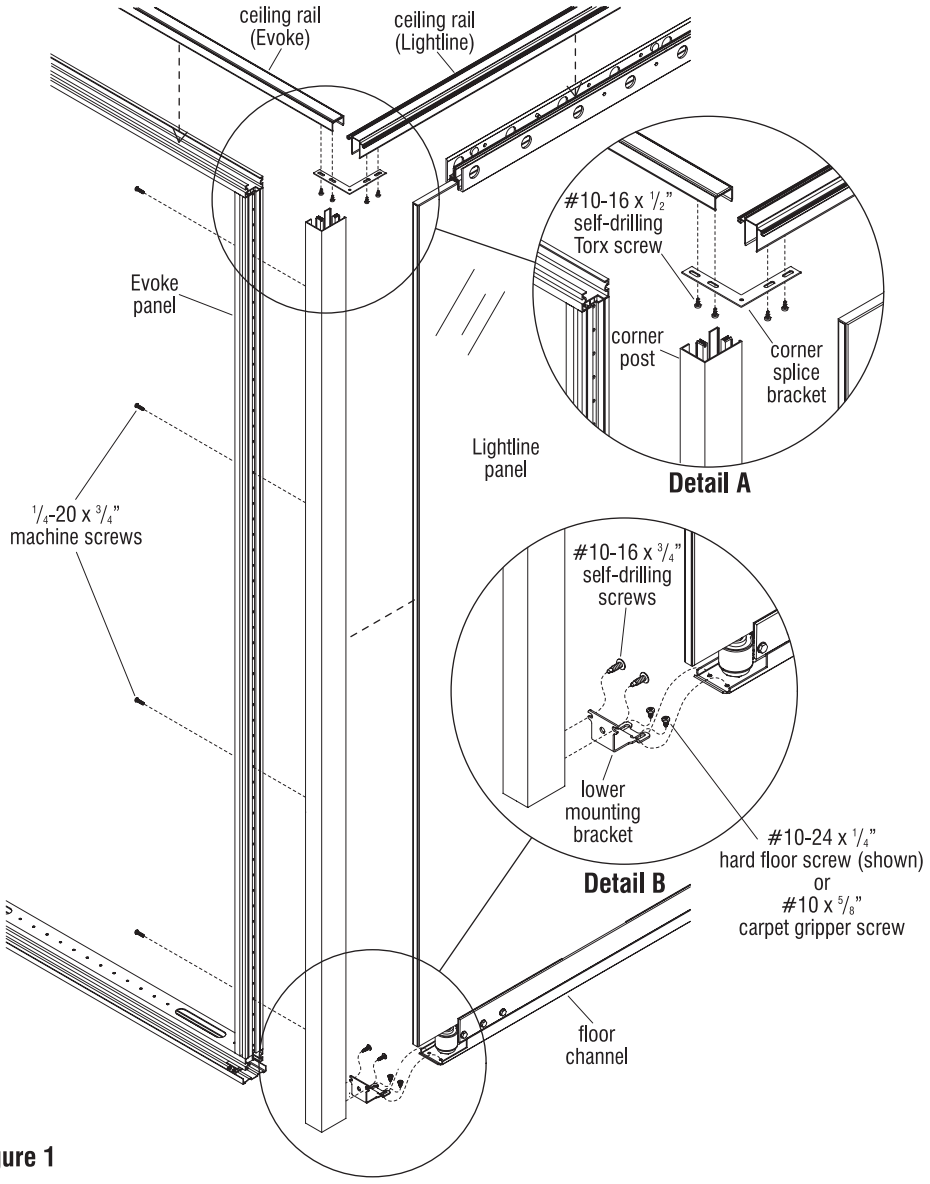


Figure 1

Note: All posts ship at a pre determined ceiling height plus 2", except the Lightline to Evoke Corner post. The Lightline to Evoke Corner post ships at ceiling height plus 5" to allow for the notches on one of the ends to be completely removed. This also allows the post to be non-handed.

3. Check the height of the Evoke panel by measuring from the floor to the top edge of the panel using a tape measure. Make sure the post can be installed to the full length of that height. Cut the post to the measured value.
4. Position the corner post to the Evoke panel and secure using four $^1/_4$-20 x $^3/_4$" machine screws evenly spaced (Figure 1).
5. Position the corner splice bracket between the Evoke and Lightline ceiling rails. Then secure the bracket to both ceiling rails using four #10-16 x $^1/_2$" self-drilling screws. (Figure 1 & Detail A).
6. Prepare Lightline panel with flexible seal. See Lightline Assembly Instructions "Seal at Door Frame and Posts" steps. Once seal is installed, position a properly aligned and adjusted Lightline panel against the corner post (Figure 1).
7. Position the lower mounting bracket onto the floor channel of the Lightline panel as illustrated. Align the bracket holes with the pre-drilled holes in the floor channel and secure with two screws. If securing over hard floor, use two #10-24 x $^1/_4$" hard floor screws (shown). If installing over carpet, use two #10 x $^5/_8$" carpet gripper screws. Then secure the lower mounting bracket to the corner post with two #10-16 x $^3/_4$" self-drilling screws (Figure 1 & Detail B).
7. To finish installing the Lightline panel, refer to panel installation steps in this manual.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Lightline Panel to Genius Wall Installation (2-way corner shown)
Note: Different post types may be required depending on the connection choice. Refer to Intersection Identification on pages 6 and 7. The instruction on this page is for assembling one Evoke panel to a Genius panel via a 2-way corner post. The in-line, 3-way and 4-way post connection types with Evoke and Genius panels assemble the same way.

1. Make sure all panels have been properly height adjusted. For Lightline panel height adjustment, a pliers or channel locks can be used to turn the leveling glide bolts at both ends of the floor channel. For more information, see page 19. For Genius Wall panel height adjustment, a pliers or 3/4" wrench may be used to turn the bolts of the bottom glides. For more information, see "Genius Architechtural Walls Basic Installation Manual (KI-61365, (Panel Height Adjustment" page 10).

   Note: All posts ship at a pre determined ceiling height plus 2".

2. Check the height of the Lightline panel by measuring from the floor to the top edge of the panel using a tape measure. Make sure the post can be installed to the full length of that height. Cut the post to the measured value.

3. Position the universal connector flush to the top of the wider side of the corner post and secure using four 1/4-20 x 3/4" machine screws evenly spaced (Figure 1).

4. To connect, position a properly aligned and adjusted Genius panel to the universal connector, leaving about 1/16" gap between the two parts (Figure 1).

5. Insert two Genius panel connectors (one at each side) even with the top of the panel. Then, with your thumb, zip each connector firmly around the panel or post flanges, pressing down to the base (Figure 1).

   Note: Do not use a steel hammer on the Genius panel connectors or damage will result. Use a rubber mallet and/or a block if necessary.

6. If using a flush Genius panel connector, visually or by touch, ensure the connector is installed smooth to the surface of the panels.

7. Position the corner splice bracket between the Evoke and Lightline ceiling rails. Then secure the bracket to both ceiling rails using four #10-16 x 1/2" self-drilling screws. (Figure 1 & Detail A).

8. Prepare Lightline panel with flexible seal. See Lightline Assembly Instructions "Seal at Door Frame and Posts" steps. Once seal is installed, position a properly aligned and adjusted Lightline panel against the corner post (Figure 1).

9. Position the lower mounting bracket onto the floor channel of the Lightline panel as illustrated. Align the bracket holes with the pre-drilled holes in the floor channel and secure with two screws. If securing over hard floor, use two #10-24 x 1/4" hard floor screws (shown). If installing over carpet, use two #10 x 5/8" carpet gripper screws. Then secure the lower mounting bracket to the corner post with two #10-16 x 3/4" self-drilling screws (Figure 1 & Detail B).

10. To finish installing the Lightline panel, refer to panel installation steps in this manual.

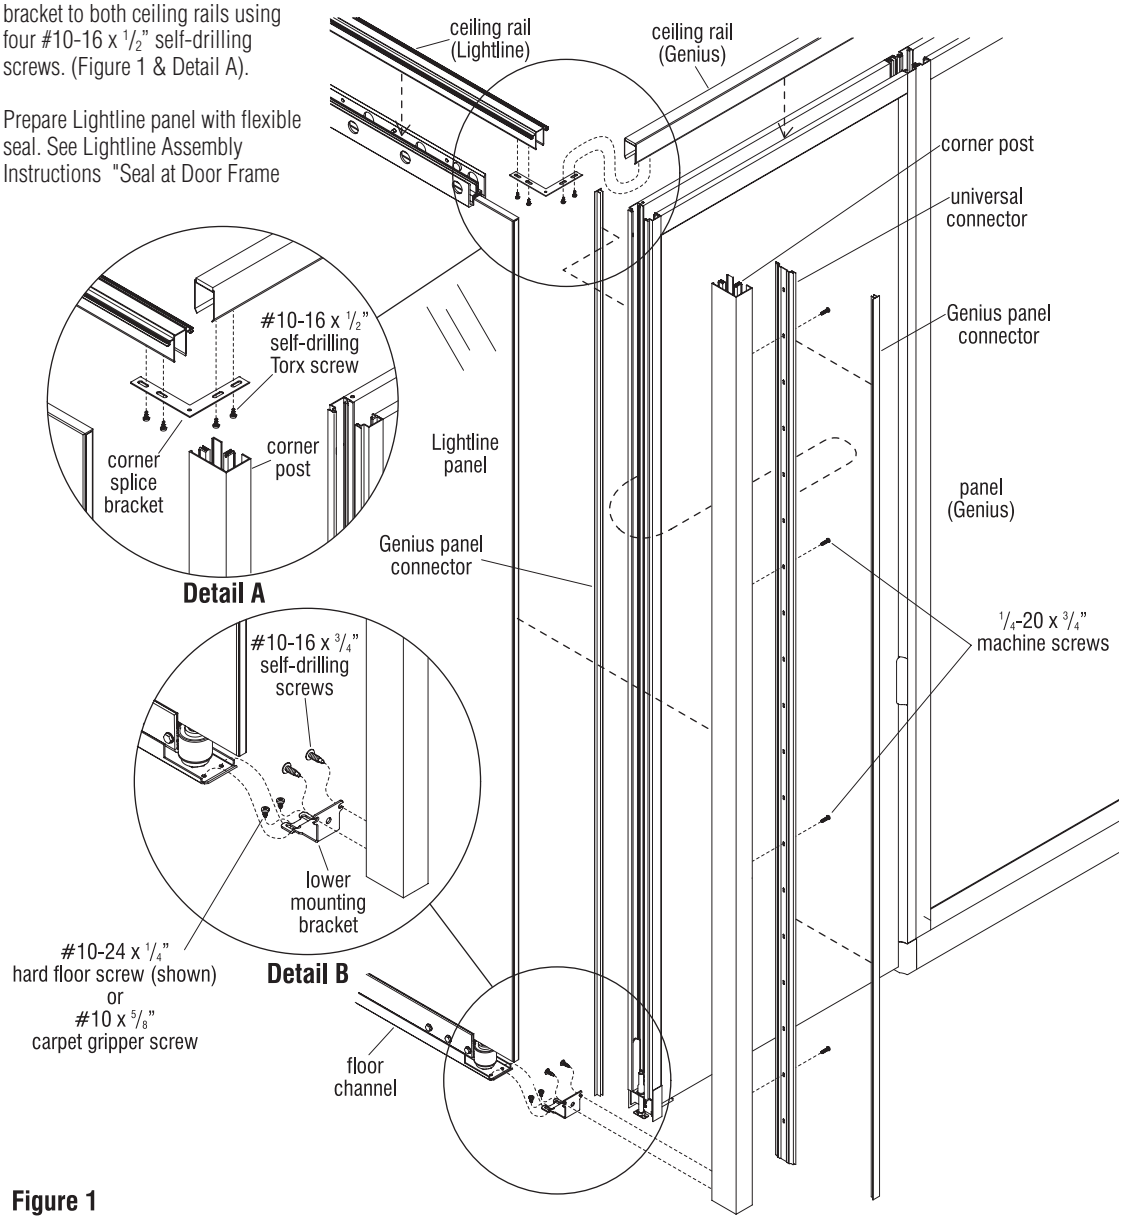


Figure 1

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

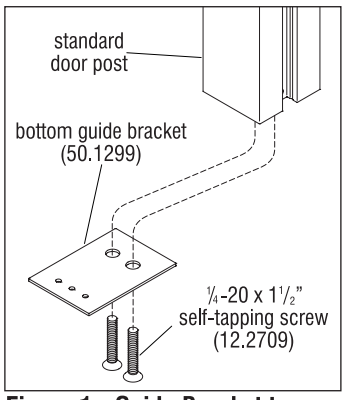


Figure 1 - Guide Bracket to Door Post Detail

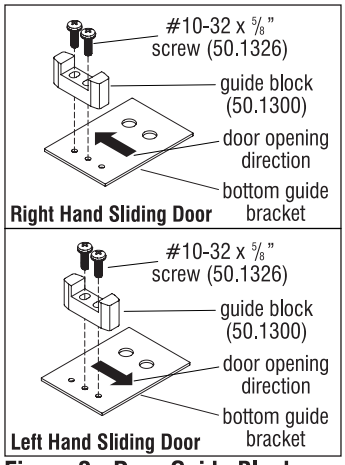


Figure 2 - Door Guide Block Placement Detail

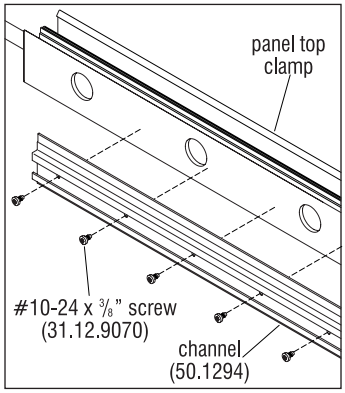


Figure 3 - Channel to Panel Clamp Detail

LJS-G Full-Height Glass Sliding Door Installation

Door Frame Assembly & Installation

Note: At one side of the door frame will be standard non-locking door post (50.1287.NL), and at the other side will be a sliding door strike post (50.1686.NL). Per the space-planning layout, the standard non-locking door post will receive a bottom guide bracket (50.1299) and the other will not. Each must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the "standard non-locking door post" must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figure 4).

2. Locate the standard non-locking door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

3. To determine what length the "sliding door strike post", follow step 1 above (Figure 4).

4. Locate the standard sliding door strike post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

5. Stand both door posts up under the ceiling rail at their respective installation locations, take into account the bottom guide bracket which will be installed to the standard non-locking door post later, and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 4).

6. Lay the standard and sliding door strike posts with the top frame channel onto a soft protective surface on the floor in the correct orientation. Secure three pieces together using four 1/4 -20 x 2" Torx screws (50.1780) (Figure 4).

7. Install the guide block on the bottom guide bracket in the correct position using two #10-32 x 5/8" Torx screws (50.1326) (Figure 2).

8. Install the bottom guide bracket onto the door post using two 1/4 -20 x 1 1/2" self-tapping screws (12.2709) (Figures 1 & 4).

9. Stand the door frame assembly up and into the ceiling rail.

Sliding Door Track Installation

10. To mount the sliding door track assembly (50.1298), start by installing the channel (50.1294) to the panel top clamp on the adjacent panel (Figure 3). Position the channel on the panel clamp and push the channel up until it fully seats against the ceiling rail. Secure the channel using twelve #10-24 x 3/8" screws (31.12.9070). Make sure the screws do not hit the circular openings of the panel clamp (Figure 4).

11. Install the ceiling trim (50.1277) over the channel (50.1294) butting it against the top frame channel (50.1291) (Figure 4).

12. Clean the track (50.1298) prior to installation. Make sure the track is free of debris.

13. With the assistance of two people, position the track against the top frame channel and the ceiling trim about 1 1/8" from the bottom of the top frame channel to the bottom of the track (Figure 4). Mark each screw hole.

    Note: The valance should be flush with the bottom of the top frame channel when installed.

14. Remove the track and center punch each marked screw hole. Then drill pilot holes using a 5/32" drill bit.

15. Position the track over the pilot holes and secure using eight #10-24 x 3/4" self-tapping screws (PC.12.0006) (Figure 4).

16. Insert the trolley assembly (soft stop trolley assembly, 50.1679 or bumper stop trolly assembly, 50.1680 - not shown) into the door track (Figure 4). See separate instructions included with the door stops and trolleys.

Sliding Door Leaf Assembly

17. To hang the sliding door leaf, begin by attaching the continuous hanger assembly (50.1682) to the top of the door leaf. First, apply a strip of seal (50.1659) across the top of the door leaf aligning the non-taped edge to the top edge of the door leaf (Figure 4 & Detail A).

    Note: Seal can be applied to either side of door leaf. The seal will act as a shim between the continuous hanger assembly and the glass.

18. Next, remove the M6 x 30mm screws from the glass holder inserts (50.1660) and place the glass holder inserts into the notches at the top of door leaf. Then, slide the continuous hanger assembly over the top of the door leaf (Figure 4, Detail A).

19. Orientate the continuous hanger assembly so the weather seal faces the door frame. Attach the hanger to the glass using the M6 x 30mm screws through the countersunk holes in the top of the hanger.

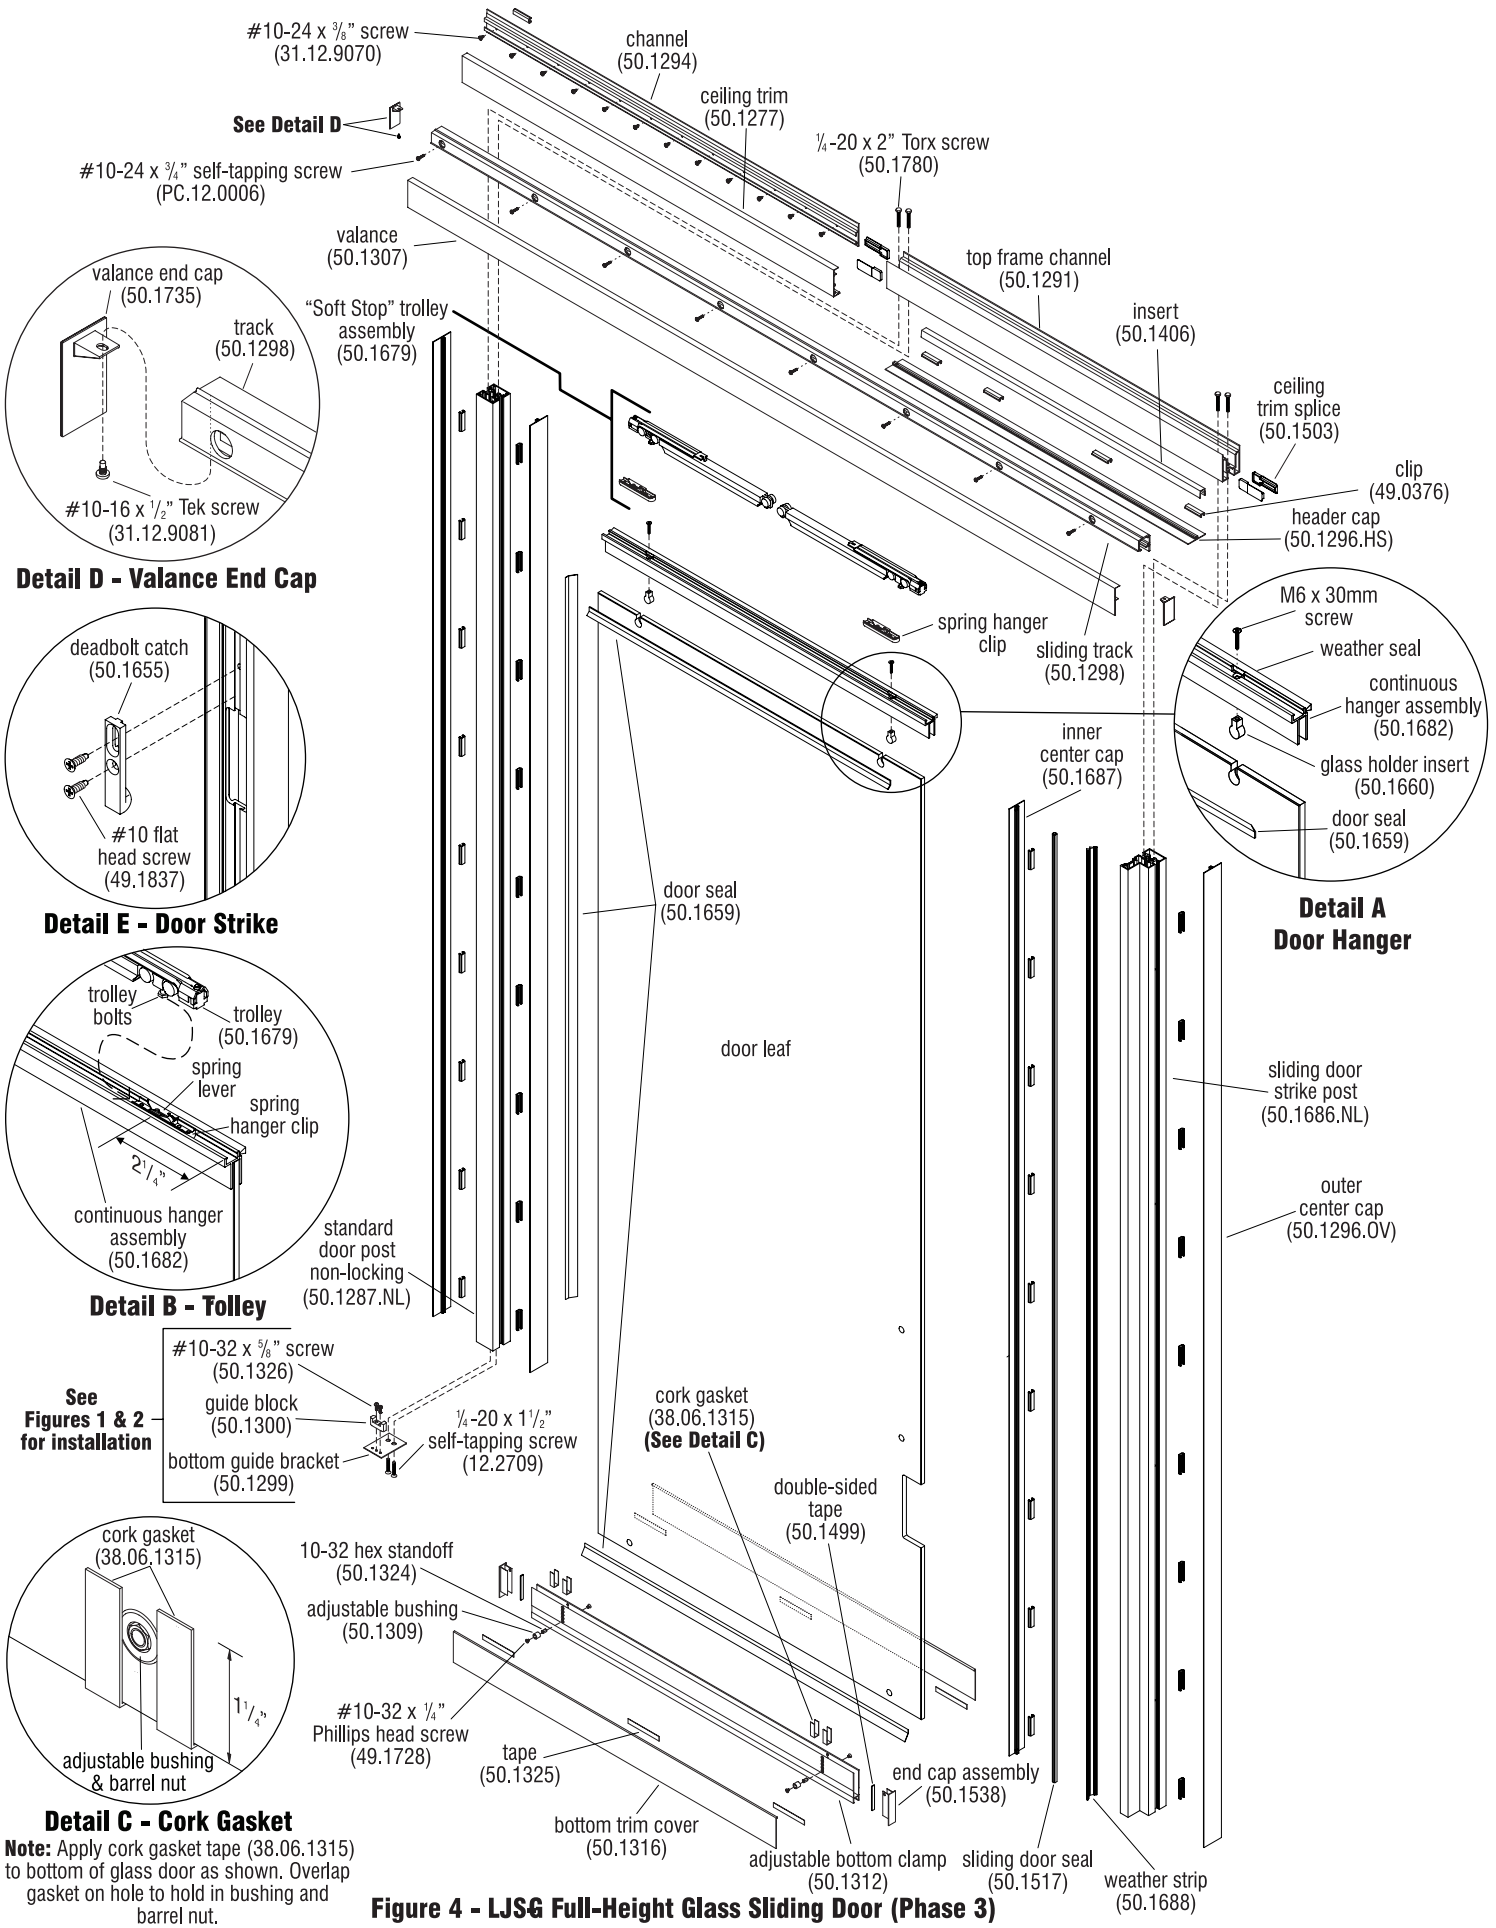


Figure 4 - LJSG Full-Height Glass Sliding Door (Phase 3)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Note: Spring hanger clips are handed so be sure to orientate the spring hanger clips so the spring lever always faces the outside of the door leaf and pivots away from the door frame.

20. Slide the spring hanger clips into the slot in the continuous hanger assembly to the dimension shown in Detail B and tighten screws.

21. With the assistance of a second person, hang the door by first aligning the trolley bolts with the spring hanger clips. The trolley bolts slide into spring hanger clips and lock into place with spring levers (Figure 1 & Detail B).

Adjustable Bottom Clamp Installation

22. To attach the adjustable bottom clamp (50.1312), make sure the door leaf is partially positioned over the door opening. Then insert two adjustable bushings (50.1309) into the two holes in the bottom of the door leaf (Figure 4).

23. Apply four strips of gasket cork (38.06.1315), two on each side of the two holes, overlapping the hole a little to retain the bushing at each side. Start at the top of the hole and go down around the bottom edge of the glass, and up to the top of the hole on the opposite side of the glass (Figure 4 & Detail C). Note the cork height of 1 1/4" at each side.

24. Slide the adjustable bottom clamp on the door leaf and over the guide block from the opposite end of the sliding door strike post (Figure 4).

25. Spin a #10-32 hex standoff (50.1324) on one of the #10-32 x 1/4" Phillips head screws (49.1728). Do the same for the second set (Figure 4).

26. Position the adjustable bottom clamp to approximately ½" off the floor and install both the screw and hex standoff through the two bushings (Figure 4).

27. Install both of the second screws into the opposite end of the hex standoffs (Figure 4). Do not fully tighten.

28. Install both end caps (50.1538) with double-sided tape (50.1499) on the adjustable bottom clamp. Push the end caps all of the way in so that the cap is tight up against the edge of the glass (Figure 4).

29. Tighten the #10-32 x 1/4" Phillips head screws to secure the adjustable bottom clamp to the door leaf (Figure 4).

30. Mark and cut the bottom trim covers (50.1316) to the width of the glass, then remove the release paper from the adhesive tape pads on the outside of the clamp (Figure 4).

31. Hang the covers on the top of the clamp and rotate down. Press on the covers to make sure the covers and the tape are fully seated on the adjustable bottom clamp (Figure 4).

32. Adjust the height of the door leaf by adjusting the bolts and nuts on trolley assembly (50.1679) (Figure 4).

Valance Installation

33. Measure the distance from the outside of the door frame to the end of the adjacent panel(s) and cut the valance (50.1307) to length (Figure 4).

34. Position the valance end caps (50.1735) on both ends of the track and secure using two #10-16 x 1/2" Tek screws (31.12.9081) (Figure 4 & Detail D).

35. Install the valance onto the track and end caps (Figure 4).

Door Handle Installation

36. Install door handle and lock hardware per handle instructions.

Locking Door Installation

37. For locking doors, remove sliding door seal (50.1517) from the slot in the sliding door strike post and set it aside (Figure 4).

38. Position the sliding door deadbolt catch (50.1655) into the cutout in the sliding door strike post. Adjust the position so that the slot of the deadbolt catch is over the pre-drilled hole and secure using a #10 flat head screw (49.1837) (Detail E).

39. Close the door and operate the lock to check the height of the catch. Re-open the door, loosen the screw and adjust the height of the catch accordingly for proper hook bolt engagement (Detail E).

40. Once the height of the catch is good, drill a pilot hole into the first wall of sliding door strike post through the bottom hole of the catch (Detail E).

41. Install another #10 flat head screw to lock the catch in place (Detail E).

42. To re-install the bulb seal, first measure from the top of the catch to the top of strike post. Cut a section out of the bulb seal to that dimension and slide it back into the slot of the strike post from the top (Figure 4).

43. Next, measure from the bottom of the cutout to the floor and cut the remaining section of the seal to that length. Slide seal into the slot of the strike post from the bottom of cutout to the floor (Figure 1 & Detail E).

44. Follow other instructions in this manual to complete attaching the door frame to the adjacent panels, trim and sound seal.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

LJS-A/LJS-W Full-Height Aluminum/Wood Sliding Door Installation

Door Frame Assembly & Installation

Note: At one side of the door frame will be standard non-locking door post (50.1287.NL), and at the other side will be a sliding door jamb post (50.1694.NL). Per the space-planning layout, the standard non-locking door post will receive a bottom guide bracket (50.1299) and the other will not. Each must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the "standard non-locking door post" must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the $^1/_{16}$" thickness of the bottom guide bracket (50.1299) which must be installed to this door post (Figure 4).

2. Locate the standard non-locking door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

3. To determine what length the "sliding door jamb post", must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 4).

4. Locate the sliding door jamb post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

5. Stand both door posts up under the ceiling rail at their respective installation locations, take into account the bottom guide bracket which will be installed to the standard non-locking door post later, and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 4).

6. Lay the standard and sliding door jamb posts with the top frame channel onto a soft, protective surface on the floor in the correct orientation. Secure the three pieces together using four $^1/_4$ -20 x 2" Torx screws (50.1780) (Figure 4).

7. Install the guide block on the bottom guide bracket in the correct position using two #10-32 x $^5/_8$" Torx screws (Figure 2).

8. Install the bottom guide bracket onto the door post using two $^1/_4$ -20 x $1^1/_2$" self-tapping screws (Figure 2).

9. Stand the door frame assembly up and into the ceiling rail.

Sliding Door Track Installation

10. To mount the sliding door track assembly (50.1340), start by installing the channel (50.1294) to the panel top clamp on the adjacent panel (Figure 3). Position the channel on the panel clamp and push the channel up until it fully seats against the ceiling rail. Secure the channel using twelve #10-24 x $^3/_8$" screws (31.12.9070). Make sure the screws do not hit the circular openings of the panel clamp (Figure 4).

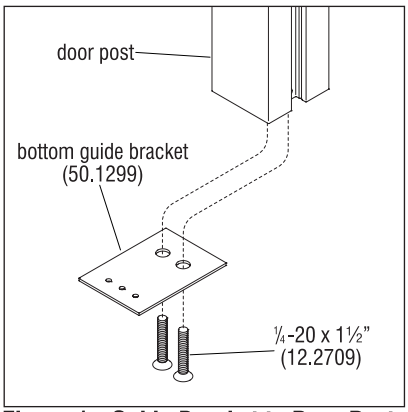


Figure 1 - Guide Bracket to Door Post Detail

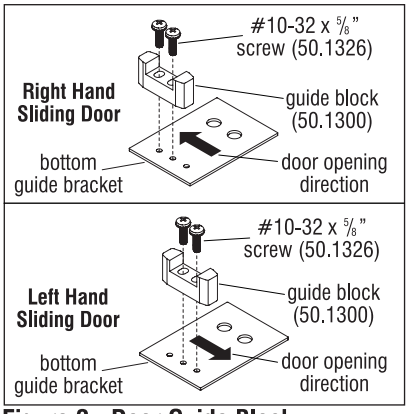


Figure 2 - Door Guide Block Placement Detail

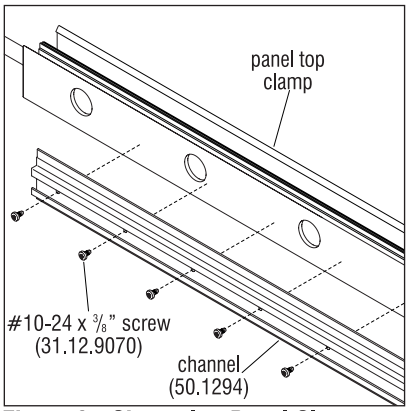


Figure 3 - Channel to Panel Clamp Detail

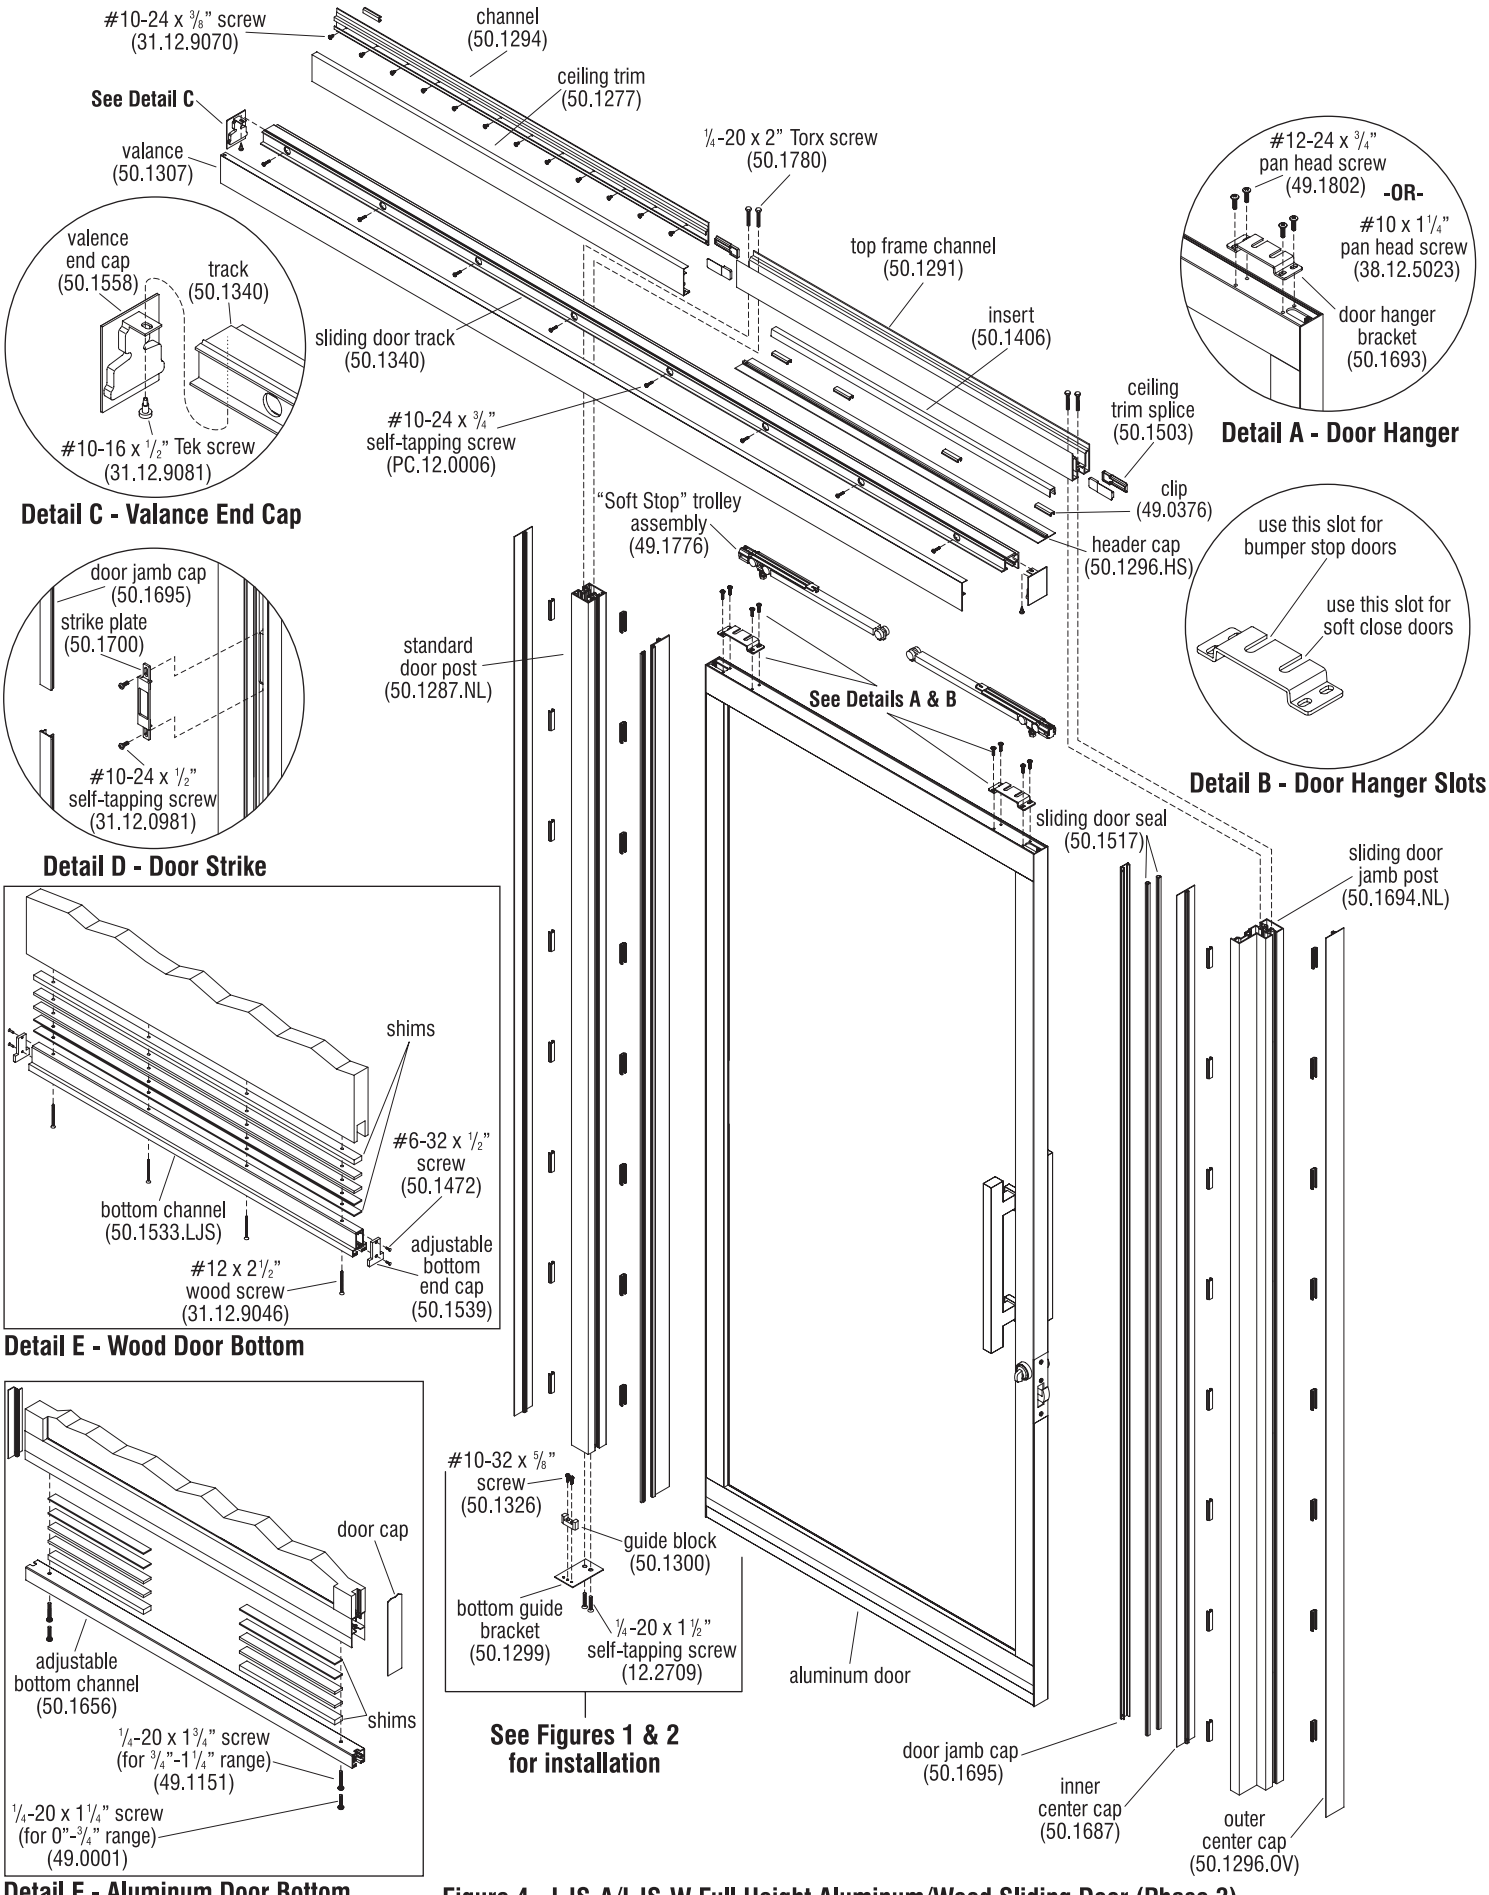


Figure 4 - LJS-A/LJS-W Full Height Aluminum/Wood Sliding Door (Phase 3)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

11. Install the ceiling trim (50.1277) over the channel (50.1294), butting it against the top frame channel (50.1291) (Figure 4).

12. Clean the sliding door track (50.1340) prior to installation. Make sure the track is free of debris.

13. With the assistance of two people, position the track against the top frame channel and the ceiling trim about 1 1/8" from the bottom of the top frame channel to the bottom of the track (Figure 4). If needed, adjust the position of the track to match the level of the floor. Mark each screw hole.

    Note: The valance should be flush with the bottom of the top frame channel when installed.

14. Remove the track and center punch each marked screw hole. Then drill pilot holes using a 5/32" drill bit.

15. Position the track over the pilot holes and secure using eight #10-24 x 3/4" self-tapping screws (Figure 4).

16. Insert the trolley assembly (soft stop trolley assembly, 49.1776 or bumper stop trolly assembly, 50.1334.2 - not shown) into the door track (Figure 4). See separate instructions included with the door stops and trolleys.

Adjustable Bottom Channel Installation - Wood Door

17. To install the adjustable bottom channel for wood doors, first measure the height required for the door allowing for a ½" undercut. The door height should be measured from the bottom of the hanger bolt on the trolly assembly (49.1776) to the floor minus the ½" undercut.

18. Stack the appropriate amount of shims with the bottom channel to achieve the door height measurement noted (Detail E).

19. Attach the bottom channel (50.1533.LSH) to the door leaf using four #12 x 2 1/2" wood screws (31.12.9046) through the pre-drilled holes in the channel (Detail E).

20. To install the adjustable bottom end caps, measure from the bottom of the bottom channel to the top of the adjustable bottom notch in the door.

21. Cut the top portion of the adjustable bottom end caps (50.1539) to that measurement.

22. Position both adjustable bottom end caps on the bottom channel and secure using four #6-32 x 1/2" screws (50.1472) (Detail E).

23. Adjust the height of the door leaf by adjusting the bolts and nuts on "Soft Stop" trolley assembly (49.1776) (Figure 4).

Adjustable Bottom Channel Installation - Aluminum Door

24. To install the adjustable bottom channel (50.1656) for aluminum doors, first measure the height required for the door allowing for a 1/2" undercut. The door height should be measured from the bottom of the hanger bolt on the trolly assembly (49.1776) to the floor minus the 1/2" undercut (Figure 4 & Detail F).

25. Remove door caps from both edges of the door and set them aside (Detail F).

26. Remove two 1/4 -20 x 1 3/4" screws (49.1151), channel and shims from the bottom of the aluminum door (Detail F).

27. Re-stack the required amount of shims with the bottom channel to achieve the door height measurement noted (Detail F).

28. For a shim thickness of 0" to 3/4", use two 1/4 -20 x 1 1/4" screws (49.0001) to secure the bottom channel to the door. For a shim thickness of 3/4" to 1 1/4", use two 1/4 -20 x 1 3/4" screws (49.1151) to secure the bottom channel to the door (Detail F).

29. Cut door caps to the height of door and re-install (Detail F).

Sliding Door Hanger Assembly

30. To hang the sliding door leaf, begin by attaching the hanger brackets (50.1693) to top of door with the screws provided. For aluminum doors, use #12-24 x 3/4" pan head screws (49.1802). For wood doors, use #10 x 1 1/4" pan head screws (38.12.5023) (Figure 4, Detail A).

31. With the assistance of a second person, position the door leaf over the guide block and then slide the appropriate door hanger bracket slots into the hanger bolts on the trolley. Secure by tightening the retaining nuts on the hanger bolts (Figure 4 & Detail B).

Valance Installation

32. Measure the distance from the outside of the door frame to the end of the adjacent panel(s) and cut the valance (50.1307) to length (Figure 4).

33. Position the valance end caps (50.1558) on both ends of the track and secure using two #10-16 x 1/2" Tek screws (31.12.9081) (Figure 4 & Detail C).

34. Install the valance onto the track and end caps (Figure 4).

Door Handle Installation

35. Install door handle and lock hardware per handle instructions.

Locking Door Installation

36. For locking doors, remove the door jamb cap (50.1695) from the slot in the sliding door strike post and set it aside (Figure 4).

37. Position the sliding door strike plate (50.1700) over the cutout in the sliding door strike post. Adjust the position so that the holes of the strike plate are over the pre-drilled holes and secure using two #10-24 x 1/2" self-tapping screws (31.12.0981) (Detail D).

38. Close the door and operate the lock to check the height of the strike plate. Re-open the door, loosen the screws and adjust the height of the strike plate accordingly for proper hook bolt engagement (Detail D). Re-tighten screws to secure the strike plate in place.

39. To re-install the door jamb cap, first measure from the top of the strike plate to the top of strike post. Cut a section out of the door jamb cap to that dimension and install it back into the slot of the strike post (Figure 4 & Detail D).

40. Next, measure from the bottom of the strike plate to the floor and cut the remaining section of the door jamb cap to that length. Install the door jamb cap into the slot of the strike post (Figure 4 & Detail D).

41. Follow other instructions in this manual to complete attaching the door frame to the adjacent panels, trim and sound seal.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

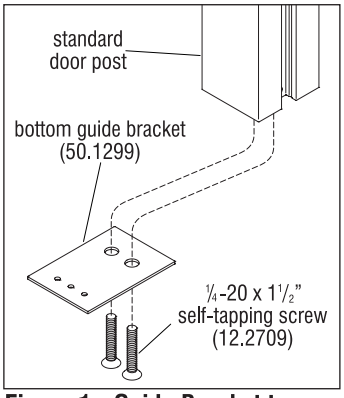


Figure 1 - Guide Bracket to Door Post Detail

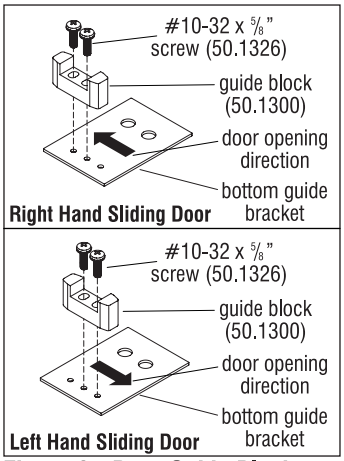


Figure 2 - Door Guide Block Placement Detail

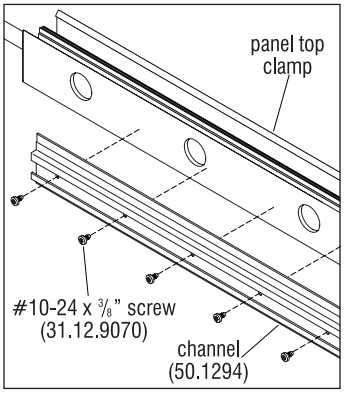


Figure 3 - Channel to Panel Clamp Detail

LUS-G Full-Height Glass Sliding Door Installation

Door Frame Assembly & Installation

Note: At both sides of the door frame will install a standard non-locking door post (50.1287.NL). Per the space-planning layout, the post on one side will receive a bottom guide bracket (50.1299) and one post will not. Each must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the "standard non-locking door post" "with guide bracket" must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figure 4).

2. Locate the standard non-locking door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

3. To determine what length the opposite side "standard door post" (non-locking or locking) (without guide bracket) should be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 4).

4. Locate the "standard door post" (non-locking or locking) (without guide bracket), measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that recorded length (Figure 4).

5. Stand both door posts up under the ceiling rail at their respective installation locations, take into account the bottom guide bracket which will be installed to the standard non-locking door post later, and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 4).

6. Lay the posts with the top frame channel onto a soft protective surface on the floor, in the correct orientation. Secure the three pieces together using four ¼ -20 x 2" Torx screws (50.1780) (Figure 4).

7. Install the guide block on the bottom guide bracket in the correct position using two #10-32 x ⅝" Torx screws (50.1326) (Figure 2).

8. Install the bottom guide bracket onto the door post using two ¼ -20 x 1½" self-tapping screws (12.2709) (Figure 2).

9. Stand the door frame assembly up and into the ceiling rail.

Sliding Door Track Installation

10. To mount the sliding door track assembly (50.1298), start by installing the channel (50.1294) to the panel top clamp on the adjacent panel (Figures 3 & 4). Position the channel on the panel clamp and push the channel up until it fully seats against the ceiling rail. Secure the channel using twelve #10-24 x ⅝" screws (31.12.9070). Make sure the screws do not hit the circular openings of the panel clamp (Figure 4).

11. Install the ceiling trim (50.1277) over the channel (50.1294) butting it against the top frame channel (50.1291) (Figure 4).

12. Clean the sliding door track (50.1298) prior to installation. Make sure the track is free of debris.

13. With the assistance of two people, position the track against the top frame channel and the ceiling trim about 1⅛" from the bottom of the top frame channel to the bottom of the track (Figure 4). Mark each screw hole.

    Note: The valance should be flush with the bottom of the top frame channel when installed.

14. Remove the track and center punch each marked screw hole. Then drill pilot holes using a 5/32" drill bit.

15. Position the track over the pilot holes and secure using eight #10-24 x ¾" self-tapping screws (PC.12.0006) (Figure 4).

16. Insert the trolley assembly (soft stop trolley assembly, 50.1626 or bumper stop trolly assembly, 50.1334.2 - not shown) into the door track (Figure 4). See separate instructions included with the door stops and trolleys.

Sliding Door Leaf Assembly

17. To hang the sliding door leaf, begin by attaching the door hanger bracket assemblies to the top of the door. First, disassemble the door hanger assemblies (50.1394), leaving the hanging brackets (50.1304) still attached (Figure 4 & Detail A).

18. Insert two bushings (50.1301) into the first set of mounting holes from the outside of the door leaf (Figure 4 & Detail A).

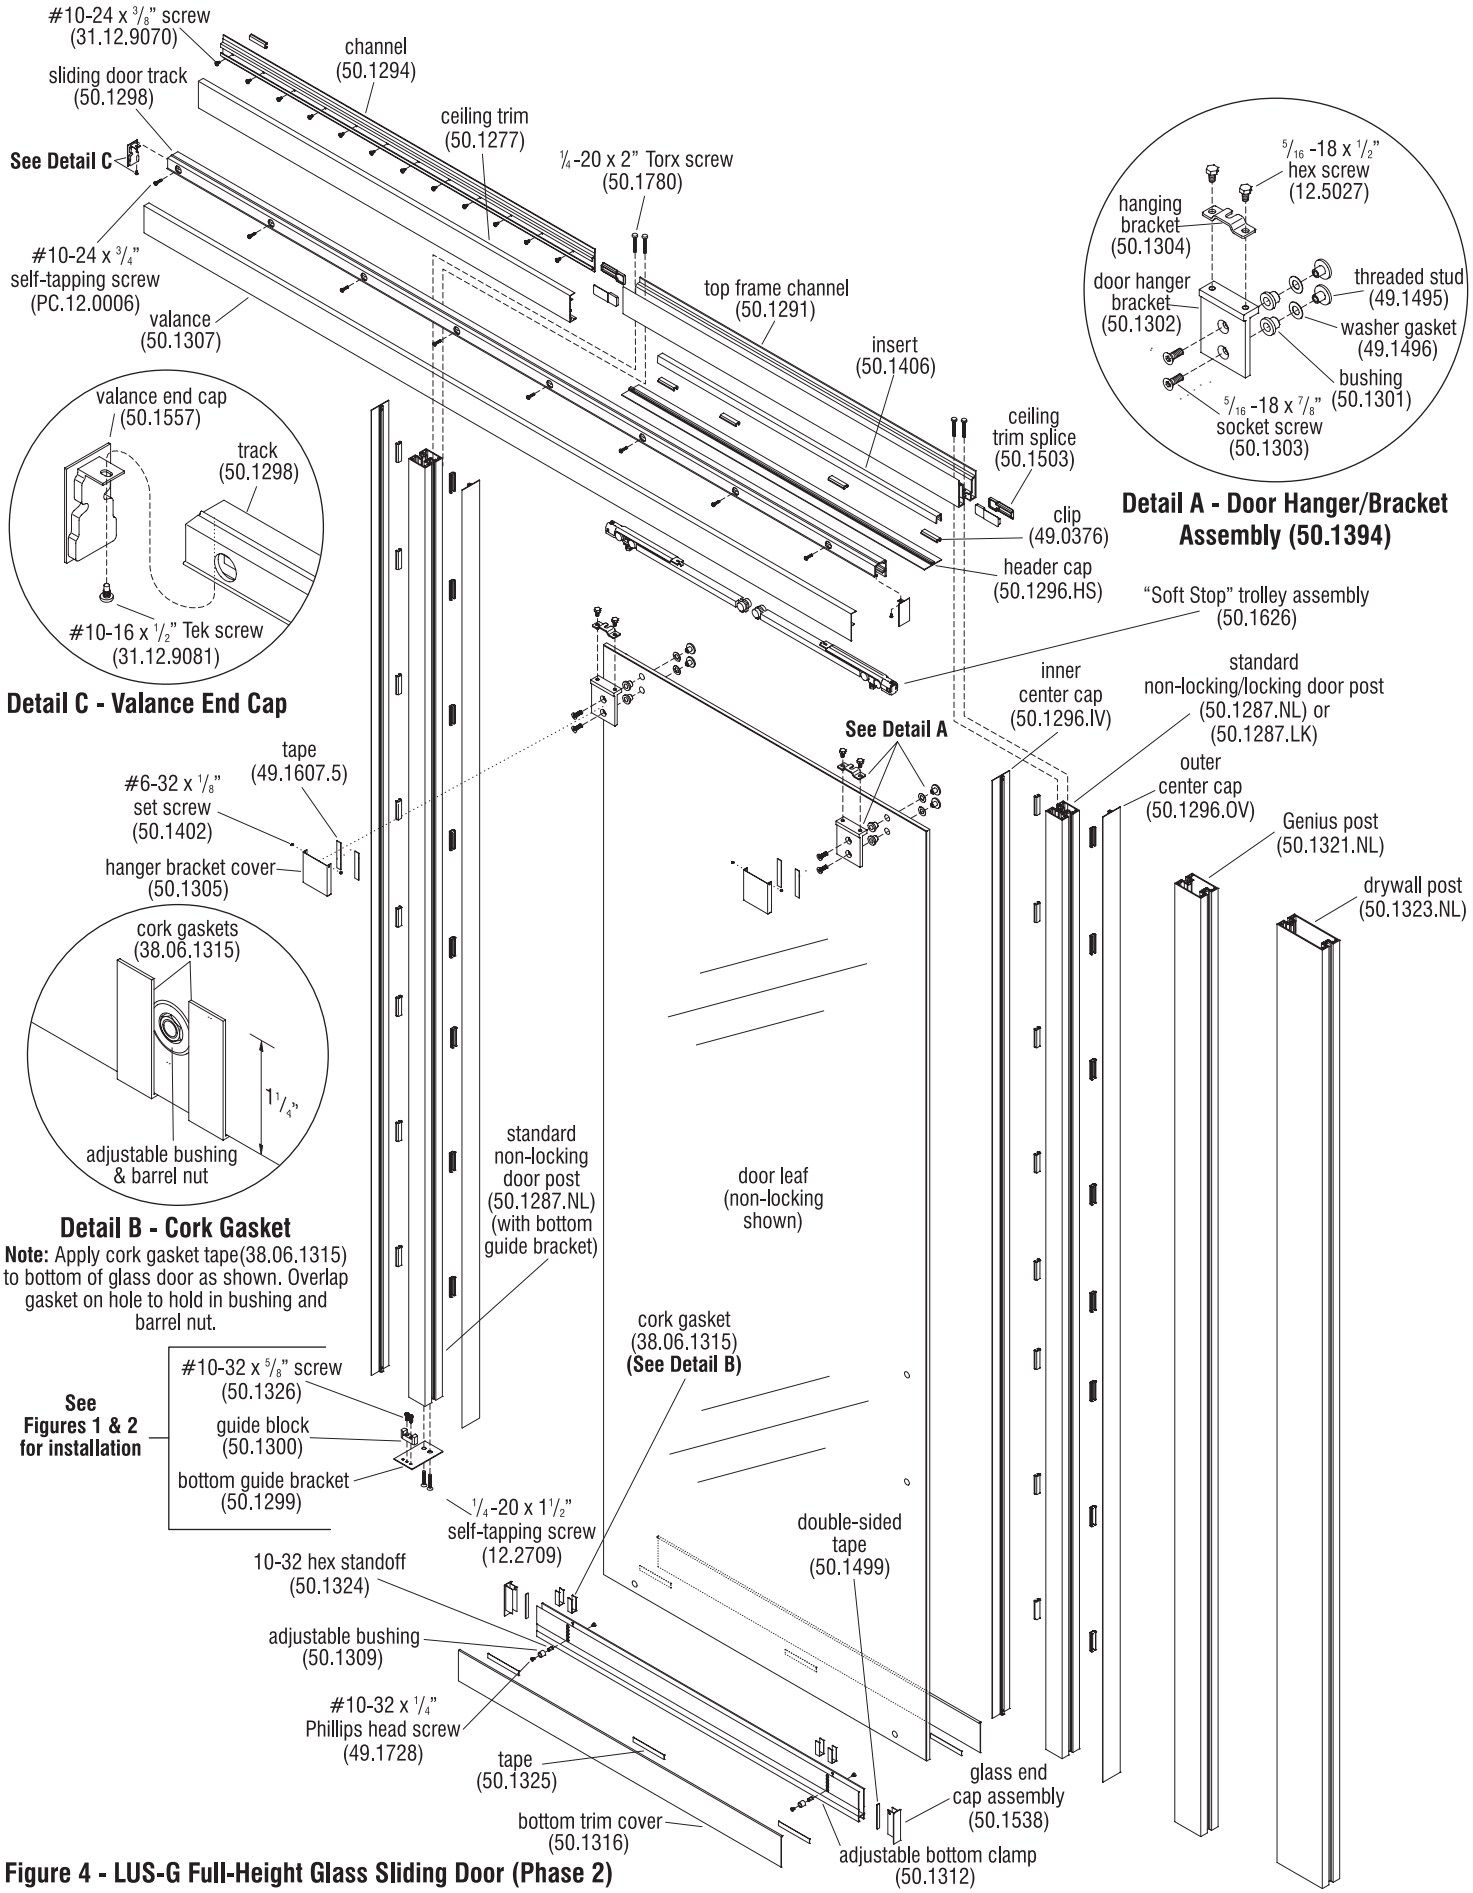


Figure 4 - LUS-G Full-Height Glass Sliding Door (Phase 2)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

19. Position the door hanger bracket (50.1302) so that it sits on the door leaf with the pre-drilled holes over the two bushings. Using the appropriate spanner and Allen wrench, secure the door hanger bracket using two $^{5}/_{16}$ -18 x $^{7}/_{8}$" socket screws (50.1303), washer gasket (49.1496) and threaded steel stud (49.1495). Repeat steps to install the second door hanger assembly (Figure 4 & Detail A).

20. Adjust the length of the hanger bolts on the trolley (50.1626) to receive the hanging bracket (50.1304) (Figure 4 & Detail A).

21. With the assistance of a second person, install the door leaf with the door hanger brackets into the hanger bolts (Figure 4 & Detail B). Tighten the retaining nuts to secure the door leaf in place. Final adjustments will be made once the adjustable bottom clamp is installed.

Adjustable Bottom Clamp Installation

22. To attach the adjustable bottom clamp (50.1312), make sure the door leaf is partially positioned over the door opening. Then insert two adjustable bushings (50.1309) into the two holes in the bottom of the door leaf (Figure 4).

23. Apply four strips of gasket cork (38.06.1315), two on each side of the two holes, overlapping each hole a little to retain the bushing at each side. Start at the top of the hole and go down around the bottom edge of the glass, and up to the top of the hole on the opposite side of the glass (Figure 4 & Detail B). Note the cork height of $1^{1}/_{4}$" at each side.

24. Slide the adjustable bottom clamp on the door leaf and over the guide block from the opposite end of the sliding door strike post (Figure 4).

25. Spin a #10-32 hex standoff (50.1324) on one of the #10-32 x $^{1}/_{4}$" Phillips head screws (49.1728). Do the same for the second set (Figure 4).

26. Position the adjustable bottom clamp to approximately ½" off the floor and install both the screw and hex standoff through the two bushings (Figure 4).

27. Install both of the second screws into the opposite end of the hex standoffs (Figure 4). Do not fully tighten.

28. Install both end caps (50.1538) with double-sided tape (50.1499) on the adjustable bottom clamp. Push the end caps all of the way in so that the cap is tight up against the edge of the glass (Figure 4).

29. Tighten the #10-32 x $^{1}/_{4}$" Phillips head screws to secure the adjustable bottom clamp to the door leaf (Figure 4).

30. Mark and cut the bottom trim covers (50.1316) to the width of the glass, then remove the release paper from the adhesive tape pads on the outside of the clamp (Figure 4).

31. Hang the covers on the top of the clamp and rotate down. Press on the covers to make sure the covers and the tape are fully seated on the adjustable bottom clamp (Figure 4).

32. Adjust the height of the door leaf by adjusting the bolts and nuts on the trolley assembly (49.1776) as required (Figure 4).

Valance Installation

33. Measure the distance from the outside of the door frame to the end of the adjacent panel(s) and cut the valance (50.1307) to length (Figure 4).

34. Position the valance end caps (50.1735) on both ends of the track and secure using two #10-16 x $^{1}/_{2}$" Tek screws (31.12.9081) (Figure 4 & Detail D).

35. Install the valance onto the track and end caps (Figure 4).

36. Follow other instructions in this manual to complete attaching the door handle, door lock, the door frame to adjacent panels, trim and sound seal.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

LUP-G Full-Height Glass Pivot Door Installation

Door Frame Assembly & Installation

Note: At one side of the door frame will be a standard strike-side door post (50.1401), and at the other, "pivot-side" will be a standard non-locking door post (50.1287.NL). The standard strike side door post comes pre-assembled with clips, molding, bulb seal, strike box and strike plate. The standard non-locking "pivot-side" door post comes pre-assembled with clips, molding, bulb seal and pivot door plate assembly at the bottom. Each must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the "standard strike-side door post" (50.1401) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 1).

2. Locate the standard strike-side door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 1).

3. To determine what length the opposite side "standard non-locking door post" (50.1287.NL) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/8" thickness of the pivot door plate (50.1369) (Figure 1).

4. Locate the standard non-locking door post and remove the two ¼-20 x 1½" screws attaching the pivot door plate (50.1369) to the underside of the door post. Then measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end (taking into account for carpet and the pivot door plate). Cut the bottom of the post off square at that length, then re-install the pivot door plate removed above in this step (Figure 1).


5. Stand both door posts up under the ceiling rail at their respective installation locations and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 1).

6. Lay the posts with the top frame channel onto a soft protective surface on the floor, in the correct orientation. Secure the pieces together using four 1/4 -20 x 2" Torx screws (50.1780) (Figure 1).

7. If not already installed, position the pivot block insert (50.1423) over the pre-drilled holes in the top frame channel and secure using two 1/4 -20 x 1/2" self-tapping screws (49.1270) (Figure 1).

8. Install the upper pivot bushing (50.1368) into the pivot block insert (Figure 1).

9. Stand the door frame assembly up and into the ceiling rail. Make sure the door frame is plumb.

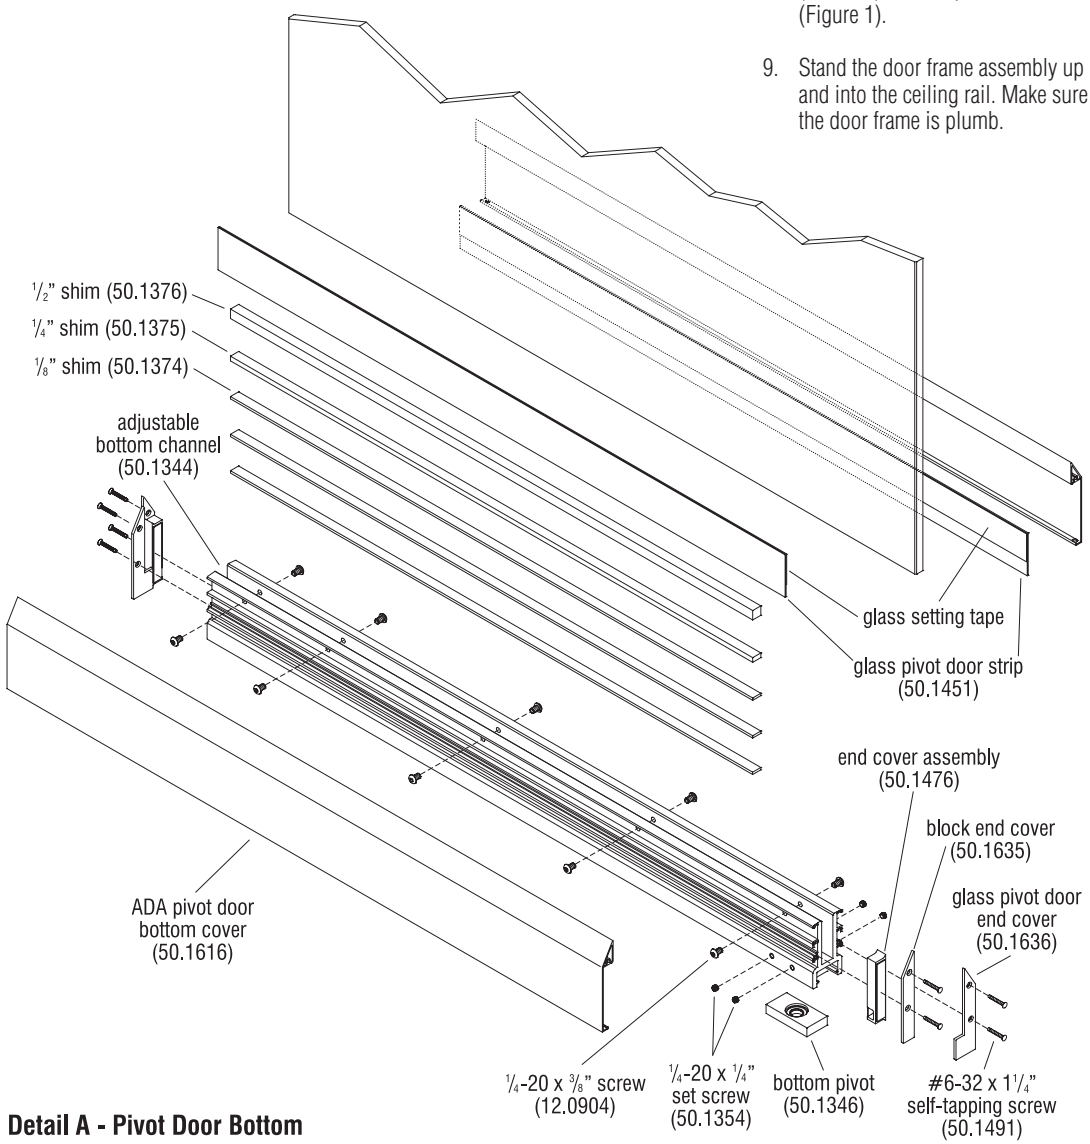

Detail A - Pivot Door Bottom

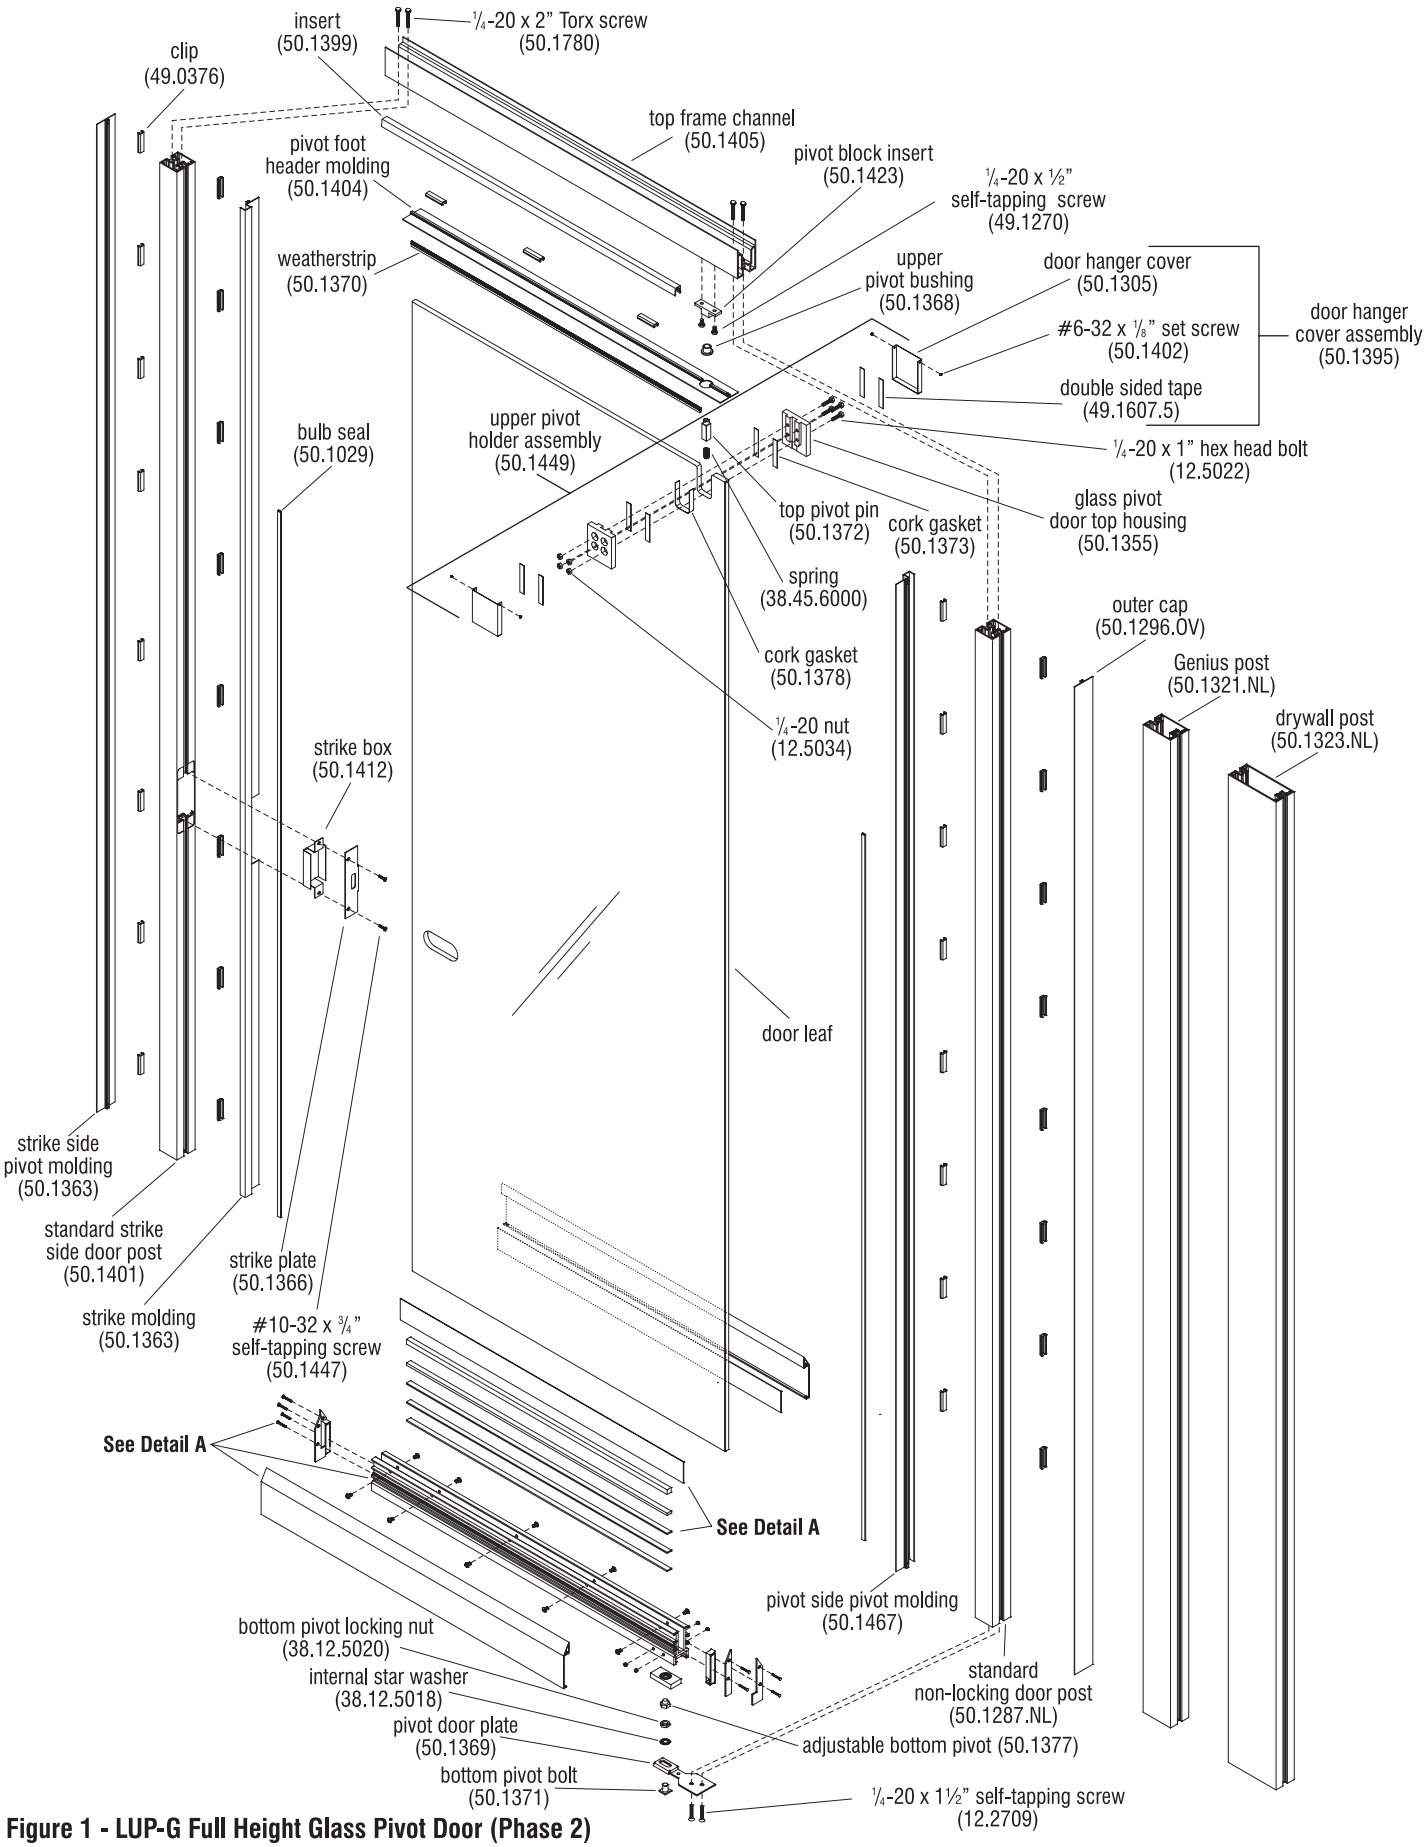


Figure 1 - LUP-G Full Height Glass Pivot Door (Phase 2)

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Door Leaf Pivot Installation

10. To prepare the pivot door leaf, begin by attaching the upper pivot holder assembly (50.1449). Apply cork gasket (50.1378) around the perimeter of the notch in the top of the door leaf (Figure 1).

11. Apply two pieces of cork gasket (50.1373) to the inside of one half of the glass pivot door top housing (50.1355) (Figure 1). Repeat this step for the other half.

12. Place both glass pivot door top housing halves (50.1355) into the notch and secure using four $^1/_4$ -20 x 1" hex head bolts (12.5022) and $^1/_4$ -20 hex nuts (12.5034). Make sure the housing halves assembly is fully seated into the notch and tighten nuts firmly (Figure 1).

13. Check to see if the housing nuts and bolts are properly tightened by temporarily inserting the spring (38.45.6000) and top pivot pin (50.1372). It should not rattle, but still move freely. Remove the pivot pin and spring once the housing assembly is properly tightened. Do not install the spring, pivot pin and trim covers at this time (Figure 1).

Adjustable Bottom Channel Installation

14. To get an accurate door height measurement, first install the bottom pivot (50.1346) into the adjustable bottom channel (50.1344) and secure using four $^1/_4$ -20 x $^1/_4$" set screws (50.1354) (Detail A).

15. Next place the adjustable bottom channel with bottom pivot onto the adjustable bottom pivot (50.1377) (Figure 1).

16. With the assistance of a second person, measure from the bottom of the upper pivot bushing (50.1368) down to the inside bottom of the adjustable bottom channel. Note the measurement for the door height and for installing the right amount of shims (Detail A).

17. To attach the bottom channel assembly to the door leaf, begin by starting $^1/_4$ -20 x $^3/_8$" screws (12.0904) into the adjustable bottom channel (50.1344) (Detail A). Do not twist screws past the inner surface of the adjustable bottom channel.

18. Place the two glass pivot door strips (50.1451) into the adjustable bottom channel so that the glass setting tape is facing inward and toward the top of the channel (Detail A).

19. Place the adjustable bottom channel with the door strips onto the bottom of the door leaf making sure that a pivot door strip is positioned on both sides of the glass (Detail A).

20. Position the adjustable bottom channel onto the bottom of the door leaf. Adjust the distance of the bottom channel by using a flat head screw driver and pushing against the edge of the pivot door strip. Push down on the pivot door strip until the distance from the top of the door leaf to the inside bottom of the adjustable bottom channel matches the previously measured height (Detail A).

21. Measure the space between the adjustable bottom channel and door leaf for the required amount shims (50.1374, 50.1375 & 50.1376) (Detail A).

22. Slide the stack of shims inside the channel between the glass and the bottom of the channel. Make sure the adjustable bottom channel and shims sit firmly against the door leaf (Detail A).

23. Tighten ten $^1/_4$ -20 x $^3/_8$" screws (12.0904) (Detail A).

Door Assembly Installation

24. With the assistance of a second person, install the door assembly onto the adjustable bottom pivot (Figure 1).

25. Insert the spring (38.45.6000) and top pivot (50.1372) into the glass pivot door top housing. Using the supplied tool, compress the spring-loaded pivot down and move the door into position, then release the spring-loaded pivot into the upper pivot bushing (Figure 1).

26. Check the door for proper height and lock engagement. Adjust the height of the door as needed by turning the adjustable bottom pivot (Figure 1).

Pivot Door Bottom Cover Installation

27. Peel the tape backer off of the end cover assembly (50.1476) (Detail A).

28. Position the end cover assembly with the adhesive end against the block end cover (50.1635) while aligning the holes in the orientation illustrated (Detail A). Press both parts firmly together to make sure they are fully seated.

29. Position the end cover assembly with the block end cover on the adjustable bottom channel and secure using a #6-32 x $1^1/_4$" self-tapping screw (50.1491) through the bottom hole (Detail A). Do not install a screw in the top hole until the bottom cover is installed.

30. Position the glass pivot door end cover (50.1636) on the adjustable bottom channel and secure using a #6-32 x $1^1/_4$" self-tapping screw (50.1491) through the bottom hole (Detail A). Do not install a screw in the top hole until the bottom cover is installed.

31. Repeat steps to install the block end cover assembly and glass pivot door end cover on the opposite end of the adjustable bottom channel (Detail A).

32. Once the end covers are installed, measure between the end covers and cut the two bottom covers (50.1616) to that measurement so they fit tightly between the end covers (Detail A).

33. Install the bottom covers onto the bottom channel by snapping them into place (Detail A).

34. Secure the bottom covers by installing four #6-32 x $1^1/_4$" self-tapping screws (50.1491) through the top holes of the block end covers and glass pivot door end covers.

35. Follow other instructions in this manual to complete attaching the door handle/lock, the door frame to adjacent panels and trim.

LUP-W Full-Height Wood Pivot Door Installation

Door Frame Assembly & Installation

Note: At one side of the door frame will be a standard strike-side door post (50.1401), and at the other, "pivot-side" will be a standard non-locking door post (50.1287.NL). The standard strike side door post comes pre-assembled with clips, molding, bulb seal, strike box and strike plate. The standard non-locking "pivot-side" door post comes pre-assembled with clips, molding, bulb seal and pivot door plate assembly at the bottom. Each must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the "standard strike-side door post" (50.1401) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 1).

2. Locate the standard strike-side door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 1).

3. To determine what length the opposite side "standard non-locking door post" (50.1287.NL) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the $^1/_8$" thickness of the pivot door plate (50.1369) (Figure 1).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

4. Locate the standard non-locking door post and remove the two ¼-20 x $1^1/_2$" screws attaching the pivot door plate (50.1369) to the underside of the door post. Then measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end (taking into account for carpet and the pivot door plate). Cut the bottom of the post off square at that length, then re-install the pivot door plate removed above in this step (Figure 1).

5. Stand both door posts up under the ceiling rail at their respective installation locations and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 1).

6. Lay the posts with the top frame channel onto a soft, protective surface on the floor, in the correct orientation. Secure the pieces together using four $^1/_4$ -20 x 2" Torx screws (50.1780) (Figure 1).

7. If not already installed, position the pivot block insert (50.1423) over the pre-drilled holes in the top frame channel and secure using two $^1/_4$ -20 x $^1/_2$" self-tapping screws (49.1270) (Figure 1).

8. Install the upper pivot bushing (50.1368) into the pivot block insert (Figure 1).

9. Stand the door frame assembly up and into the ceiling rail. Make sure the door frame is plumb.

Door Leaf Pivot Installation

10. To prepare the pivot door leaf, begin by installing the upper pivot housing (90.2407.BL). Position the upper pivot housing into the cutout in the top of the door leaf and secure using four #6 x 2" screws (38.12.5191) (Figure 1). Do not install the spring and top pivot at this time.


Adjustable Wood Pivot Channel Installation

11. To get an accurate door height measurement, slide the bottom pivot assembly (50.1415) into the adjustable wood pivot channel (50.1526) and secure using two $^1/_4$" lock washers (12.5052) and $^1/_4$ -20 x $1^1/_4$" screws (49.0001) (Detail A).

12. Next, place the adjustable wood pivot channel, with installed bottom pivot assembly onto the adjustable bottom pivot (50.1377) (Figure 1).

13. With the assistance of a second person, measure from the bottom of the upper pivot bushing down to the top of the adjustable wood pivot channel. Note the measurement for the door height and for installing the right amount of shims (Detail A).

14. To attach the adjustable wood pivot channel to the door leaf, begin by placing the adjustable wood pivot channel into the bottom of the door leaf (Detail A).

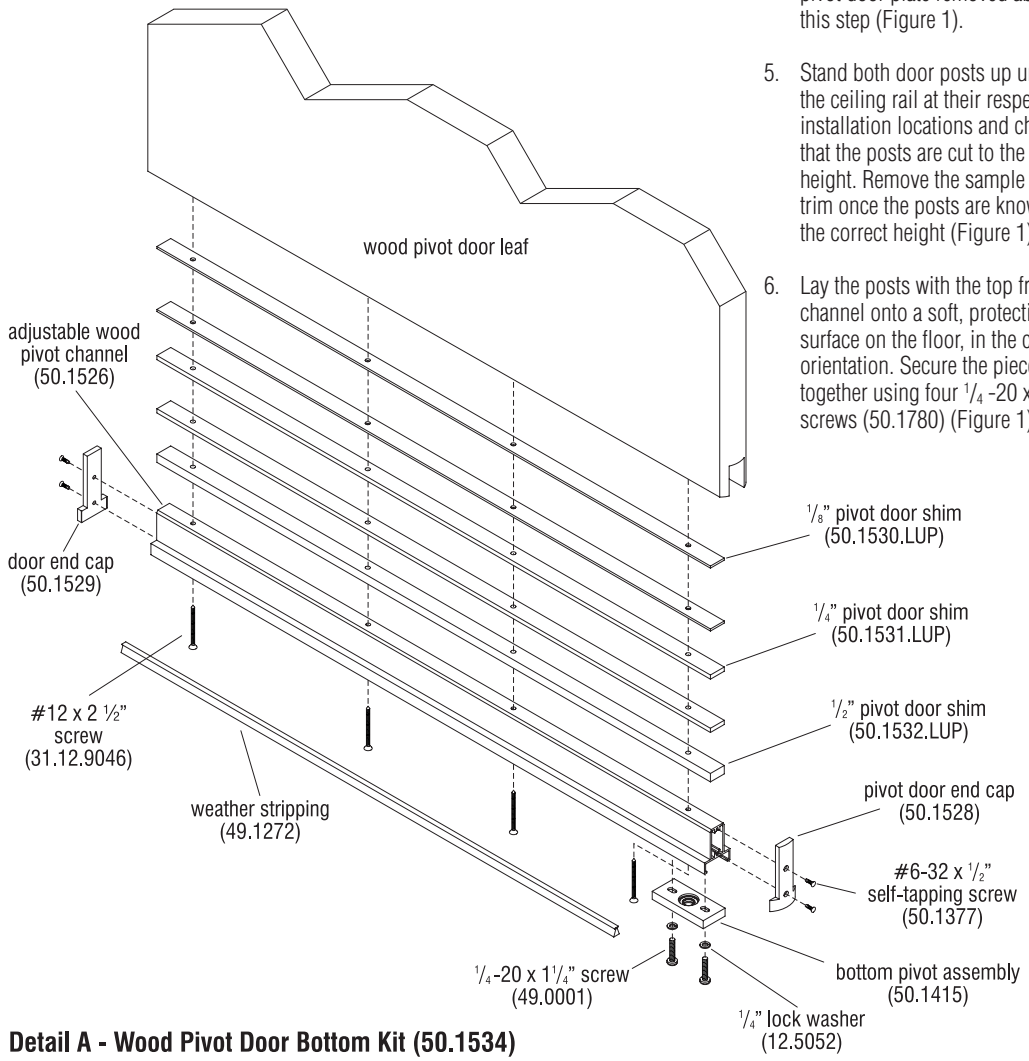

Detail A - Wood Pivot Door Bottom Kit (50.1534)

15. Measure the space between the adjustable bottom channel and door leaf for the required amount shims (50.1530.LUP, 50.1531.LUP, 50.1532.LUP) (Detail A).

16. Reposition the stack of shims with the channel into the door leaf. Make sure the adjustable bottom channel and shims sit firmly against the door leaf and secure using four #12 x 2½" screws (Detail A).

17. To get the correct height for the pivot door end caps (50.1528 & 50.1529), measure from the bottom of the adjustable wood pivot channel to the end of the notch in the door leaf (Detail A).

    Note: Another way to get the correct height measurement for the pivot door end cap is to place the cap upside down over the notch and adjustable wood pivot channel. Then mark the cap from the bottom of the channel.

18. Cut the pivot door end caps to that measurement. Cut from the extended top portion of the cap.

19. Position the pivot door end cap over the adjustable wood pivot channel and secure using two #6-32 x ½" self-tapping screws. Repeat step to install the other cap (Detail A).

Door Assembly Installation

20. With the assistance of a second person, install the door assembly onto the adjustable bottom pivot (50.1377)(Figure 1).

21. Insert the spring (38.45.6000) and top pivot (38.13.2150) into the upper pivot housing. Using the supplied tool, compress the spring-loaded pivot down and move the door into position, then release the spring-loaded pivot into the upper pivot bushing (Figure 1).

22. Check the door for proper height and lock engagement. Adjust the height of the door as needed by turning the adjustable bottom pivot (Figure 1).

23. Follow other instructions in this manual to complete attaching the door handle/lock, the door frame to adjacent panels and trim.


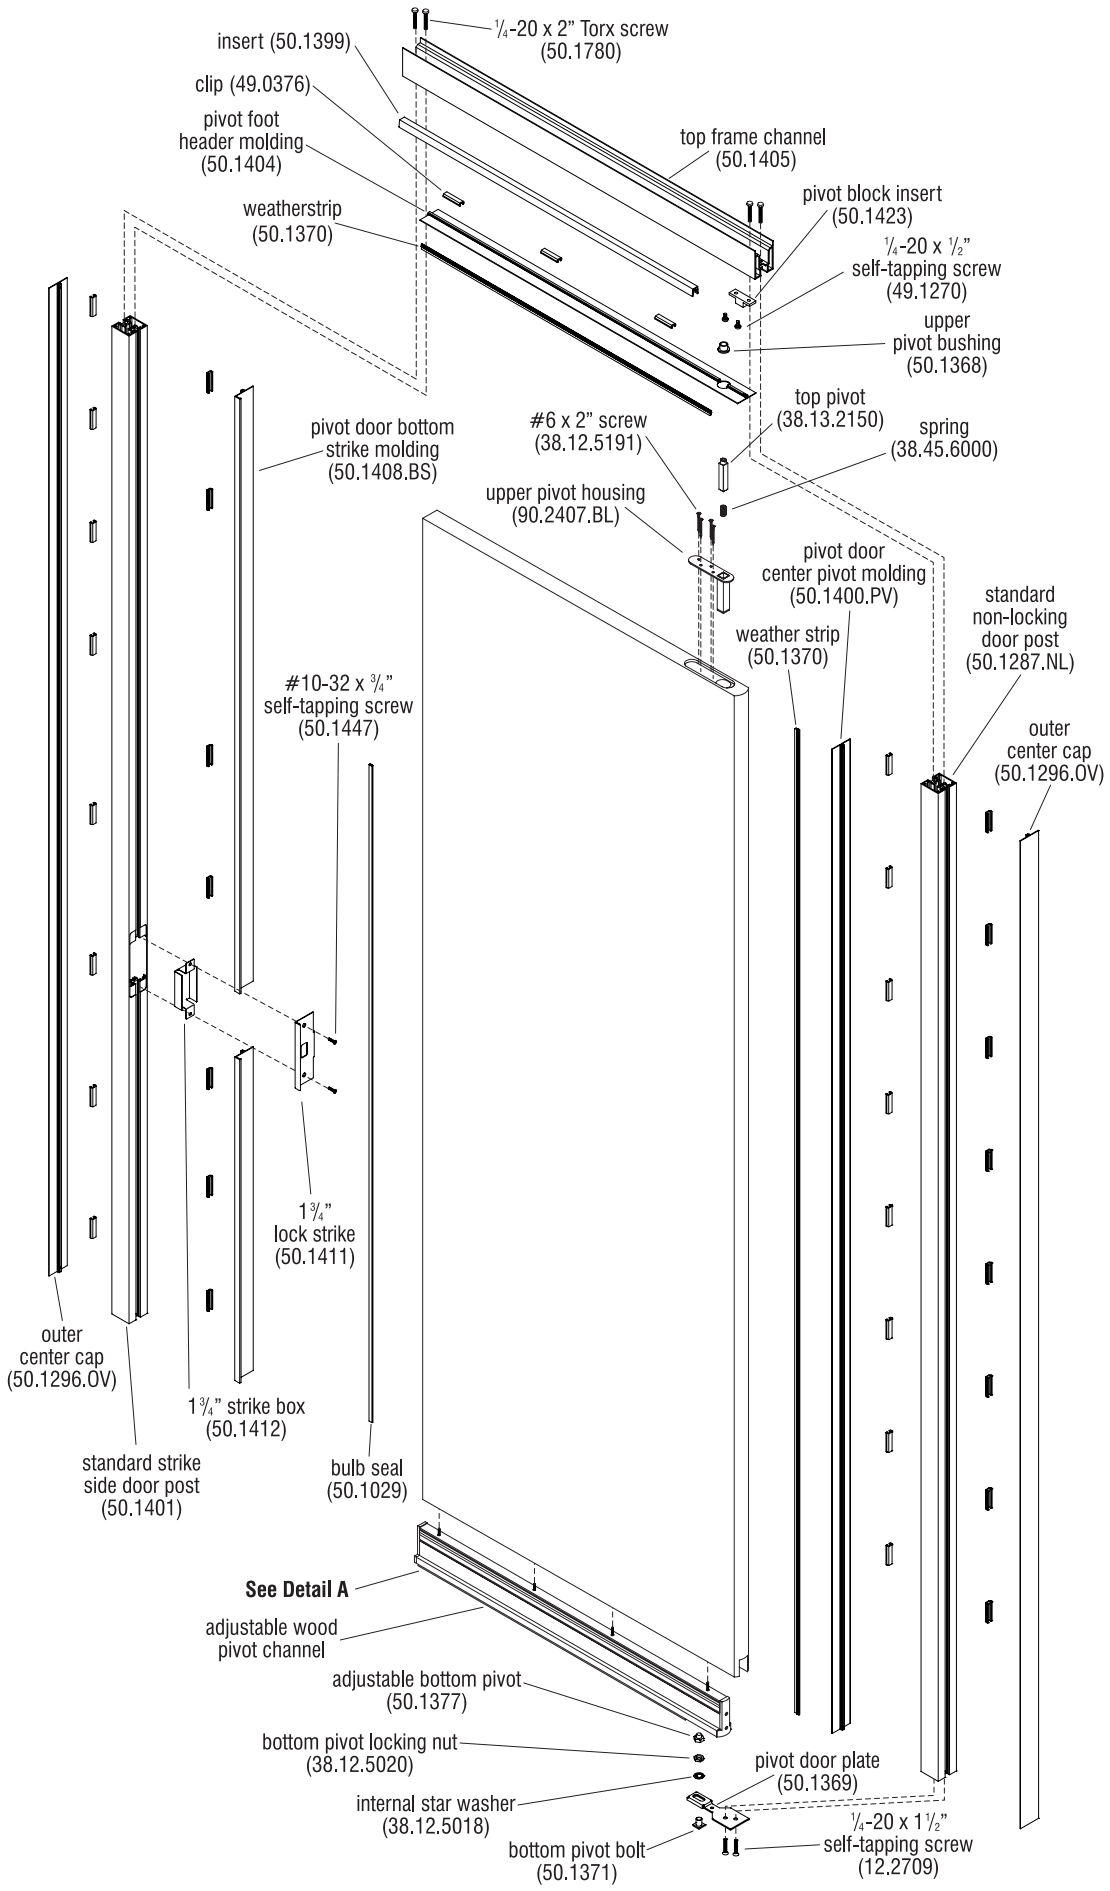



Figure 1 - LUP-W Full-Height Wood Pivot Door

CAUTION


Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

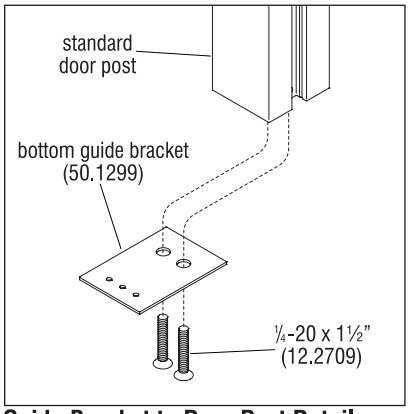

Guide Bracket to Door Post Detail
Figure 1

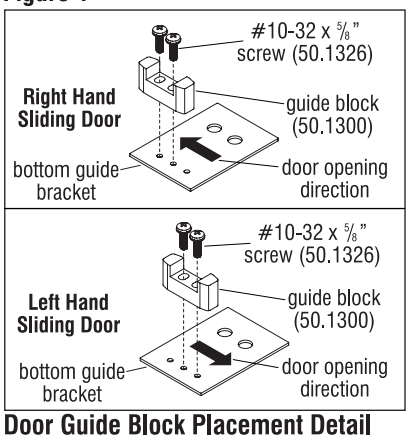

Door Guide Block Placement Detail
Figure 2

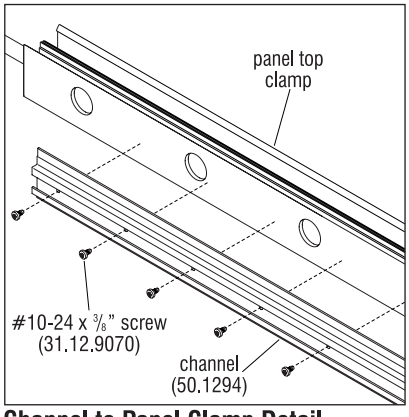

Channel to Panel Clamp Detail
Figure 3

LUDS-G Double Full-Height Glass Sliding Door Installation

Door Frame Assembly & Installation

Note: At both sides of the door frame will install a standard non-locking door post (50.1287.NL). Per the space-planning layout, both posts will receive a bottom guide bracket (50.1299) (Figure 1). Each post must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the first "standard non-locking door post" must be cut to, begin by installing into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figure 4).

2. Locate the first standard non-locking door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

3. To determine what length the second "standard non-locking door post" must be cut to, begin by installing into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figures 1 & 4).

4. Locate the second standard sliding door strike post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

5. Stand both door posts up under the ceiling rail at their respective installation locations, take into account the bottom guide bracket which will be installed to the standard non-locking door post later, and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 4).

6. Lay the posts with the top frame channel onto a soft, protective surface on the floor in the correct orientation. Secure the three pieces together using four 1/4 -20 x 2" Torx screws (50.1780) (Figure 4).

7. For both door posts, install the guide block on the bottom guide bracket in the correct position using two #10-32 x 5/8" screws (50.1326) (Figure 2).

8. For both door posts, install the bottom guide bracket onto each door post using two 1/4 -20 x 1 1/2" self-tapping screws (12.2709) (Figures 1 & 4).

9. Stand the door frame assembly up and into the ceiling rail.

Sliding Door Track Installation

10. To mount the sliding door track assembly (50.1298), start by installing the channel (50.1294) to the panel top clamp on the adjacent panel (Figures 3 & 4). Position the channel on the panel clamp and push the channel up until it fully seats against the ceiling rail. Secure the channel using twelve #10-24 x 5/8" screws (31.12.9070). Make sure the screws do not hit the circular openings of the panel clamp (Figure 4).

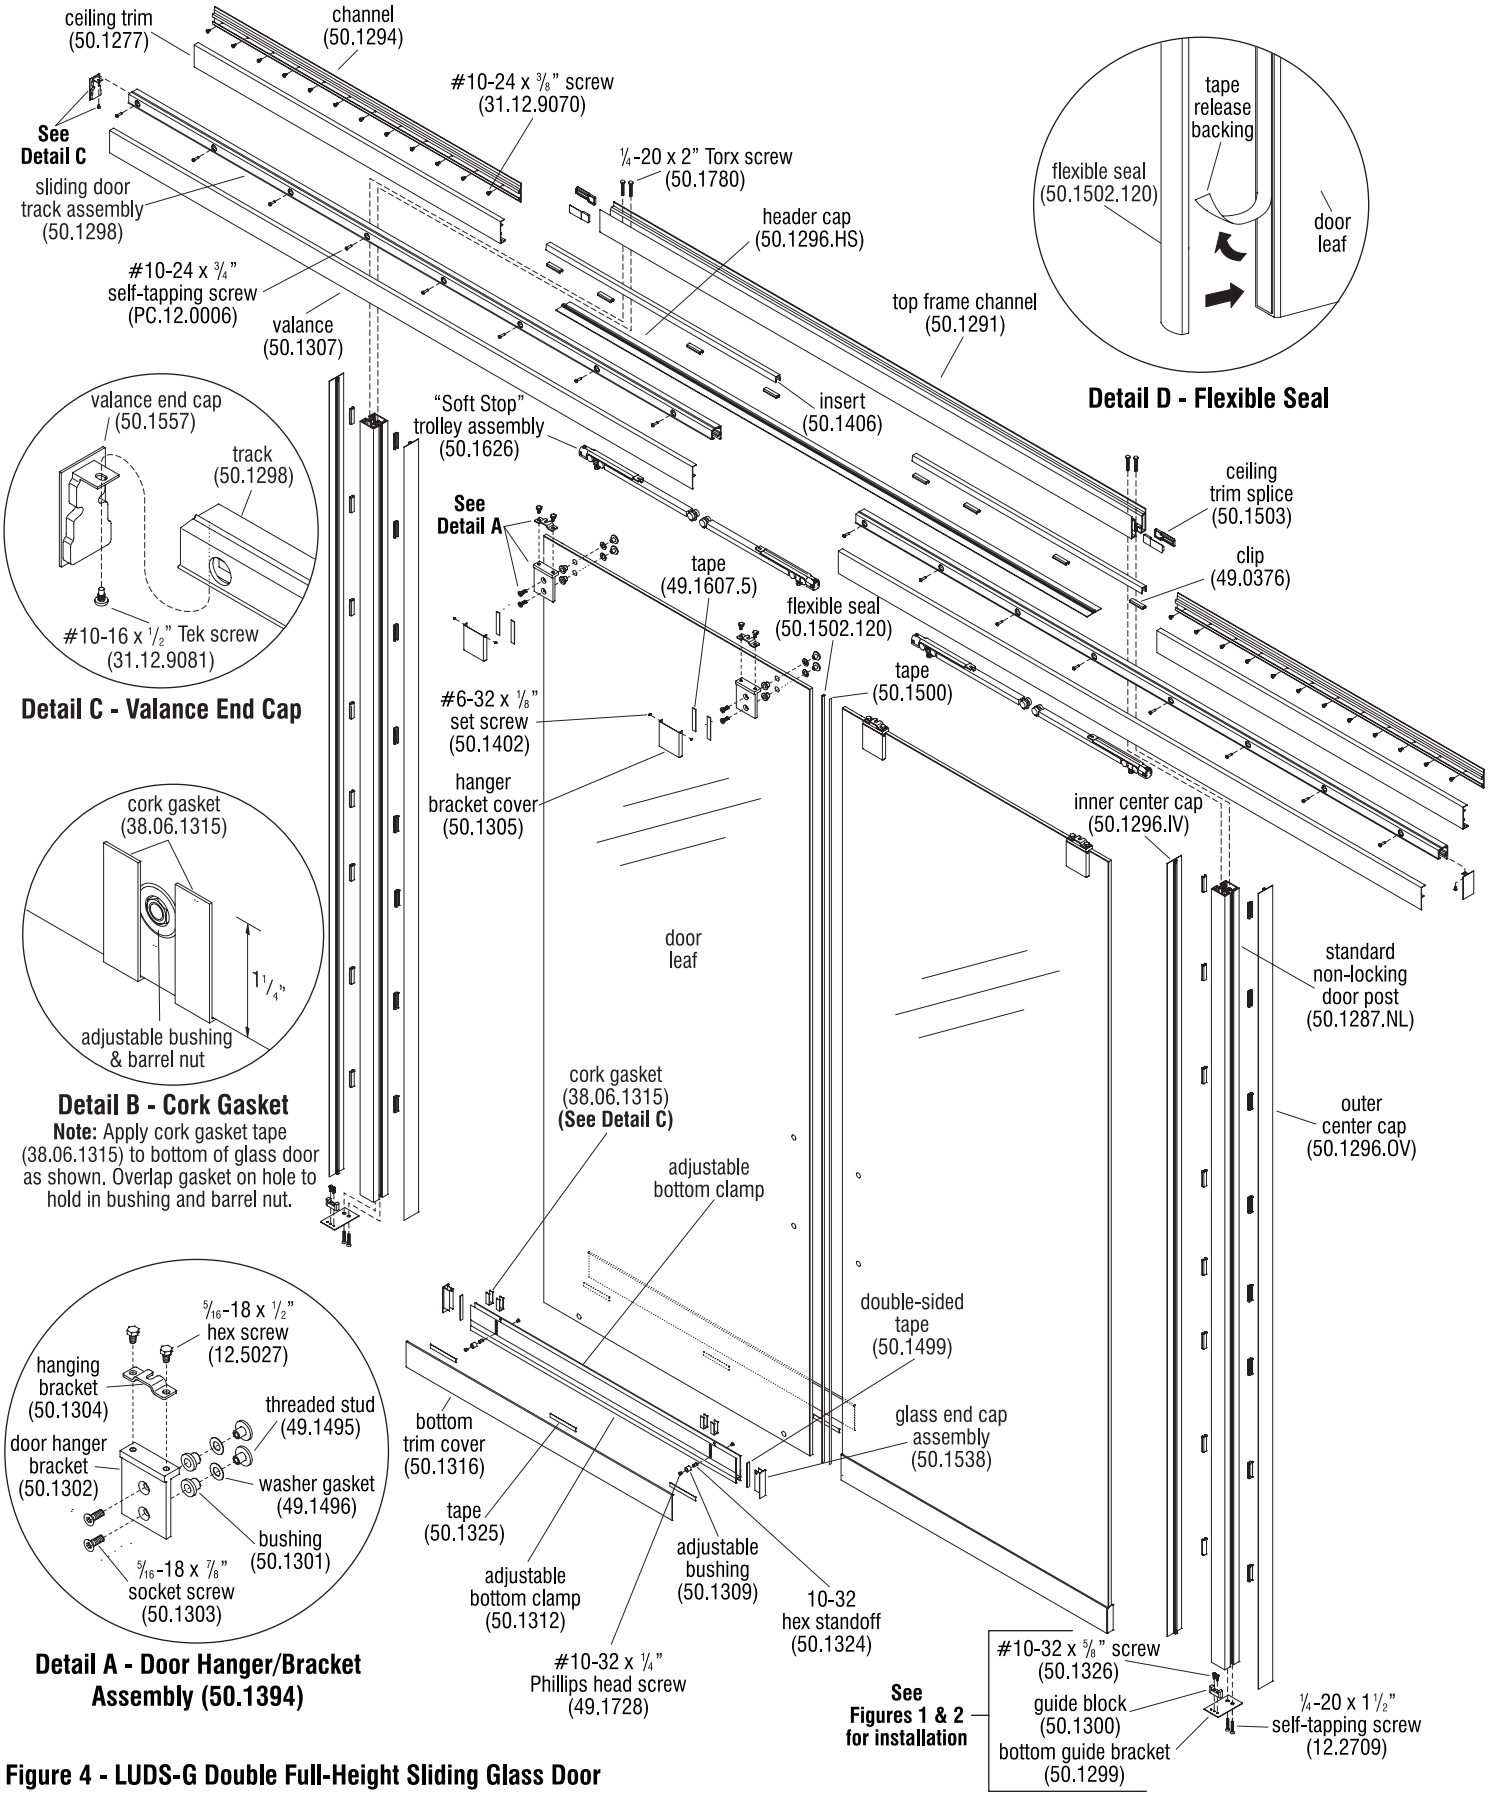


Figure 4 - LUDS-G Double Full-Height Sliding Glass Door

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

11. Install the ceiling trim (50.1277) over the channel (50.1294) butting it against the top frame channel (50.1291) (Figure 4).

12. Clean the sliding door track (50.1298) prior to installation. Make sure the track is free of debris.

13. With the assistance of two people, position the track against the top frame channel and the ceiling trim about $1^1/_8$" from the bottom of the top frame channel to the bottom of the track (Figure 4). Mark each screw hole.

    Note: The valance should be flush with the bottom of the top frame channel when installed.

14. Remove the track and center punch each marked screw hole. Then drill pilot holes using a $^5/_{32}$" drill bit.

15. Position the track over the pilot holes and secure using eight #10-24 x $^3/_4$" self-tapping screws (PC.12.0006) (Figure 4).

16. Insert the trolley assembly (soft stop trolley assembly, 50.1626 or bumper stop trolly assembly, 50.1334.2 - not shown) into the door track (Figure 4). See separate instructions included with the door stops and trolleys.

Sliding Door Leaf Assembly

17. To hang a sliding door leaf, begin by attaching the door hanger bracket assemblies to the top of the door. First, disassemble the door hanger assemblies (50.1394), leaving the hanging brackets (50.1304) still attached (Figure 4 & Detail A).

18. Insert two bushings (50.1301) into the first set of mounting holes from the outside of the door leaf (Detail A).

19. Position the door hanger bracket (50.1302) so that it sits on the door leaf with the pre-drilled holes over the two bushings. Using the appropriate spanner and Allen wrench, secure the door hanger bracket using two $^5/_{16}$ -18 x $^7/_8$" socket screws (50.1303), washer gasket (49.1496) and threaded steel stud (49.1495). Repeat steps to install the remaining door hanger assemblies on both doors (Figure 4 & Detail A).

20. Adjust the length of the hanger bolts on both trollies (50.1626) to receive the hanging brackets (50.1304) (Figure 4 & Detail A).

21. With the assistance of a second person, install the door leaf with the door hanger brackets into the hanger bolts (Figure 4). Tighten the retaining nuts on the hanger bolts to secure the door leaf in place. Repeat step to install the other door leaf. Final adjustments will be made once the adjustable bottom is installed.

Adjustable Bottom Clamp Installation

22. To attach the adjustable bottom clamp (50.1312), make sure the door leaf is partially positioned over the door opening. Then insert two adjustable bushings (50.1309) into the two holes in the bottom of the door leaf (Figure 4).

23. Apply four strips of gasket cork (38.06.1315), two on each side of the two holes, overlapping each hole a little to retain the bushing attach side. Start at the top of the hole and go down around the bottom edge of the glass and up to the top of the hole on the opposite side of the glass (Figure 4 & Detail B). Note the cork height of $1^1/_4$" at each side.

24. Slide the adjustable bottom clamp on the door leaf and over the guide block from the opposite end of the sliding door strike post (Figure 4).

25. Spin a 10-32 hex standoff (50.1324) on one of the #10-32 x $^1/_4$" Phillips head screws (49.1728). Do the same for the second set (Figure 4).

26. Position the adjustable bottom clamp to approximately ½" off the floor and install both the screw and hex standoff through the two bushings (Figure 4).

27. Install both of the second screws into the opposite end of the hex standoffs (Figure 4). Do not fully tighten.

28. Install both glass end caps (50.1538) with double-sided tape (50.1499) on the adjustable bottom clamp. Push the end caps all of the way in so that the cap is tight up against the edge of the glass (Figure 4).

29. Tighten the #10-32 x $^1/_4$" Phillips head screws to secure the adjustable bottom clamp to the door leaf (Figure 4).

30. Mark and cut the bottom trim covers (50.1316) to the width of the glass, then remove the release paper from the adhesive tape pads on the outside of the clamp (Figure 4).

31. Hang the covers on the top of the bottom clamp and rotate down. Press on the covers to make sure the covers and the tape are fully seated on the adjustable bottom clamp (Figure 4).

32. Adjust the height of the door leaf by adjusting the bolts and nuts on the trolley assembly (50.1626) as required (Figure 4).

Valance Installation

33. Measure the distance from the outside of the door frame to the end of the adjacent panel(s) and cut the valance (50.1307) to length (Figure 4).

34. Position the valance end caps (50.1735) on both ends of the track and secure using two #10-16 x $^1/_2$" screws (31.12.9081) (Figure 4 & Detail C).

35. Install the valance onto the track and end caps (Figure 4).

Flexible Seal Installation

Note: Full-height double-sliding doors require that a flexible seal be installed to one of the door leafs where the double-sliding doors meet. Mounting tape and seal are supplied by the factory and must be installed.

36. At the edge of one glass door panel, where the two panels meet, use Silane Glass Treatment AP115 to clean the edge of one door leaf. Apply the mounting tape (50.1500) to the clean edge of the door leaf (Figure 4 & Detail D).

37. Before applying the seal to the edge with mounting tape, clean the mounting surface of the seal with Silane Glass Treatment AP115. Peel away the tape release backing from the glass edge and apply the flexible seal (50.1502.120) to the door leaf. Use the rigid seal alignment tool to install the flexible seal (Figure 4 & Detail D).

38. Follow other instructions in this manual to complete attaching the door handle, door lock, the door frame to adjacent panels, trim and sound seal.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

LUCS Double Full-Height Glass Sliding Door Installation

Door Frame Assembly & Installation

Note: At both sides of the door frame will install a standard non-locking door post (50.1287.NL). Per the space-planning layout, both posts will receive a bottom guide bracket (50.1299) (Figure 1). Each post must be cut accurately to size, to fit their installation locations by following the instructions below.

1. To determine what length the first "standard non-locking door post" must be cut to, begin by installing into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figure 4).

2. Locate the first standard non-locking door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

3. To determine what length the second "standard non-locking door post" must be cut to, begin by installing into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the 1/16" thickness of the bottom guide bracket (50.1299) (Figures 1 & 4).

4. Locate the second standard sliding door strike post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 4).

5. Stand both door posts up under the ceiling rail at their respective installation locations, take into account the bottom guide brackets which will be installed to the standard non-locking door posts later, and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 4).

6. Lay the posts with the top frame channel onto a soft, protective surface on the floor in the correct orientation. Secure the pieces together using four 1/4 -20 x 2" Torx screws (50.1780) (Figure 4).

7. For both door posts, install the guide block on the bottom guide bracket in the correct position using two #10-32 x 5/8" screws (50.1326) (Figure 2).

8. For both door posts, install the bottom guide bracket onto each door post using two 1/4 -20 x 1 1/2" self-tapping screws (12.2709) (Figures 1 & 4).

9. Stand the door frame assembly up and into the ceiling rail.

Sliding Door Track Installation

10. To mount the sliding door track assembly (50.1298), start by installing the channel (50.1294) to the panel top clamp on the adjacent panel (Figures 3 & 4). Position the channel on the panel clamp and push the channel up until it fully seats against the ceiling rail. Secure the channel using twelve #10-24 x 5/8" screws (31.12.9070). Make sure the screws do not hit the circular openings of the panel clamp (Figure 4).

11. Install the ceiling trim (50.1277) over the channel (50.1294) butting it against the top frame channel (50.1291) (Figure 4).

12. Clean the sliding door track (50.1298) prior to installation. Make sure the track is free of debris.


13. With the assistance of two people, position the track against the top frame channel and the ceiling trim about 1 1/8" from the bottom of the top frame channel to the bottom of the track (Figure 4). Mark each screw hole.

    Note: The valance should be flush with the bottom of the top frame channel when installed.


14. Remove the track and center punch each marked screw hole. Then drill pilot holes using a 5/32" drill bit.

15. Position the track over the pilot holes and secure using eight #10-24 x 3/4" self-tapping screws (PC.12.0006) (Figure 4).


16. Insert the trolley assembly (soft close trolley assembly, 50.1679 or bumper stop trolly assembly, 50.1680 - not shown) into the door track (Figure 4). See separate instructions included with the door stops and trolleys.

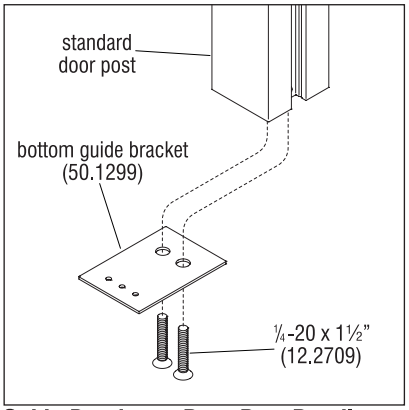

Guide Bracket to Door Post Detail
Figure 1

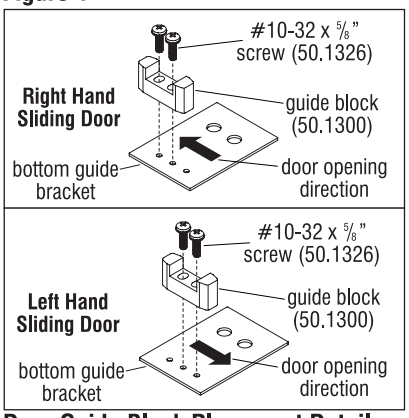

Door Guide Block Placement Detail
Figure 2

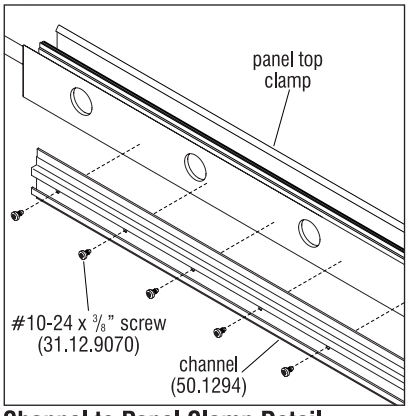

Channel to Panel Clamp Detail
Figure 3

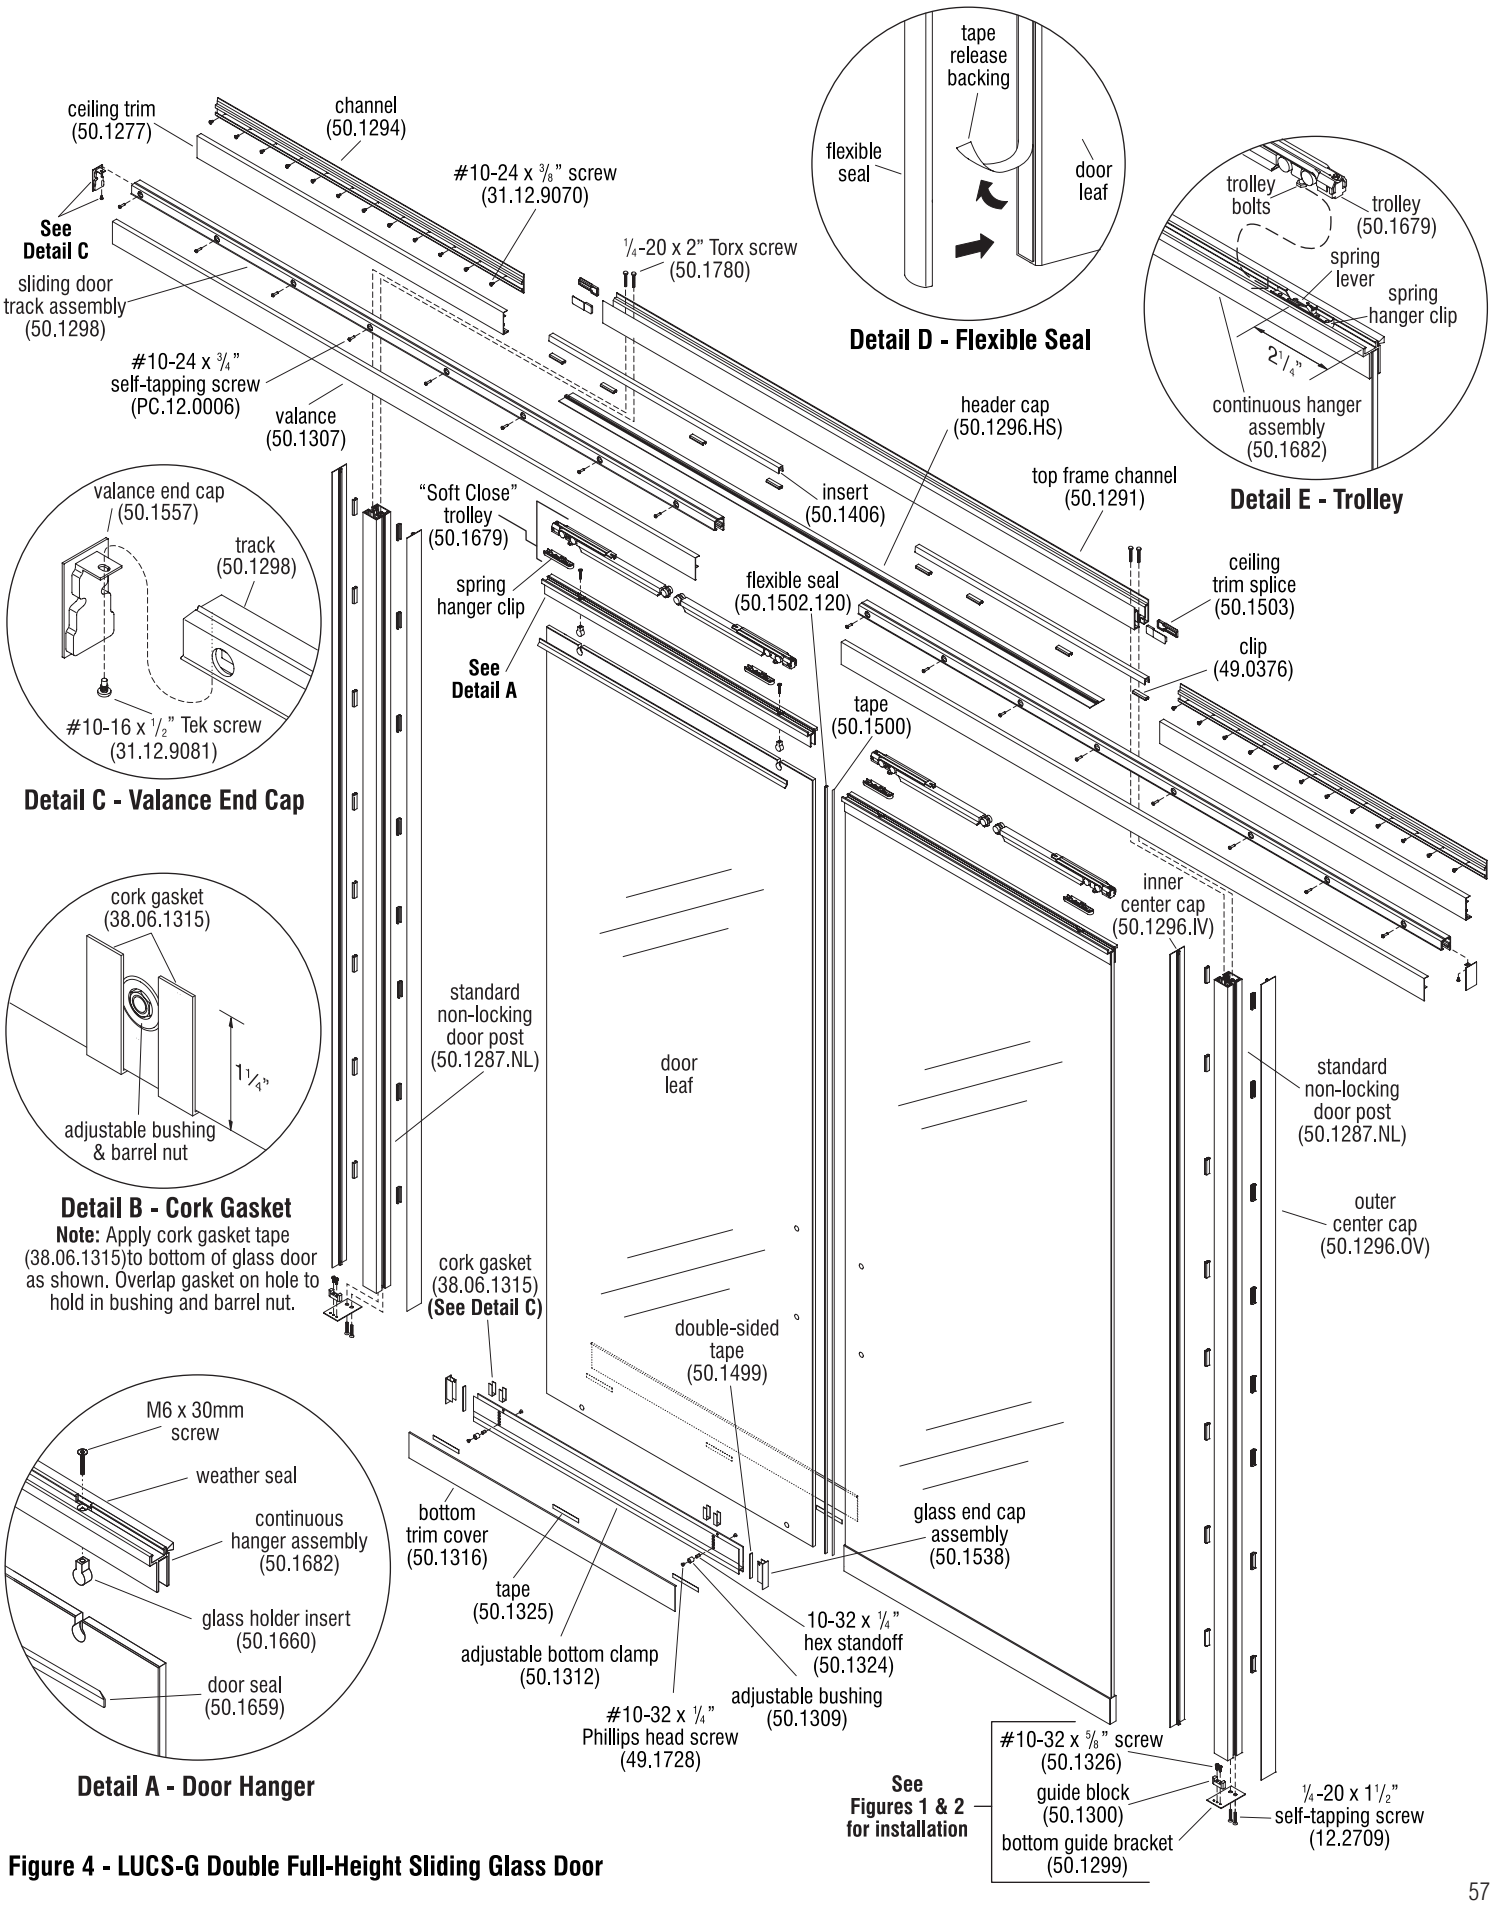


Figure 4 - LUCS-G Double Full-Height Sliding Glass Door

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Sliding Door Leaf Assembly

17. To hang the sliding door leaf, begin by attaching the continuous hanger assembly (50.1682) to the top of the door leaf. First, apply a strip of seal (50.1659) across the top of the door leaf aligning the non-taped edge to the top edge of the door leaf (Figure 4 & Detail A).

    Note: Seal can be applied to either side of door leaf. The seal will act as a shim between the continuous hanger assembly and the glass.

18. Next, remove the M6 x 30mm screws from the glass holder inserts (50.1660) and place the glass holder inserts into the notches at the top of door leaf. Then, slide the continuous hanger assembly over the top of the door leaf (Figure 4 & Detail A).

19. Orient the continuous hanger assembly so the weather seal side faces the door frame. Attach the hanger to the glass using the two M6 x 30mm screws through the countersunk holes in the top of the hanger assembly (Figure 4 & Detail A).

    Note: Spring hanger clips are handed, so be sure to orientate the spring hanger clips so the spring lever always faces to the outside of the door leaf and pivots away from the door frame.

20. Slide the spring hanger clips into the slot in the continuous hanger assembly to the dimension shown in Detail E and tighten screws.

21. With the assistance of a second person, hang the door by first aligning the trolley bolts with the spring hanger clips. The trolley bolts slide into the spring hanger clips and lock into place with spring levers (Figure 4 & Detail E).

Adjustable Bottom Clamp Installation

22. To attach the adjustable bottom clamp (50.1312), make sure the door leaf is partially positioned over the door opening. Then insert two adjustable bushings (50.1309) into the two holes in the bottom of the door leaf (Figure 4).

23. Apply four strips of gasket cork (38.06.1315) two on each side of the two holes, overlapping each hole a little to retain the bushing of each side. Start at the top of the hole and go down around the bottom edge of the glass to the top of the hole on the opposite side of the glass (Figure 4 & Detail B). Note the cork height of 1 1/4" at each side.

24. Slide the adjustable bottom clamp on the door leaf and over the guide block from the opposite end of the sliding door strike post (Figure 4).

25. Spin a 10-32 hex standoff (50.1324) on one of the #10-32 x 1/4" Phillips head screws (49.1728). Do the same for the second set (Figure 4).

26. Position the adjustable bottom clamp to approximately ½" off the floor and install both the screw and hex standoffs through the two bushings (Figure 4).

27. Install both the second screws into the opposite end of the hex standoffs (Figure 4). Do not fully tighten.

28. Install both end caps (50.1538) with double-sided tape (50.1499) on the adjustable bottom clamp. Push the end caps all of the way in so that the cap is tight up against the edge of the glass (Figure 4).

29. Tighten the #10-32 x 1/4" Phillips head screws to secure the adjustable bottom clamp to the door leaf (Figure 4).

30. Mark and cut the bottom trim covers (50.1316) to the width of the glass, then remove the release paper from the adhesive tape pads on the outside of the clamp (Figure 4).

31. Hang the covers on the top of the bottom clamp and rotate down. Press on the covers to make sure the covers and the tape are fully seated on the adjustable bottom clamp (Figure 4).

32. Adjust the height of the door leaf by adjusting the bolts and nuts on the trolley assembly (50.1679) as required (Figure 4).

Valance Installation

33. Measure the distance from the outside of the door frame to the end of the adjacent panel(s) and cut the valance (50.1307) to length (Figure 4).

34. Position the valance end caps (50.1735) on both ends of the track and secure using two #10-16 x 1/2" screws (31.12.9081) (Figure 4 & Detail C).

35. Install the valance onto the track and end caps (Figure 4).

Flexible Seal Installation

Note: Full-height double-sliding doors require that a flexible seal be installed to one of the door leafs where the double-sliding doors meet. Mounting tape and seal are supplied by the factory and must be installed.

36. At the edge of one glass door panel, where the two panels meet, use Silane Glass Treatment AP115 to clean the edge of one door leaf. Apply the mounting tape (50.1500) to the clean edge of the door leaf (Figure 4 & Detail D).

37. Before applying the seal to the edge with mounting tape, clean the mounting surface of the seal with Silane Glass Treatment AP115. Peel away the tape release backing from the glass edge and apply the flexible seal (50.1502.120) to the door leaf. Use the rigid seal alignment tool to install the flexible seal (Figure 4 & Detail D).

38. Follow other instructions in this manual to complete attaching the door handle, door lock, the door frame to adjacent panels, trim and sound seal.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

LUPT-G Transom-Height Glass Pivot Door Installation

Door Frame Assembly & Installation

Note: The door frame comes pre-assembled from the factory and must be partially disassembled. At one side of the door frame will be a standard strike-side door post (50.1401), and at the other, "pivot-side" will be a standard non-locking door post (50.1287.NL). The standard strike side door post comes pre-assembled with clips, molding, bulb seal, strike box and strike plate. The standard non-locking "pivot-side" door post comes pre-assembled with clips, molding, bulb seal and pivot door plate assembly at the bottom. Each must disassembled and be cut accurately to size, to fit their installation locations by following the instructions below.

1. Reference Figure 1, page 60, to disassemble the transom height pivot door frame by removing four $^1/_4$-20 x 2" Torx screws (50.1780) at the top of the frame (two each side), and also remove four (two each side) $^1/_4$-20 x 1$^1/_4$" pan head screws (49.0001) (Figure 1). Items such as the insert (50.1399), clip (49.0376), pivot foot header molding (50.1404) and weatherstrip (50.1370) etc. are shown exploded from the bottom of the transom for reference, but do not need to be disassembled for step 2 below (Figure 1).

2. To determine what length the "standard strike-side door post" (50.1401) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 1).


3. Locate the standard strike-side door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 1).

4. To determine what length the "standard non-locking door post" (50.1287.NL) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the $^1/_8$" thickness of the pivot door plate (50.1369) (Figure 1).

5. Locate the standard non-locking door post and remove the two $^1/_4$-20 x 1$^1/_2$" screws attaching the pivot door plate (50.1369) to the underside of the door post. Then measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end (taking into account for carpet and the pivot door plate). Cut the bottom of the post off square at that length, then re-install the pivot door plate removed above in this step (Figure 1).

6. Stand both door posts up under the ceiling rail at their respective installation locations and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 1).

7. Carefully lay the posts and the top glass assembly with the top frame channel (50.1291) and transom pivot door channel (50.1430) onto a soft, protective surface on the floor in the correct orientation. Secure the posts to the top frame channel using four $^1/_4$ -20 x 2" Torx screws (50.1780) and to the transom pivot door channel using four $^1/_4$ -20 x 1$^1/_4$" pan head screws (49.0001) (Figure 1).

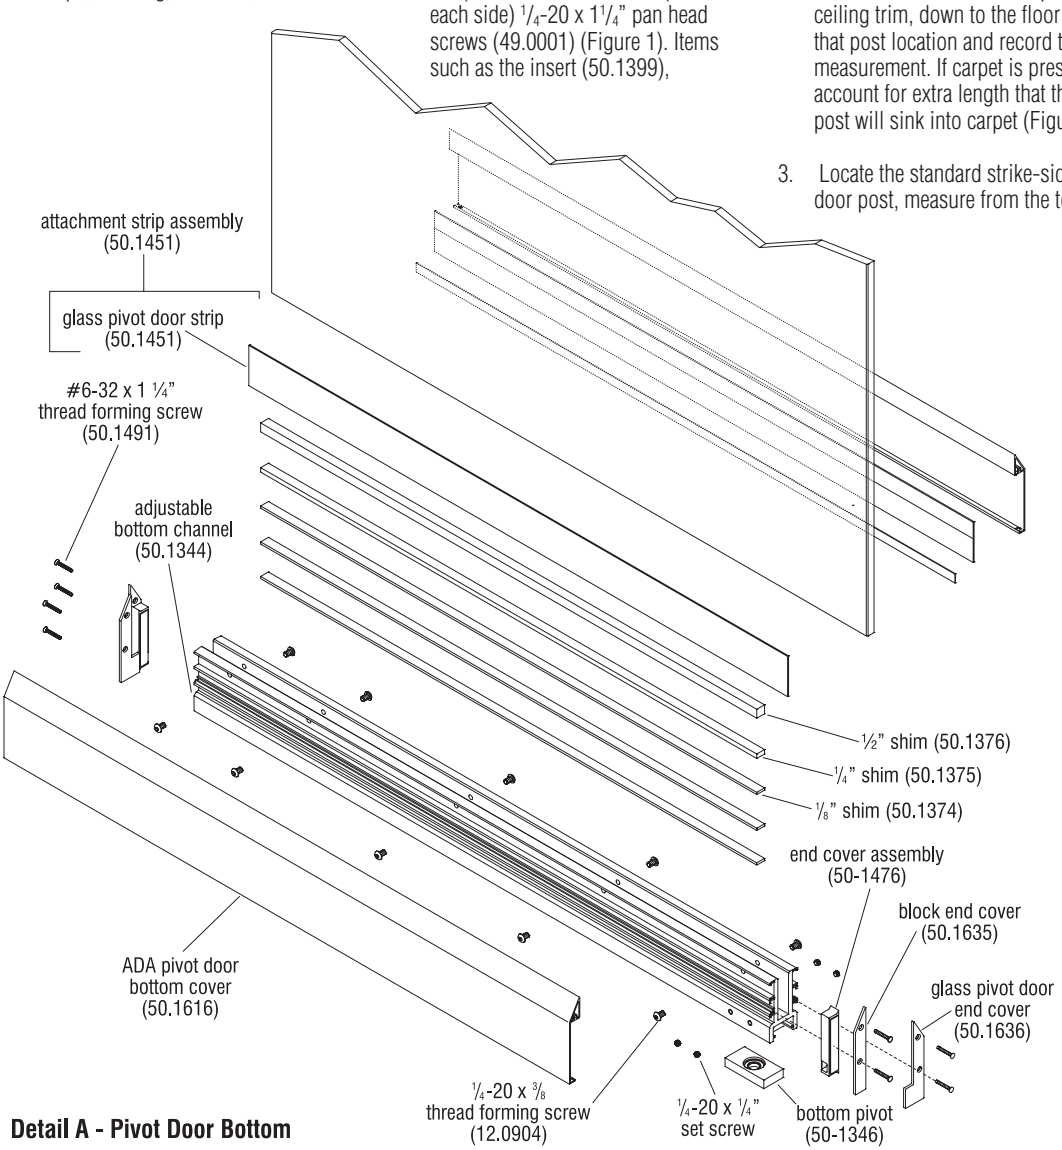

Detail A - Pivot Door Bottom

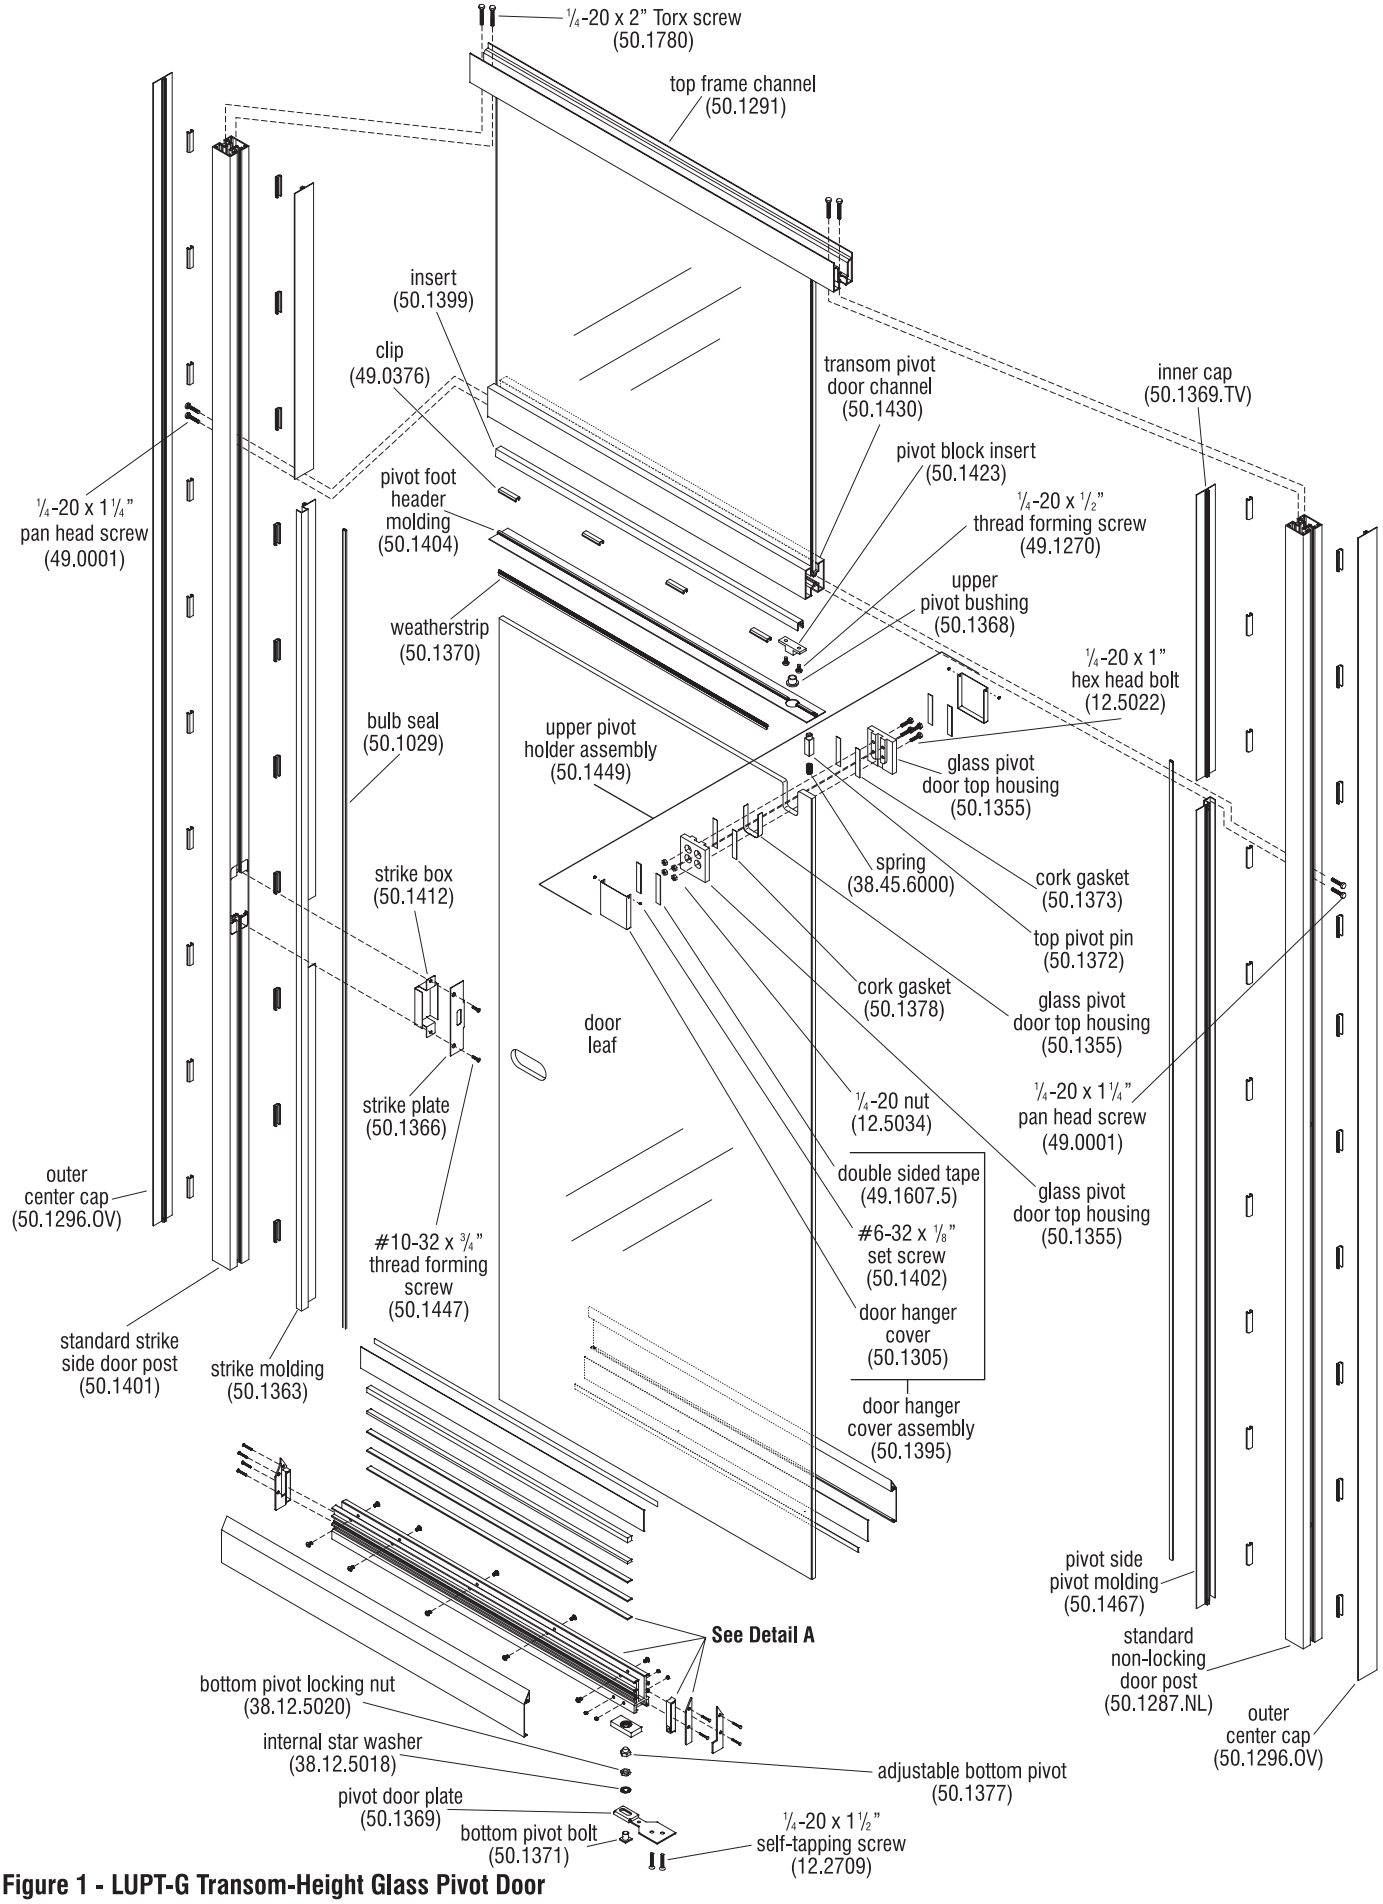


Figure 1 - LUPT-G Transom-Height Glass Pivot Door



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

8. If not already installed, position the pivot block insert (50.1423) over the pre-drilled holes in the transom pivot channel and secure using two 1/4 -20 x 1/2" thread forming screws (49.1270) (Figure 1).

9. Install the upper pivot bushing (50.1368) into the pivot block insert (Figure 1).

10. Stand the door frame assembly up and into the ceiling rail. Make sure the door frame is plumb.

Door Leaf Pivot Installation

11. To prepare the pivot door leaf, begin by attaching the upper pivot holder assembly (50.1449). Apply cork gasket (50.1378) around the perimeter of the notch in the top of the door leaf (Figure 1).

12. Apply two pieces of cork gasket (50.1373) to the inside of one half of the glass pivot door top housing (50.1355) (Figure 1). Repeat this step for the other half.

13. Place both glass pivot door top housing halves (50.1355) into the notch and secure using four 1/4 -20 x 1" hex head bolts (12.5022) and 1/4 -20 hex nuts (12.5034). Make sure the housing halves assembly is fully seated into the notch and tighten nuts firmly (Figure 1).

14. Check to see if the housing nuts and bolts are properly tightened by temporarily inserting the spring (38.45.6000) and top pivot pin (50.1372). It should not rattle, but still move freely. Remove the top pivot pin and spring once the housing assembly is properly tightened. Do not install the spring, pivot pin and trim covers at this time (Figure 1).

Adjustable Bottom Channel Installation

15. To get an accurate door height measurement, install the bottom pivot (50.1346) into the adjustable bottom channel and secure using four 1/4 -20 x 1/4" set screws (50.1354) (Detail A).

16. Next, place the adjustable bottom channel with bottom pivot onto the adjustable bottom pivot (50.1377) (Figure 1 & Detail A).

17. With the assistance of a second person, measure from the bottom of the upper pivot bushing (50.1368) down to the inside bottom of the adjustable bottom channel. Note the measurement for the door height and for installing the right amount of shims (Detail A).

18. To attach the bottom channel assembly to the door leaf, begin by starting 1/4 -20 x 3/8" screws (12.0904) into the adjustable bottom channel (50.1344) (Detail A). Do not twist screws past the inner surface of the adjustable bottom channel.

19. Place the two glass pivot door strips (50.1451) into the adjustable bottom channel so that the glass setting tape is facing inward and toward the top of the channel (Detail A).

20. Place the adjustable bottom channel with the door strips onto the bottom of the door leaf making sure that a pivot door strip plate is positioned on both sides of the glass (Detail A).

21. Position the adjustable bottom channel onto the bottom of the door leaf. Adjust the distance of the bottom channel by using a flat head screw driver and pushing against the edge of the pivot door strip. Push down on the pivot door strip until the distance from the top of the door leaf to the inside bottom of the adjustable bottom channel matches the previously measured height (Detail A).

22. Measure the space between the adjustable bottom channel and door leaf for the required amount shims (50.1374, 50.1375 & 50.1376) (Detail A).

23. Slide the stack of shims inside the channel between the glass and the bottom of the channel. Make sure the adjustable bottom channel and shims sit firmly against the door leaf (Detail A).

24. Tighten ten 1/4 -20 x 3/8" screws (12.0904) (Detail A).

Door Assembly Installation

25. With the assistance of a second person, install the door assembly onto the adjustable bottom pivot (Figure 1).

26. Insert the spring (38.45.6000) and top pivot (50.1372) into the glass pivot door top housing. Using the supplied tool, compress the spring-loaded pivot down and move the door into position, then release the spring-loaded pivot into the upper pivot bushing (Figure 1).

27. Check the door for proper height and lock engagement. Adjust the height of the door as needed by turning the adjustable bottom pivot (Figure 1).

Pivot Door Bottom Cover Installation

28. Peel the tape backer off of the end cover assembly (50.1476) (Detail A).

29. Position the end cover assembly with the adhesive end against the block end cover (50.1635) while aligning the holes in the orientation illustrated (Detail A). Press both parts firmly together to make sure they are fully seated.

30. Position end cover assembly with block end cover on the adjustable bottom channel and secure using a #6-32 x 1 1/4" self-tapping screw (50.1491) through the bottom hole (Detail A). Do not install a screw in the top hole until the bottom cover is installed.

31. Position the glass pivot door end cover (50.1636) on the adjustable bottom channel and secure using a #6-32 x 1 1/4" self-tapping screw (50.1491) through the bottom hole (Detail A). Do not install a screw in the top hole until the bottom cover is installed.

32. Repeat steps to install the block end cover assembly and glass pivot door end cover on the opposite end of the adjustable bottom channel (Detail A).

33. Once the end covers are installed, measure between the end covers and cut the two bottom covers (50.1616) to that measurement so they fit tightly between the end covers (Detail A).

34. Install the bottom covers onto the bottom channel by snapping them into place (Detail A).

35. Secure the bottom covers by installing four #6-32 x 1 1/4" self-tapping screws (50.1491) through the top holes of the block end covers and glass pivot door end covers.

36. Follow other instructions in this manual to complete attaching the door handle/lock, the door frame to adjacent panels and trim.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

LUPT-W Transom-Height Wood Pivot Door Installation

Door Frame Assembly & Installation

Note: The door frame comes pre-assembled from the factory and must be partially disassembled. At one side of the door frame will be a standard strike-side door post (50.1401), and at the other, "pivot-side" will be a standard non-locking door post (50.1287.NL). The standard strike side door post comes pre-assembled with clips, molding, bulb seal, strike box and strike plate. The standard non-locking "pivot-side" door post comes pre-assembled with clips, molding, bulb seal and pivot door plate assembly at the bottom. Each must disassembled and be cut accurately to size, to fit their installation locations by following the instructions below.

1. Reference Figure 1, page 63, to disassemble the transom height pivot door frame by removing four ¼-20 x 2" Torx screws (50.1780) at the top of the frame (two each side), and also remove four (two each side) ¼-20 x 1¼" Pan head screws (49.0001) (Figure 1). Items such as the insert (50.1399), clip (49.0376), pivot foot header molding (50.1404) and weatherstrip (50.1370) etc. are shown exploded from the bottom of the transom for reference, but do not need to be disassembled for step 2 below (Figure 1).

2. To determine what length the "standard strike-side door post" (50.1401) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet (Figure 1).


3. Locate the standard strike-side door post, measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end. Cut the bottom of the post off square at that length (Figure 1).

4. To determine what length the "standard non-locking door post" (50.1287.NL) must be cut to, first install into position a sample piece of ceiling trim onto the ceiling rail at the door post location. Determine the length by measuring from the bottom of the installed sample ceiling trim, down to the floor at that post location and record that measurement. If carpet is present, account for extra length that the post will sink into carpet, and also remove length for the ⅛" thickness of the pivot door plate (50.1369) (Figure 1).

5. Locate the standard non-locking door post and remove the two ¼-20 x 1½" screws attaching the pivot door plate (50.1369) to the underside of the door post. Then measure from the top of the post to the bottom and mark the recorded measurement onto the post at the bottom end (taking into account for carpet and the pivot door plate). Cut the bottom of the post off square at that length, then re-install the pivot door plate removed above in this step (Figure 1).

6. Stand both door posts up under the ceiling rail at their respective installation locations and check that the posts are cut to the correct height. Remove the sample ceiling trim once the posts are known to be the correct height (Figure 1).

7. Carefully lay the posts and the top glass assembly with the top frame channel (50.1405) and transom pivot door channel (50.1291) onto a soft protective surface on the floor in the correct orientation. Secure the posts to the top frame channel using four ¼ -20 x 2" Torx screws (50.1780) and to the transom pivot door channel using four ¼ -20 x 1¼" pan head screws (49.0001) (Figure 1).

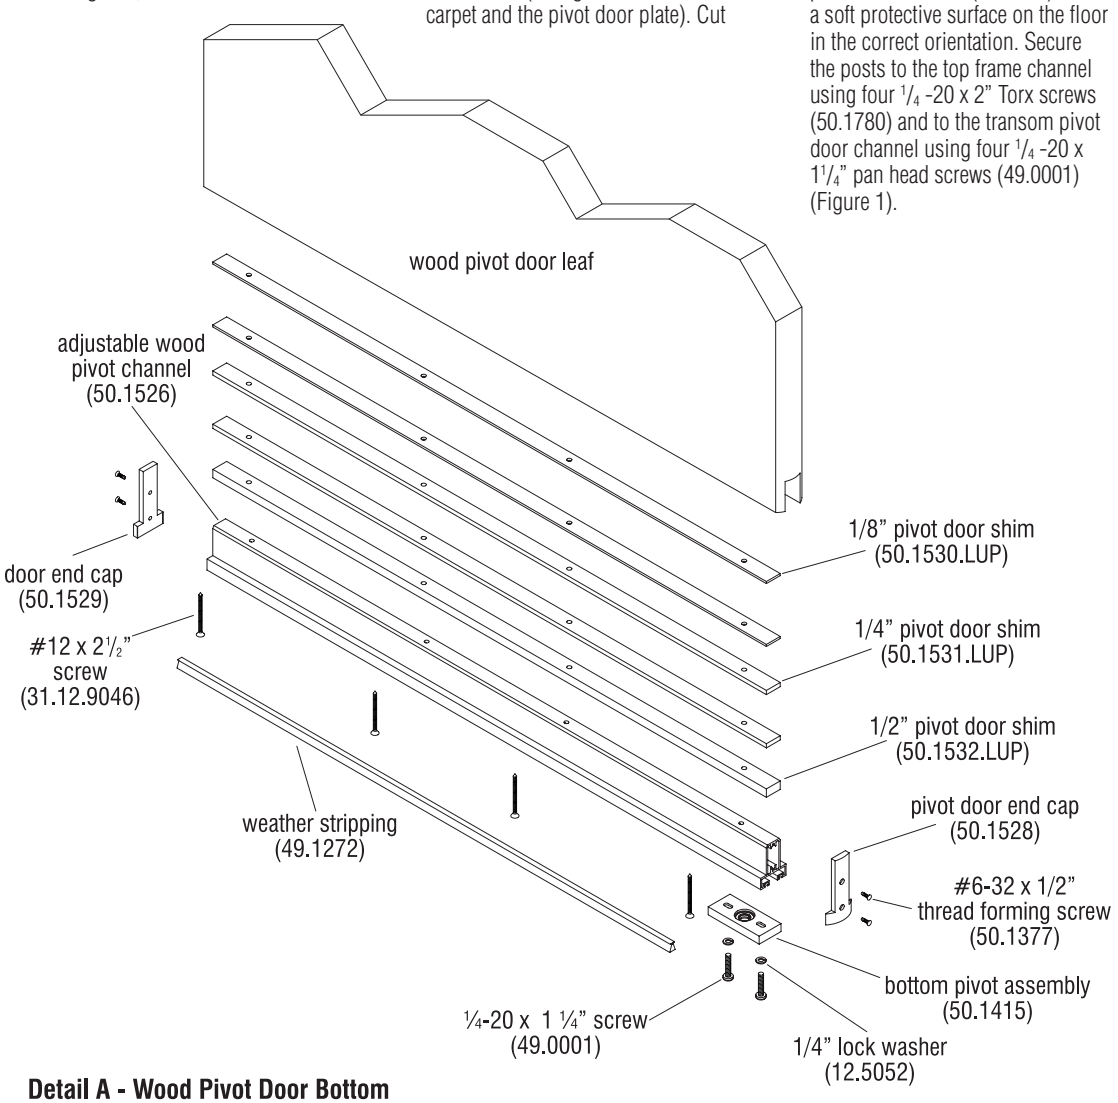

Detail A - Wood Pivot Door Bottom

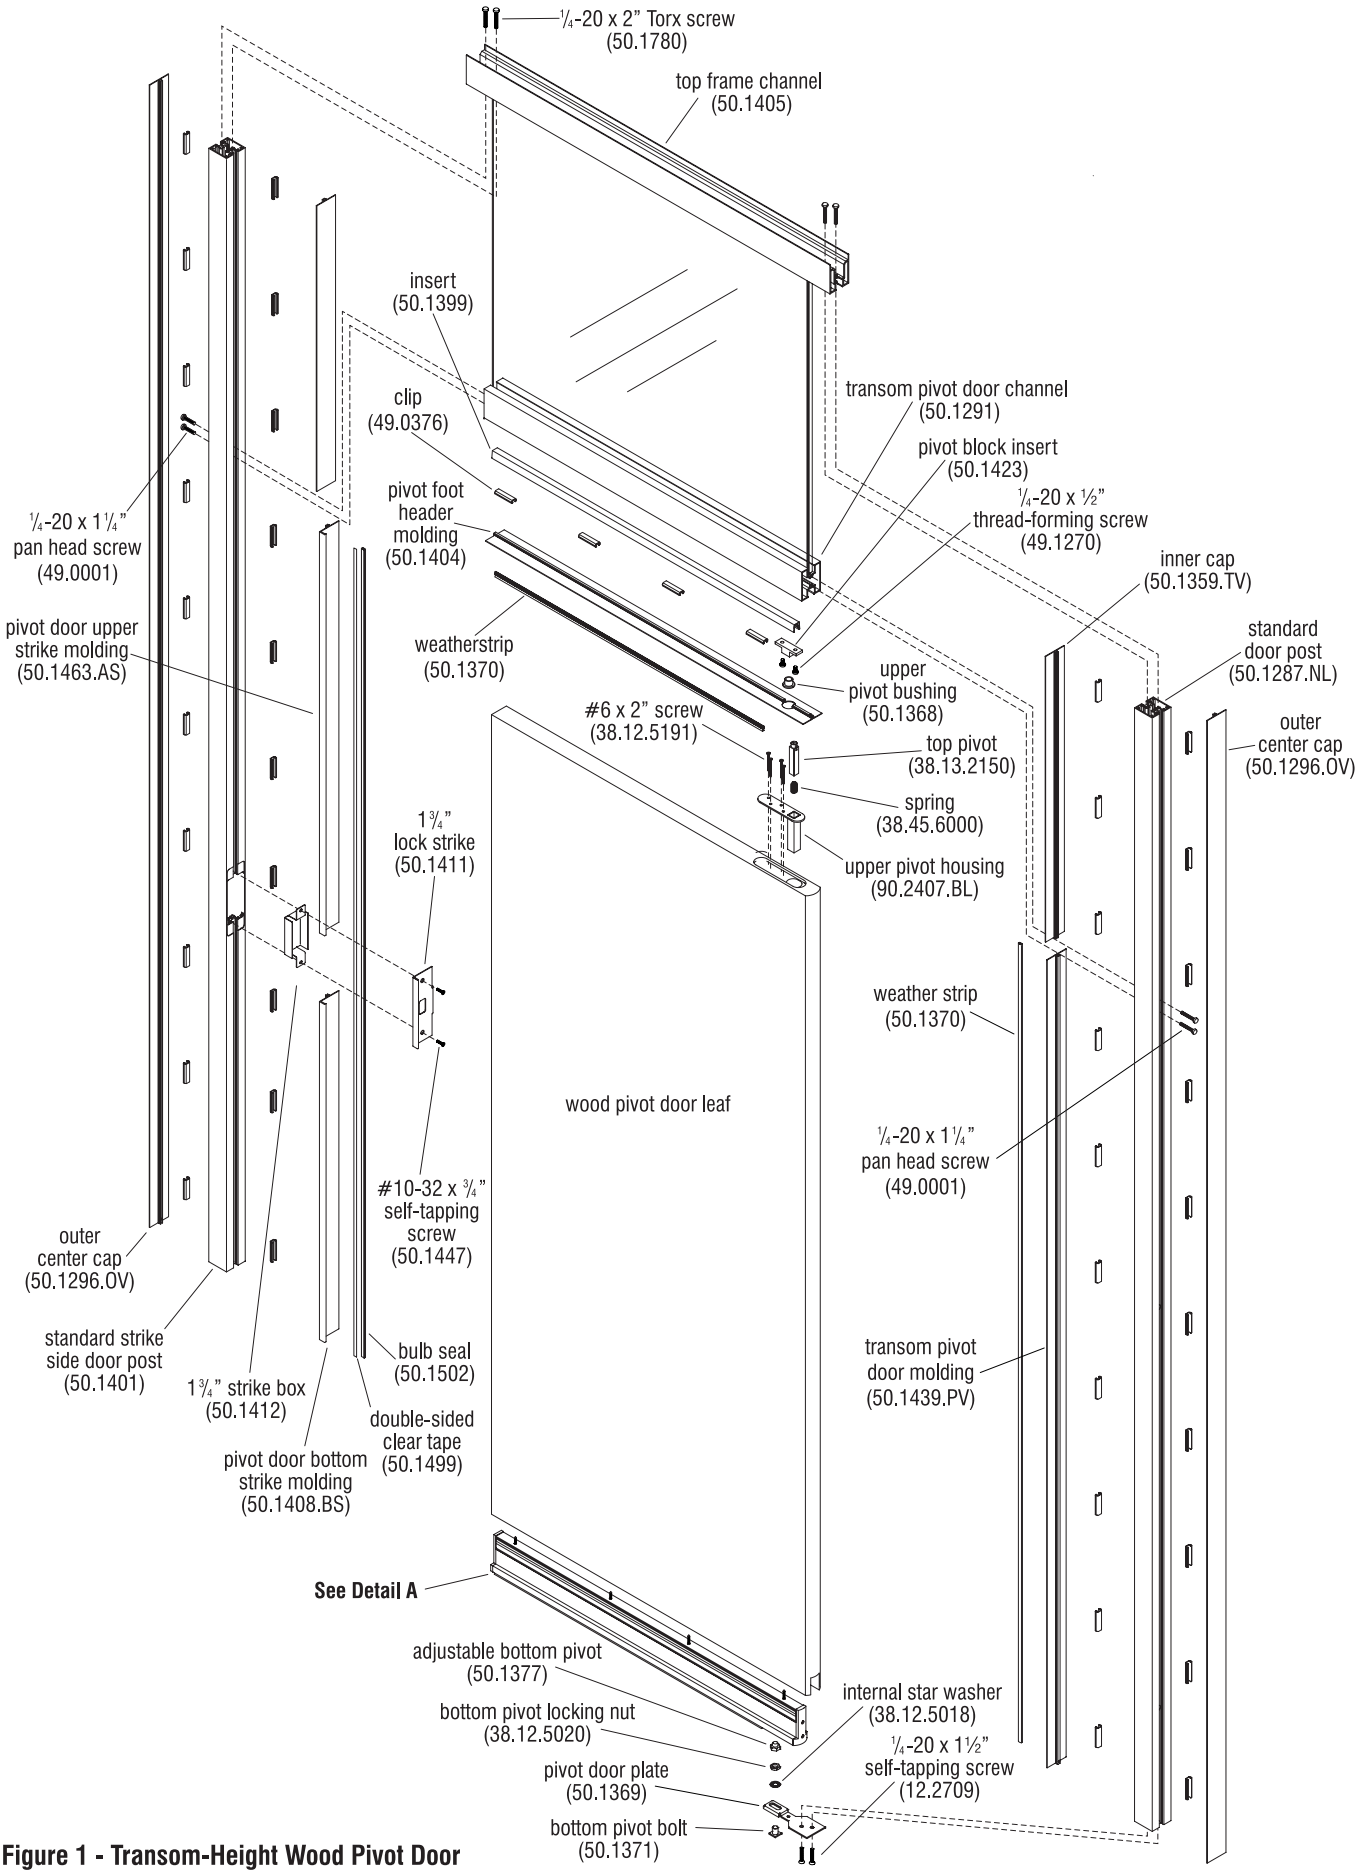


Figure 1 - Transom-Height Wood Pivot Door

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

8. If not already installed, position the pivot block insert (50.1423) over the pre-drilled holes in the transom pivot channel and secure using two 1/4 -20 x 1/2" thread-forming screws (49.1270) (Figure 1).

9. Install the upper pivot bushing (50.1368) into the pivot block insert (Figure 1).

10. Stand the door frame assembly up and into the ceiling rail. Make sure the door frame is plumb.

Door Leaf Pivot Installation

11. To prepare the pivot door leaf, begin by installing the upper pivot housing (90.2407.BL). Position the upper pivot housing into the cutout in the top of the door leaf and secure using four #6 x 2" screws (38.12.5191) (Figure 1). Do not install the spring and top pivot at this time.

Adjustable Wood Pivot Channel Installation

12. To get an accurate door height measurement, slide the bottom pivot assembly (50.1415) into the adjustable wood pivot channel (50.1526) and secure using two 1/4" lock washers (12.5052) and 1/4 -20 x 1 1/4" screws (49.0001) (Detail A).

13. Next, place the adjustable wood pivot channel, with installed bottom pivot assembly, onto the adjustable bottom pivot (50.1377) Figure 1).

14. With the assistance of a second person, measure from the bottom of the upper pivot bushing down to the top of the adjustable wood pivot channel. Note the measurement for the door height and for installing the right amount of shims (Detail A).

15. To attach the adjustable wood pivot channel to the door leaf, begin by placing the adjustable wood pivot channel into the bottom of the door leaf (Detail A).

16. Measure the space between the adjustable bottom channel and door leaf for the required amount shims (50.1530.LUP, 50.1531.LUP, 50.1532.LUP) (Detail A).

17. Reposition the stack of shims with the channel into the door leaf. Make sure the adjustable bottom channel and shims sit firmly against the door leaf and secure using four #12 x 2 1/2" screws (Detail A).

18. To get the correct height for the pivot door end caps (50.1528 & 50.1529), measure from the bottom of the adjustable wood pivot channel to the end of the notch in the door leaf (Detail A).

    Note: Another way to get the correct height measurement for the pivot door end cap is to place the cap upside down over the notch and adjustable wood pivot channel. Then mark the cap from the bottom of the channel.

19. Cut the pivot door end caps to that measurement. Cut from the extended top portion of the cap.

20. Position the pivot door end cap over the adjustable wood pivot channel and secure using two #6-32 x 1/2" self-tapping screws (50.1377) (Detail A). Repeat step to install the other cap.

Door Assembly Installation

21. With the assistance of a second person, install the door assembly onto the adjustable bottom pivot (Figure 1).

22. Insert the spring (38.45.6000) and top pivot (38.13.2150) into the upper pivot housing (90.2407.BL). Using the supplied tool, compress the spring-loaded pivot down and move the door into position, then release the spring-loaded pivot into the upper pivot bushing (Figure 1).

23. Check the door for proper height and lock engagement. Adjust the height of the door as needed by turning the adjustable bottom pivot (Figure 1).

24. Follow other instructions in this manual to complete attaching the door handle/lock, the door frame to adjacent panels and trim.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

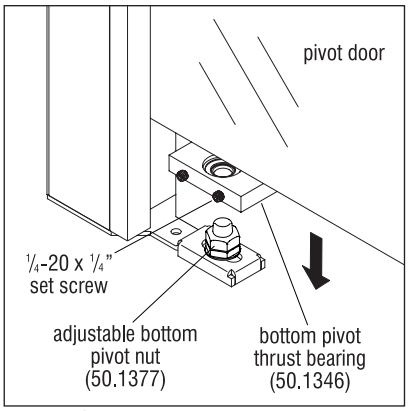


Figure 1 - Install Door to Pivot Nut

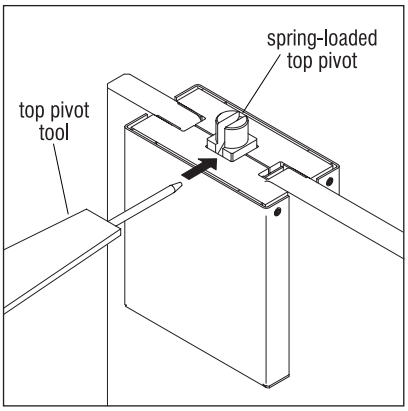


Figure 2 - Depress Spring-loaded Pivot

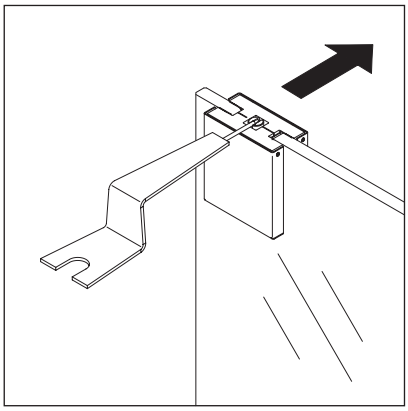


Figure 3 - Move Door into Position

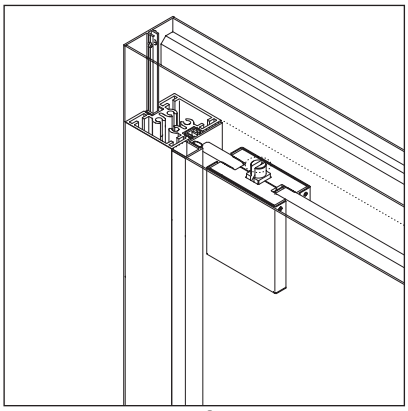


Figure 4 - Release Spring-loaded Pivot

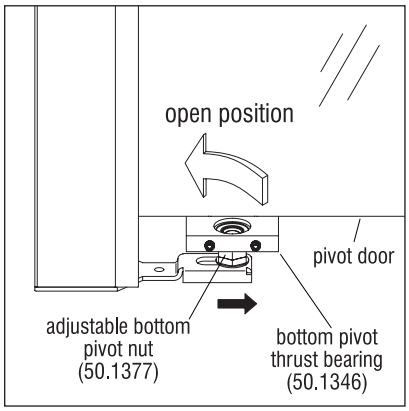


Figure 5 - Open Position

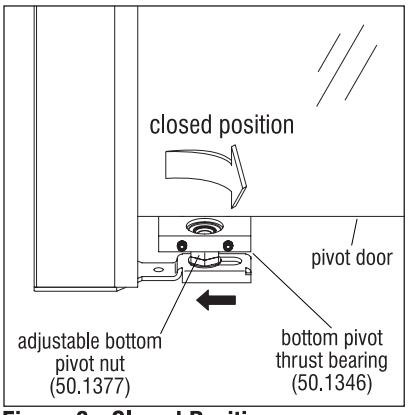


Figure 6 - Closed Position

Door Pivot Adjustment Installation

Note: Generally, most offices have doors set to swing open, and storage rooms are set to swing closed. This can be achieved by following these additional instructions.

Note: Some door parts are not illustrated so that pivot parts can be visible.

1. Install door by first placing the bottom pivot thrust bearing over the adjustable bottom pivot nut (Figure 1).
2. Depress the spring-loaded top pivot using the supplied tool (Figure 2). Next, move door into position (Figure 3), then release the spring-loaded pivot into the top pivot plate (Figure 4).
3. Once door is installed, go back to the bottom pivot thrust bearing and loosen the set screws holding it in position (Figure 1). This will allow the thrust bearing to move with the bottom pivot nut when setting the door opening position.
4. Moving the bottom door thrust bearing and pivot nut approximately ¼" toward the center of the door will make the door swing open under its own weight (Figure 5).
5. Moving the bottom door thrust bearing and pivot nut ¼" toward the edge of the door will make the door swing closed under its own weight (Figure 6).

   Note: If door does not swing properly, plumb is not correct.
6. Once door opening position has been decided upon, tighten the set screws for the door thrust bearing to hold it in place. Then, tighten the lock nut for the bottom pivot nut to hold it in place as well.

   Note: All additional door hardware should be installed per manufacturer instructions. Contact KI if additional information is needed.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Sliding Door Sound Seal Fin Installation

Note: The sound seal fin is installed after sliding door has been hung.

1. With sliding door closed, line up seal fin (50.1659) on back edge of door. Make sure door is fully closed so wiper contacts side post and that seal fin is above adjustable bottom. Once fin is in position, mark where to cut top of seal fin so it is flush with top of door.

2. Once fin is cut, Install seal fin (50.1659) on backside of door leaf (Figure 1). Peel release backing off of fin then attach to backside edge of door leaf. Make sure fin is above adjustable bottom (Figure 1).

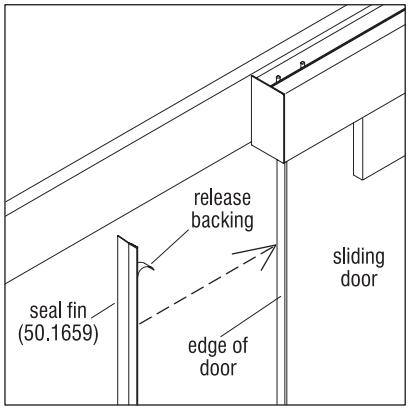


Figure 1

Front Extrusion with Sound Seal Door Stop Installation

1. Close door fully, then align the front extrusion (50.1540) with installed sound seal (50.1517) to the front edge of the door leaf. Make sure seal is slightly compressed (Figure 2).

2. Attach extrusion to post using #8 x $^5/_8$" self-drilling screws. Center the screws to the "V" notch in center of extrusion (Figure 3).

3. Push cap (50.1541) into the extrusion to cover the opening (Figure 4).

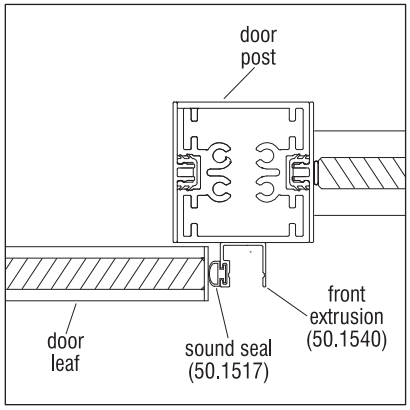


Figure 2

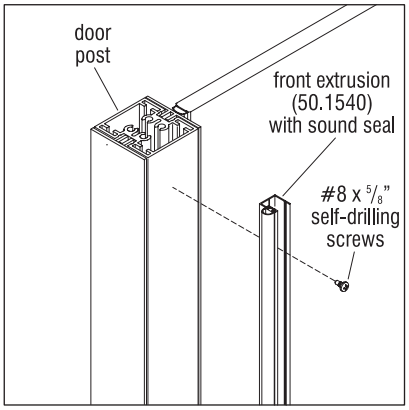


Figure 3

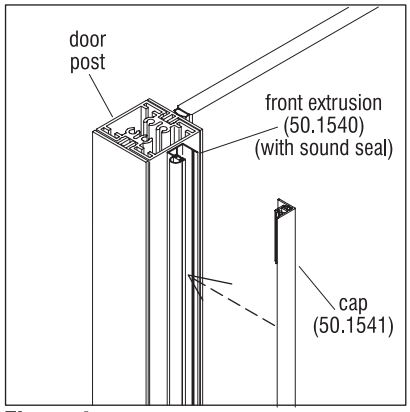


Figure 4

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Pivot Door Reversal Instructions

Door Reverse Parts List

Note: The following parts will need to be ordered and shipped to the site prior to door frame field reversal.

FULL-HEIGHT LUP-G DOOR FRAMES:
Left-Hand Door to a Left-Hand Reverse:

Glass Pivot Door Strike Center Molding
1363/50.1362/RH/CH – 1.07/040.000/FINISH
Quantity: 1

Glass Pivot Door Center Molding
1467/50.1362/CH – 1.07/FINISH
Quantity: 1

Right-Hand Door to a Right-Hand Reverse:

Glass Pivot Door Strike Center Molding
1363/50.1362/LH/CH – 1.07/040.000/FINISH
Quantity: 1

Glass Pivot Door Center Molding
1467/50.1362/CH – 1.07/FINISH
Quantity: 1

TRANSOM-HEIGHT LUPT-G DOOR FRAMES:
Left-Hand Door to a Left-Hand Reverse:

Glass Transom Pivot Door Strike Center Molding
1438/50.1362/RH/SE + .43/040.000/FINISH
Quantity: 1

Glass Transom Pivot Door Pivot Center Molding
1477/50.1362/SE + .43/FINISH
Quantity: 1

Right-Hand Door to a Right-Hand Reverse:

Glass Transom Pivot Door Strike Center Molding
1438/50.1362/LH/SE + .43/040.000/FINISH
Quantity: 1

Glass Transom Pivot Door Pivot Center Molding
1477/50.1362/SE + .43/FINISH
Quantity: 1

Important: The following instructions will field reverse a Lightline plate glass pivot door frame. There are temporary and permanent options for field reverse handing.

Configurations

1. See Figure 1a and 1b for possible combinations of field reverse handing.

2. See Figures 2 and 3 for parts identification.

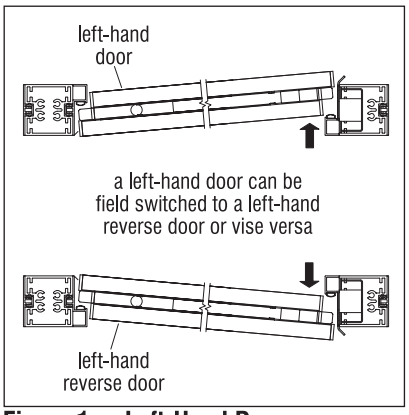


Figure 1a - Left-Hand Doors

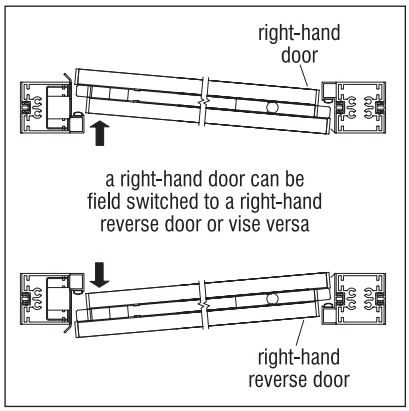


Figure 1b - Right-Hand Doors

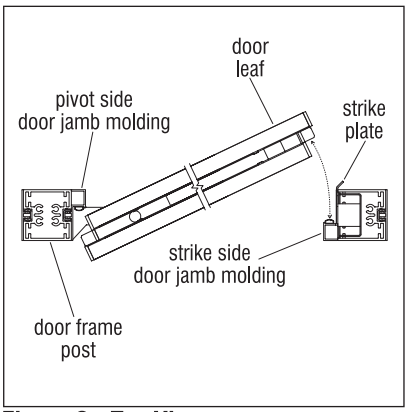


Figure 2 - Top View

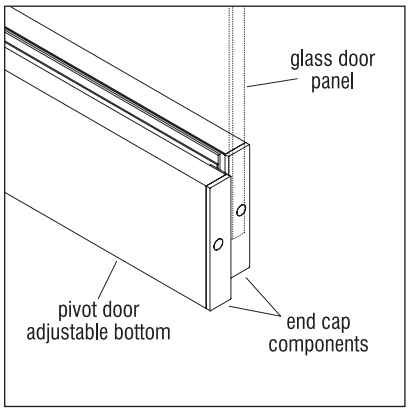


Figure 3 - Door Bottom

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Pivot Door Frame Reversal

Note: The illustrations show a right-hand door being changed to a right-hand door reverse, but left-hand doors are reversed the same way.

1. Remove door leaf from frame and set aside, then remove pivot side pivot molding (Figure 1). Two thin pry bars can be used working from both sides of the door post, moving from one end of the molding to the opposite end. Once the molding is removed, pry any remaining black plastic clips (49.0376) out of the post.
2. Install replacement pivot side pivot molding opposite of the original molding orientation (Figure 2).
3. Remove the two #10-32 x 3/4" self-tapping screws and strike plate (50.1366) from the strike side of the door frame (Figure 3). Do not discard the strike plate as it will be re-used.
4. Remove strike side molding and any remaining black plastic clips from the door post (Figure 4).
5. Install replacement strike molding opposite of the original molding orientation (Figure 5).
6. Re-install strike plate. Door frame is now ready to receive a reverse hand door leaf (Figure 6).

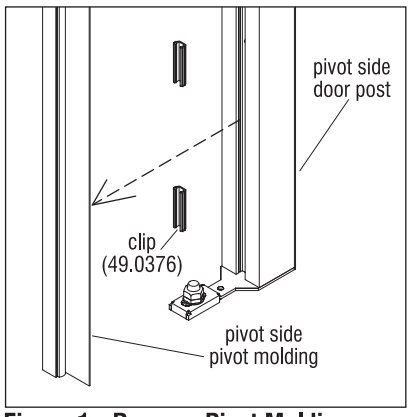


Figure 1 - Remove Pivot Molding

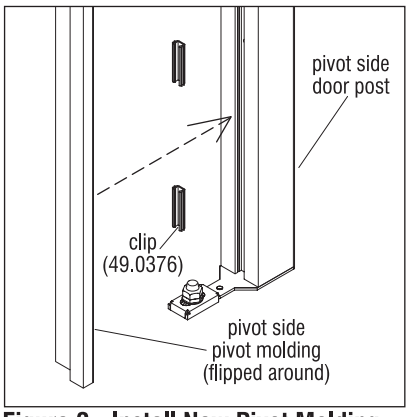


Figure 2 - Install New Pivot Molding

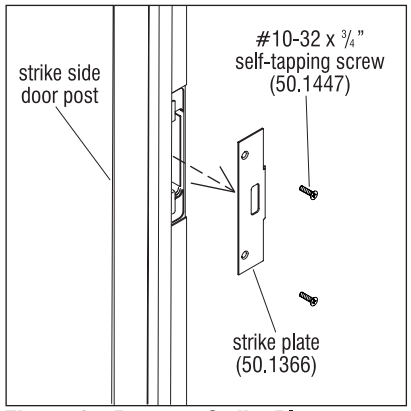


Figure 3 - Remove Strike Plate

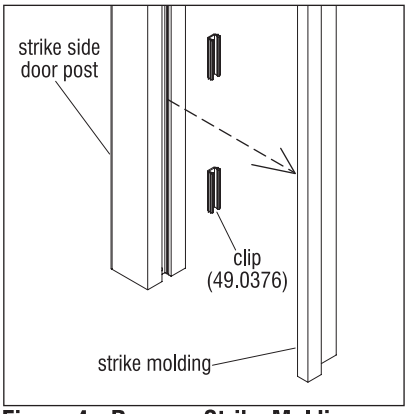


Figure 4 - Remove Strike Molding

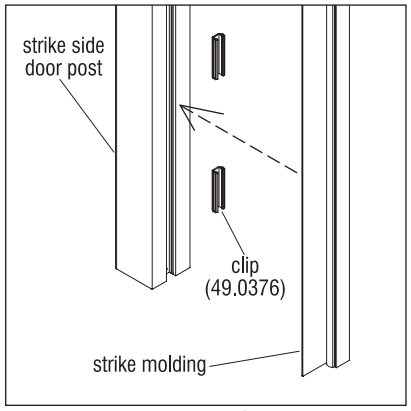


Figure 5 - Install New Strike Molding

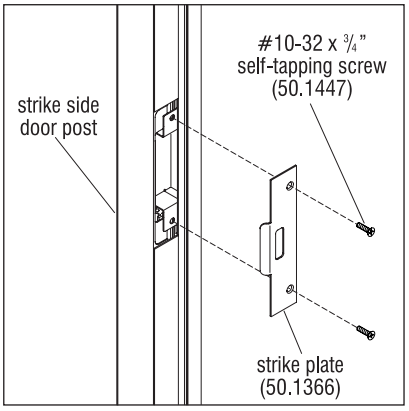


Figure 6 - Install Flipped Strike Plate

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

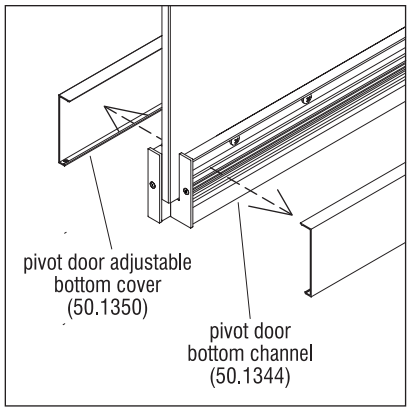


Figure 7 - Remove Bottom Covers

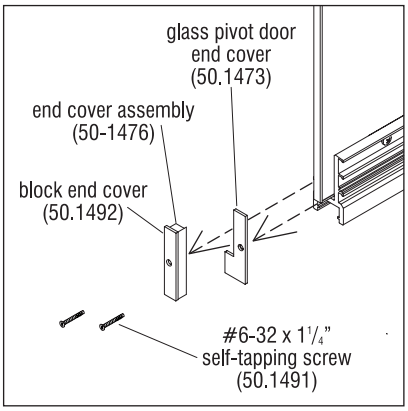


Figure 8 - Remove End Covers

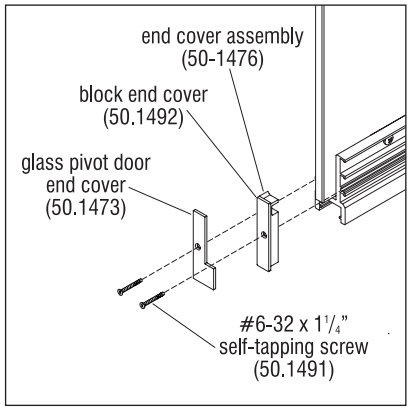


Figure 9 - Flip End Covers & Install

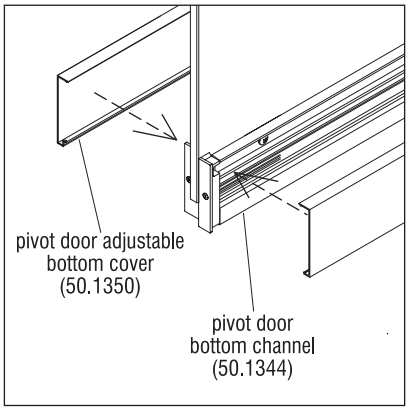


Figure 10 - Install Bottom Covers

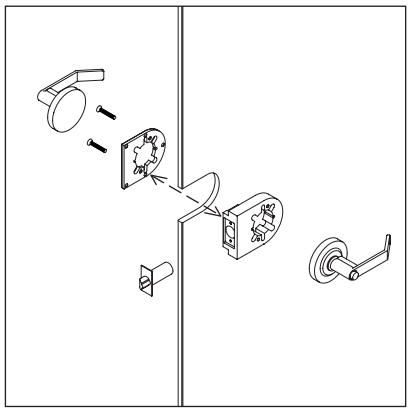


Figure 11 - Remove Door Handle

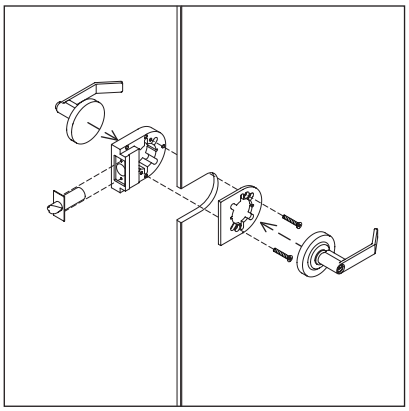


Figure 12 - Reverse Handle & Install

Pivot Door Leaf Reversal

1. Carefully lay door leaf on a flat, protected worksurface. Remove adjustable bottom covers (50.1350 & 50.1344) from the bottom of door leaf (Figure 7).

2. Next, remove end cover components from door bottom (Figure 8). Do not discard as they will be re-used.

3. Flip end cover components to reverse the notch in the door bottom for the new door jamb orientation and re-install (Figure 9).

4. Re-install the pivot door bottom covers (50.1250 & 50.1344) in the same orientation as they were removed (Figure 10).

   Note: Lightline accepts different door handles. Figures 11 & 12 show only one type of door handle that is offered.

5. Remove door hardware/housing from door leaf (Figure 11).

6. Flip door hardware/housing and re-install to door leaf (Figure 12).

7. Re-install door leaf into door frame following standard pivot door installation steps. Door field reversal is now complete.

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Pivot Door - Temporary Field Reverse Instructions

Note: A Lightline pivot door can be temporarily field reversed without ordering or replacing any components.

1. Measure the strike side molding from the top of the strike notch to the floor and note the dimension (Figure 1).

2. Remove the strike plate, strike side door jamb molding, and any remaining black plastic clips from the door post. Next, measure the strike molding from the bottom of the strike notch to the previously noted dimension, mark and cut (Figure 2). Re-apply all black plastic clips to the cut moldings spacing them about 12" apart.

3. Flip the cut moldings and re-install them opposite of the original orientation. The splice in the cut jamb molding will be near the top of the door frame above the strike plate as illustrated (Figure 3).

4. Now re-install the strike plate and the temporary door frame. Field reversal is complete. Door frame is now ready to receive a reverse hand door leaf.

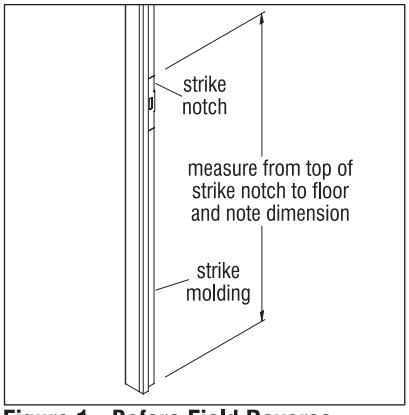


Figure 1 - Before Field Reverse

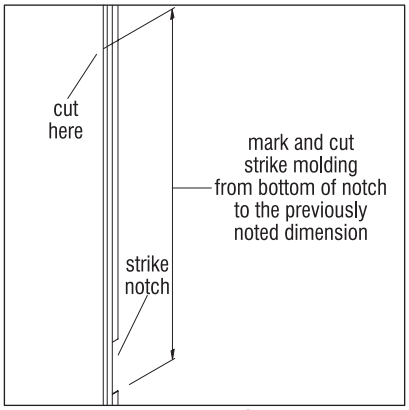


Figure 2 - Locate New Strike Location

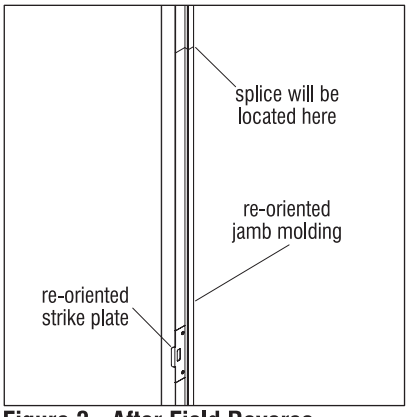


Figure 3 - After Field Reverse

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

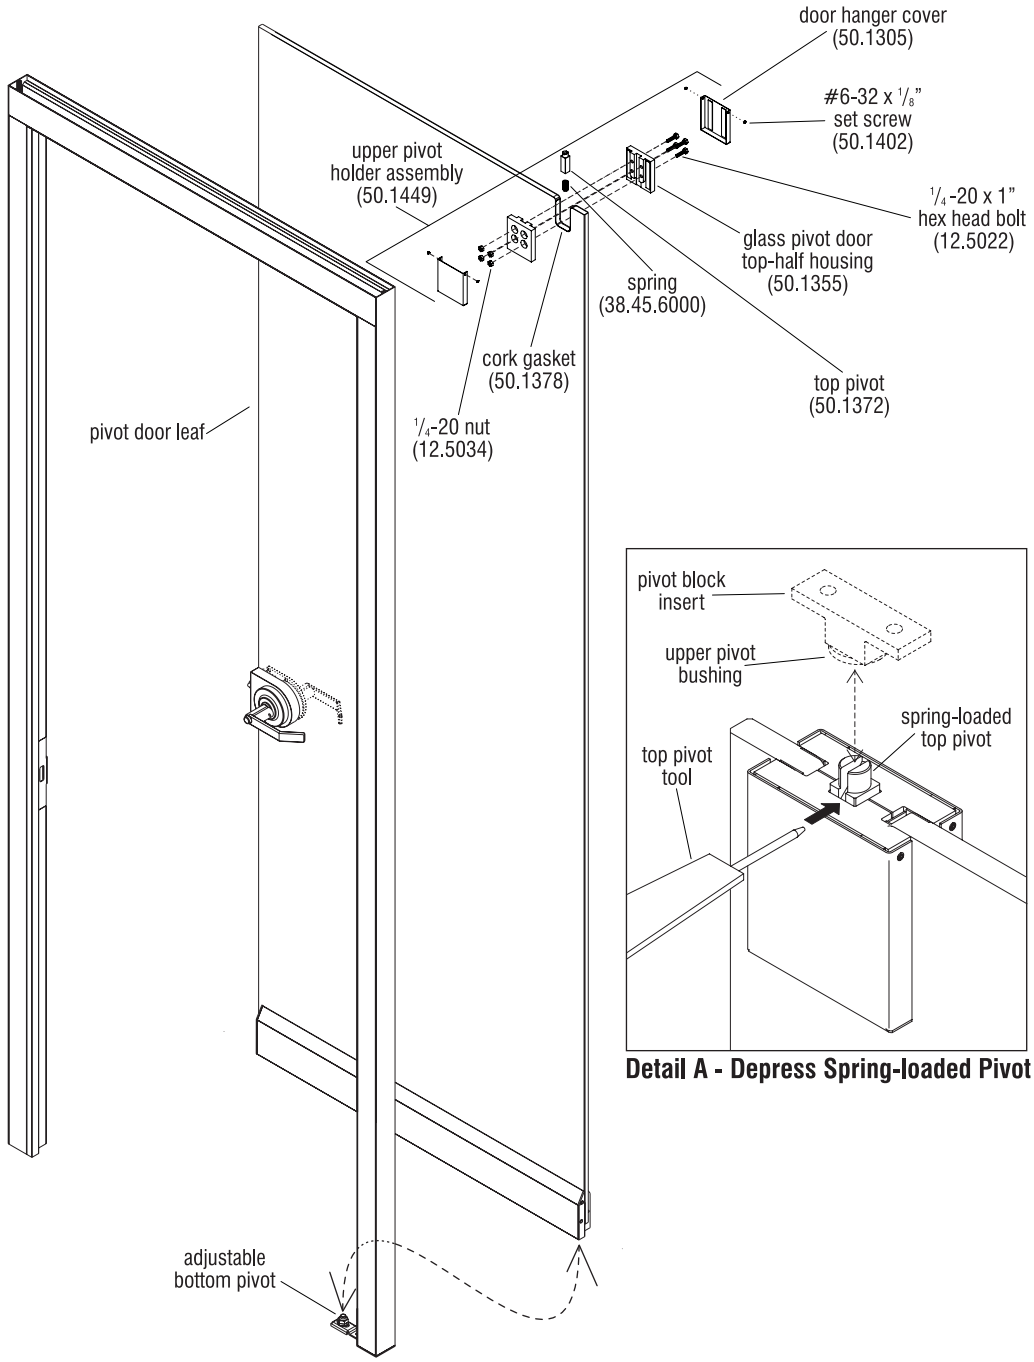


Figure 1 - Left-Hand Pivot Door Shown

Detail A - Depress Spring-loaded Pivot

Door Closer Installation

If the glass pivot door top-half housing does not have four holes at each corner, then both of the top-half housing pieces will need to be replaced (instructions on this page) before installing the door closer assembly. If both pieces of the top half housing do have four screw holes in each corner, then proceed to the "Door Closer Mounting Kit Installation" instructions (Page 72).

Glass Pivot Door Top-Half Housing Removal

1. Install suction cups on the glass pivot door to aid in door removal.
2. With the assistance of a second person supporting the pivot door, using the pivot adjustment tool, press down on the top pivot and move the top part of the pivot door out of the way (Figure 1 & Detail A).
3. Remove the top pivot and spring from the upper pivot holder assembly (Figure 1).
4. Carefully remove the pivot door from the adjustable bottom pivot and lay the pivot door on a flat, protected worksurface (Figure 1).
5. Remove four #6-32 x 1/8" set screws and door hanger covers from pivot door top half housing (Figure 1).
6. Remove four 1/4 -20 nuts, 1/4 -20 x 1" hex head bolts and both pieces of the top-half housing from the notch of the pivot door. Leave the cork gasket in the notch (Figure 1).

New Glass Pivot Door Top-Half Housing Installation

7. Install strips of double-sided tape on the two new top-half housing pieces as illustrated (Figure 2).
8. Position both top-half housing pieces in the notch and secure using four 1/4 -20 x 1" hex head bolts and 1/4 -20 nuts (Figure 2).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Door Closer Mounting Kit Installation (Left-Hand Shown)

9. Position the door closer mounting plate on the upper pivot holder assembly and secure using four $^1/_4$ -20 x $^1/_2$" Torx screws. Repeat step to install the mounting plate at the other side of the door (Figure 3).
10. Once both mounting plates are installed, slide the mounting plate strap over both mounting plates and secure using eight #10-24 x $^3/_8$" screws (Figure 3).
11. Clean the outer surfaces of the mounting plate strap with Silane Glass Treatment AP115 (Figure 3).
12. Before removing the release paper from the adhesive on the housing and mounting covers, check for correct mounting location of both covers. Make sure the mounting cover and the mounting holes are on the correct side relative to the door handing (Figure 3).
13. Remove the release backing from the adhesive on the mounting cover and position onto the mounting plate strap (Figure 3).
14. With the assistance of a second person, using suction cups, reposition the pivot door on the adjustable bottom pivot (Figure 1).
15. Install the spring and top pivot into the upper pivot housing assembly (Figure 3).
16. Using the pivot adjustment tool, press down on the top pivot and move the top part of the pivot door so that the top pivot is inserted into the upper pivot bushing (Detail A).
17. Install the door closer and arm assembly with the supplied hardware. Follow the manufacturer's installation instructions.

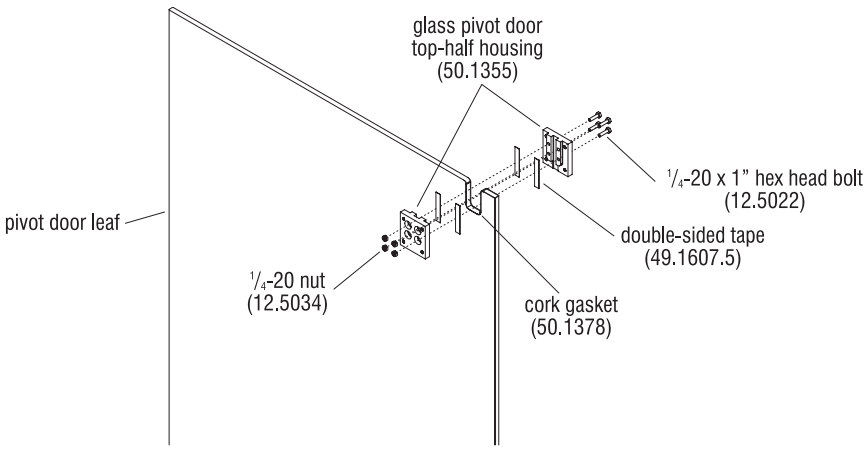


Figure 2

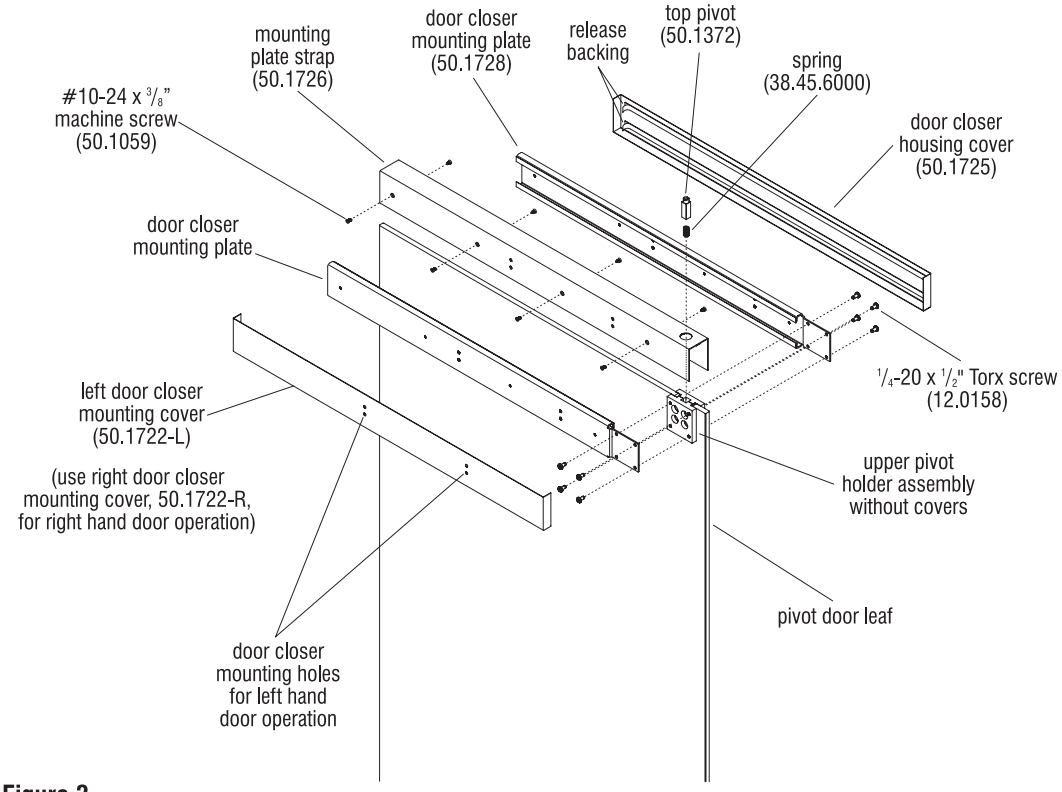


Figure 3

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

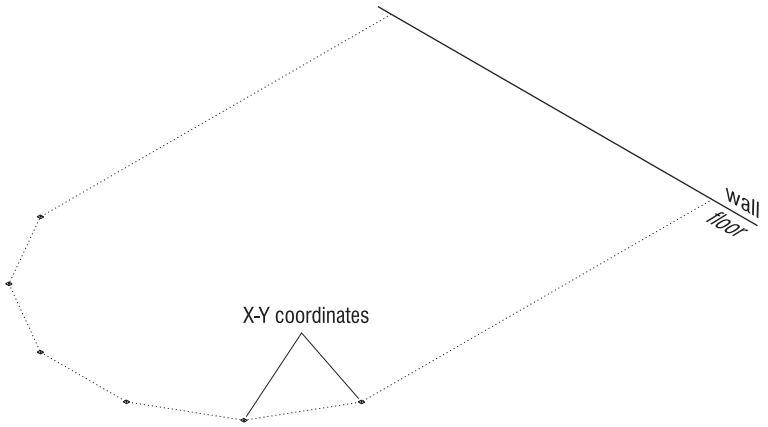


Figure 1 - Floor Markings With X-Y Coordinates

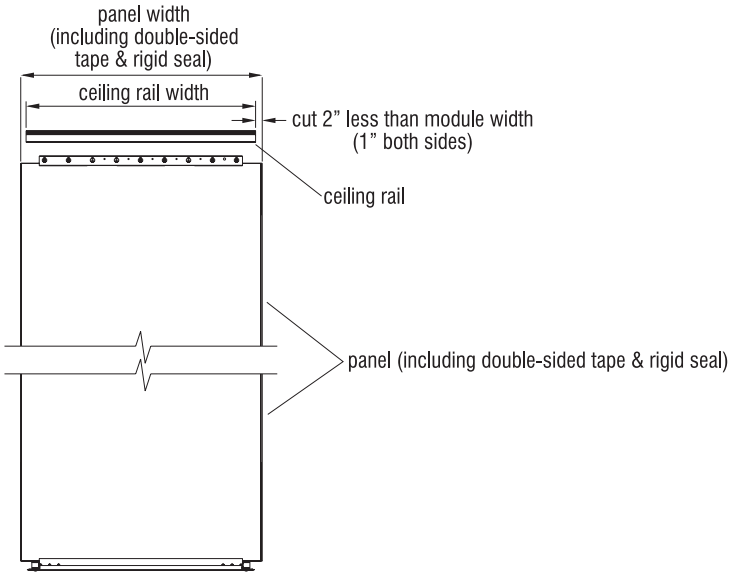


Figure 2 - Ceiling Rail Modification

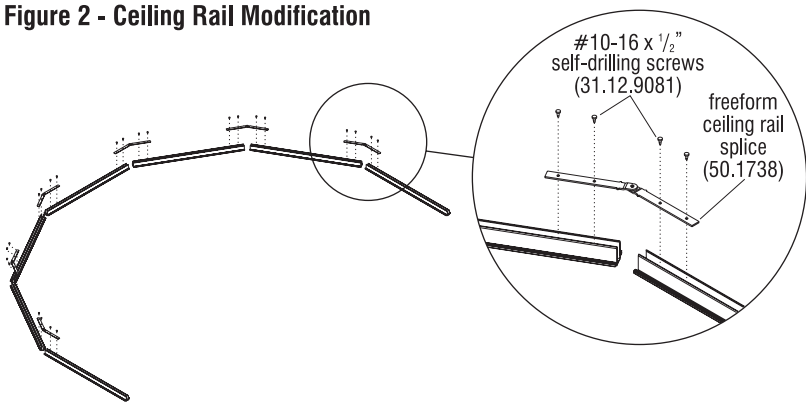


Figure 3 - Freeform Ceiling Rail Spine

Freeform Panel Layout Installation

1. Using masking tape and a marker lay out the X and Y coordinates shown on the space-planning layout onto the floor (Figure 1).

2. Cut a section of ceiling rail 2" less than panel width for each of the panels that will be installed in the curved section of wall assembly (Figure 2).

   Note: Panel width is defined as the panel width plus the thickness of both double-sided tape plus the thickness of the rigid seal.

3. Install the sections of ceiling rail with the freeform ceiling rail splices (50.1738). To do this, insert one leg of the splice into the ceiling rail all the way until both splice stops are against the edge of the rail. Then attach the splice to the rail using two #10-16 x 1/2" self-drilling screws (31.12.9081). Repeat this step until all ceiling rails are connected (Figure 3).

4. When all of the ceiling rails have been connected, it will form a spine that can be used as a template to more accurately lay out the contour of the curve. Flip over and lay the ceiling rail assembly onto the floor and align the rivets in the center of the splices with the marks on the masking tape as closely as possible (Figure 3).

5. Using a spot style plumb-bob laser, adjust the curvature of ceiling rail assembly more accurately. To do this, position the laser so that the laser beam is centered to the center of the rivet of the splice. One at a time, make any corrections required to the mark on the floor by marking the exact spot where the laser hits (Figure 4).

6. Once corrections are done to the floor, make corresponding marks on the ceiling using a marker and masking tape (Figure 4).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Freeform Panel Layout Installation (cont.)

7. Using a line laser or straight edge, connect the marks on the ceiling and mark where the line crosses the center of the ceiling grid (Figure 5).

8. Install a ceiling clip on the marks made where the laser line crosses the center of the ceiling grid (see "Ceiling Rail Installation" on page 8).

9. Holes must be drilled into the ceiling rail so the rail may be installed onto the ceiling clips. To do this, first measure from where the laser dot on the ceiling was to the center of the ceiling clip (Figure 5).

10. Transfer this dimension to the ceiling rail assembly by measuring from the center of the rivet to where a hole will need to be drilled for the ceiling clip (Figure 5).

11. After all the holes have been drilled install the ceiling rail (spine) assembly to the ceiling over the ceiling clips and fasten with hex nuts (see "Ceiling Rail Installation" on page 8). Use additional personnel as required to help support the ceiling rail during installation.

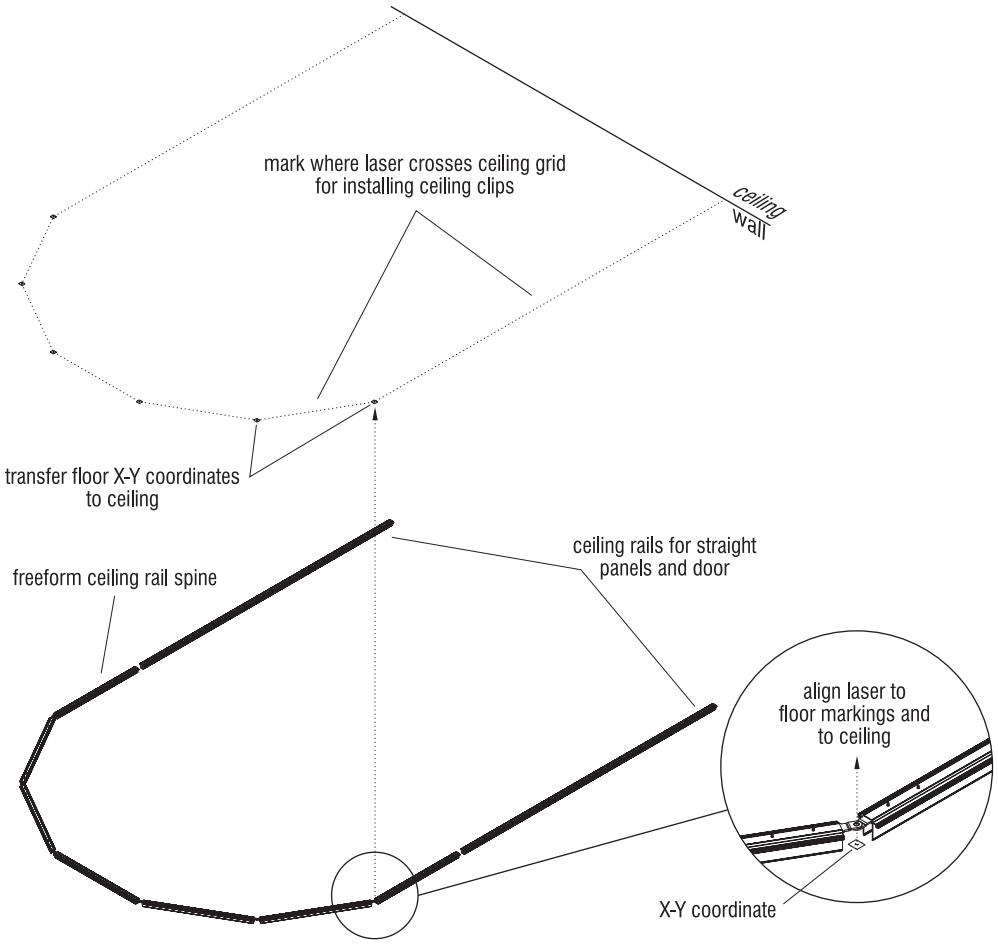


Figure 4 - Ceiling Rail Alignment Check and Marks for Ceiling Clips

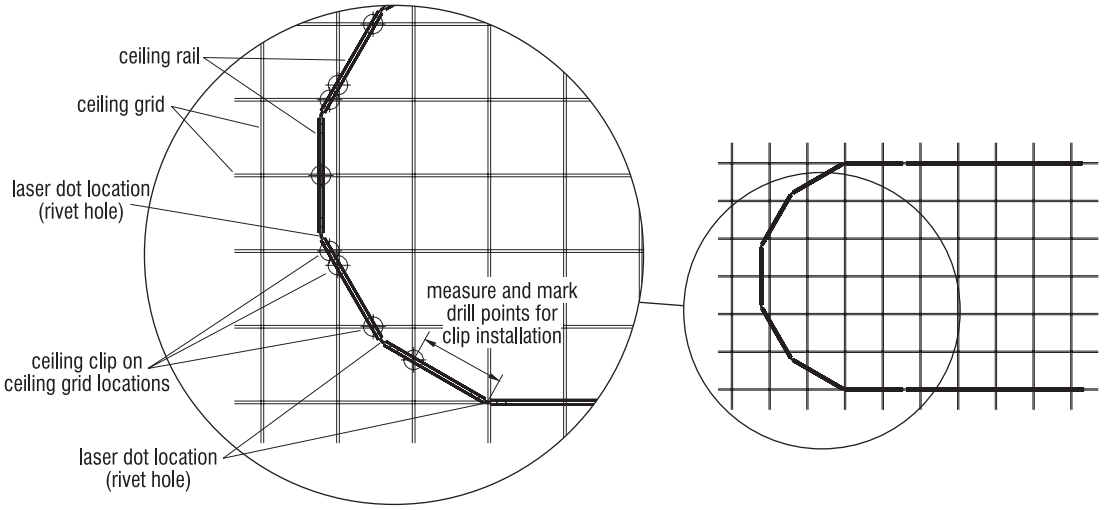


Figure 5 - Ceiling Grid/Rail Clip Locations

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

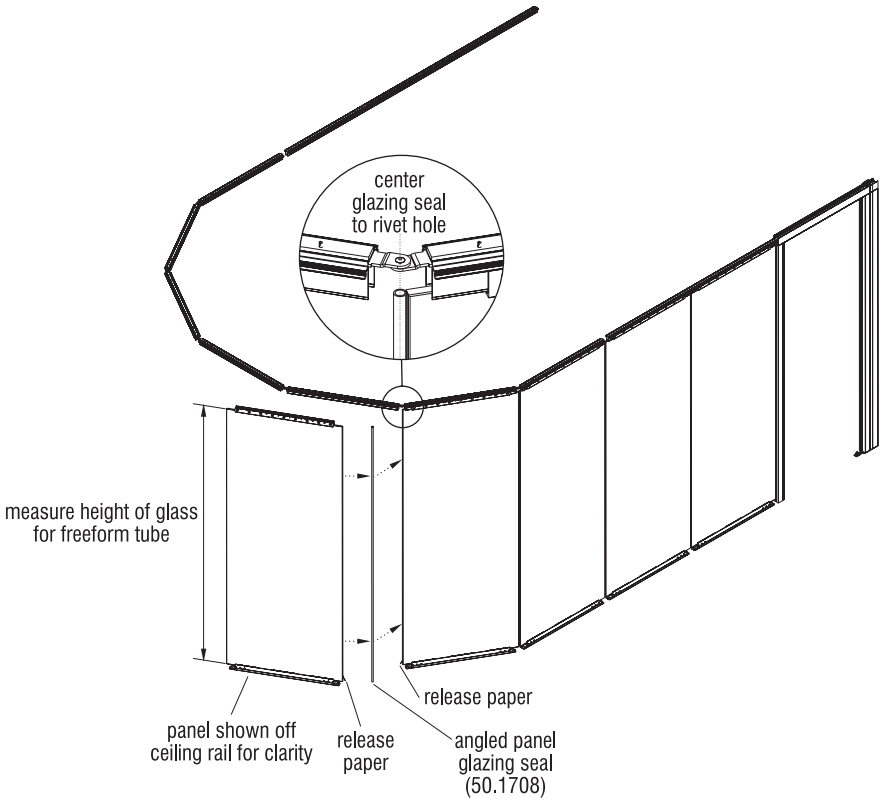


Figure 6 - Panels and Freeform Tube Install

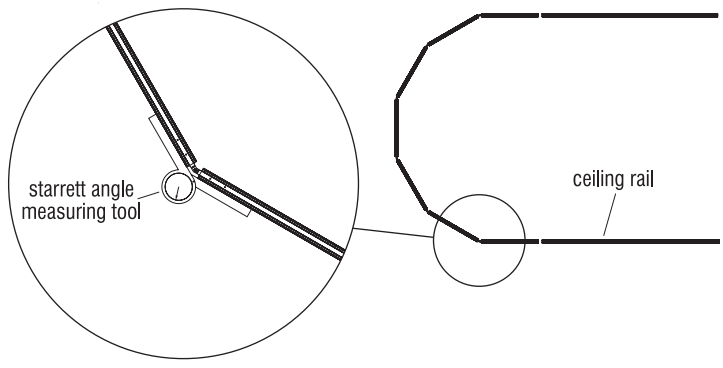


Figure 7 - Starrett Angle Measuring Tool

1. Stand the Lightline panels roughly into position under each section of ceiling channel (Figure 6).
2. Starting from one end of the curve remove the release paper from the VHB tape on the edge of the Lightline panel (Figure 6).
3. Measure the height of the glass and cut the angled panel glazing seal extrusion (50.1708) to length (Figure 6).
4. Clean the extrusion with Silane Glass Treatment AP115.
5. Bond the angled panel glazing seal extrusion to the edge of the glass using the rigid seal alignment block. Place the top of the seal extrusion centered on the top edge of the glass and use the block to guide the glazing seal onto the edge of the glass by sliding the block down the edge of the glass (Figure 6).
6. Move this panel so that the center of the glazing seal extrusion is aligned with the rivet in the splice (Figure 6).
7. Dry fit the next panel to the first one by leveling both panels so that the second panel butts into the tube evenly from top to bottom.
8. Pull the second glass panel back about ¼" and remove the release paper from the VHB tape on the edge of the glass panel (Figure 6).
9. Push the second panel into the glazing seal extrusion making a bond. Continue this process for the length of the curve.
10. Using a starrett angle measuring tool, measure the angle between each pane of glass. This device will produce the angle at which to set the power miter box and aid the installation of trim (Figure 7).

CAUTION

Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Freeform Panel Layout Installation (cont.)

Note: When cutting trim, make sure inner features are filed back so they are not sticking out of cut.

11. Cut one end of either the ceiling or base trim at the angle determined by the starrett angle measuring tool. Hold the mitered end of trim over the center of the extrusion and mark where the trim crosses the next extrusion. Cut the trim on the miter box at this location. Continue with all the pieces of trim and dry fit them onto the panels.

12. Remove the pieces of trim and splice them all together using the freeform splice plate (50.1734). This splice is bent by hand to the angle required. The splice fits into the end of the trim with an interference fit. Push and tap the splices into trim so that the middle of the splice lines up with the miter line. Continue attaching one piece of trim to the next until the entire curve is complete (Figure 8).

13. Finally, install this complete trim assembly onto the panels as one complete piece (Figure 8).

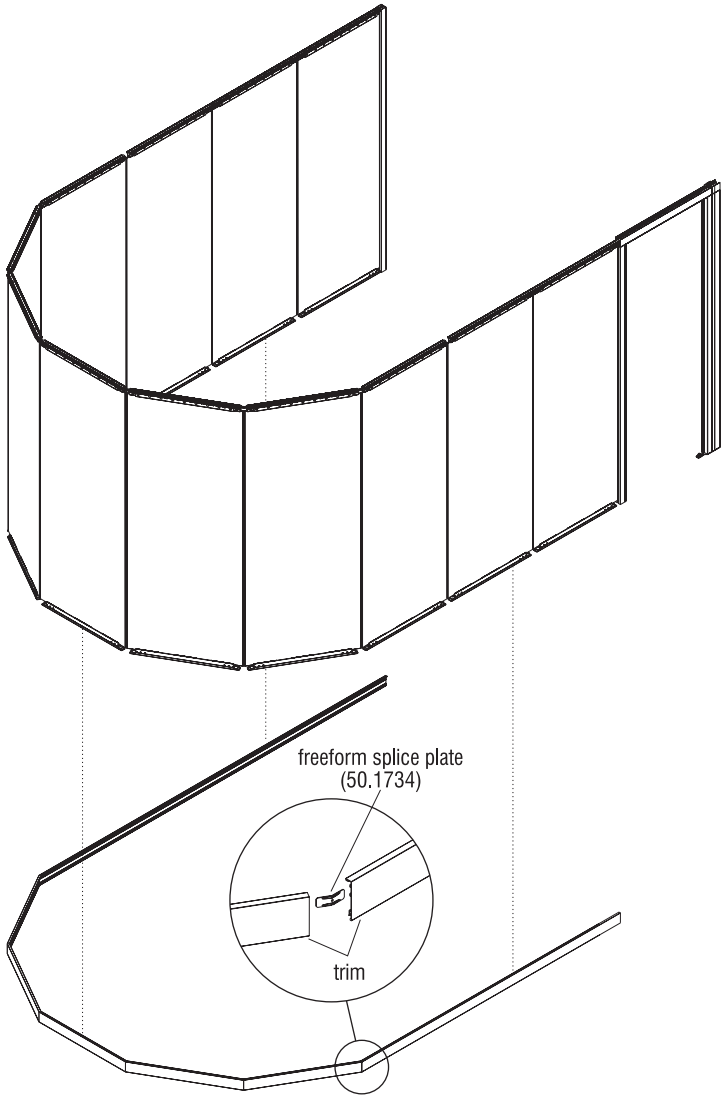


Figure 7 - Trim Installation (Floor Trim Shown Only)



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

KI
1330 Bellevue Street
P.O. Box 8100
Green Bay, Wisconsin 54308-8100
1-800-424-2432
www.ki.com

KI is a registered trademark
of Krueger International, Inc.

© 2017 Krueger International, Inc.
All Rights Reserved
Part# INSTALL.LLINE
Code KI-62489R1/KI/PDF/0917

Furnishing Knowledge®