

ASSEMBLY INSTRUCTIONS

MODEL NO. 12881


1

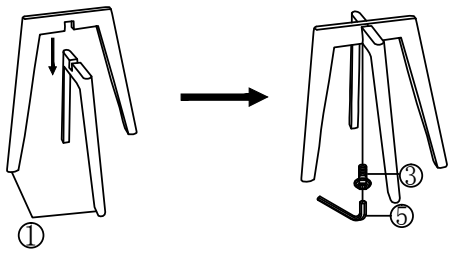

2

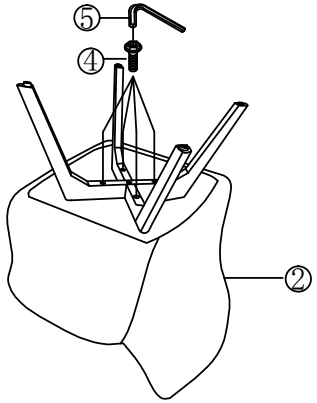

3

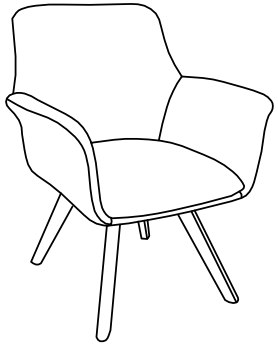

① WOOD LEG	②SEAT&BACK CUSHION	③ SCREW	④ SCREW	⑤ ALLEN KEY
		1/4″*1″	1/4″*2-1/2″	
				
2 PCS	1 PC	1 PC	4 PCS	1 PC