
Parts Diagram ■

Versa® Standard Armchair

September 2019

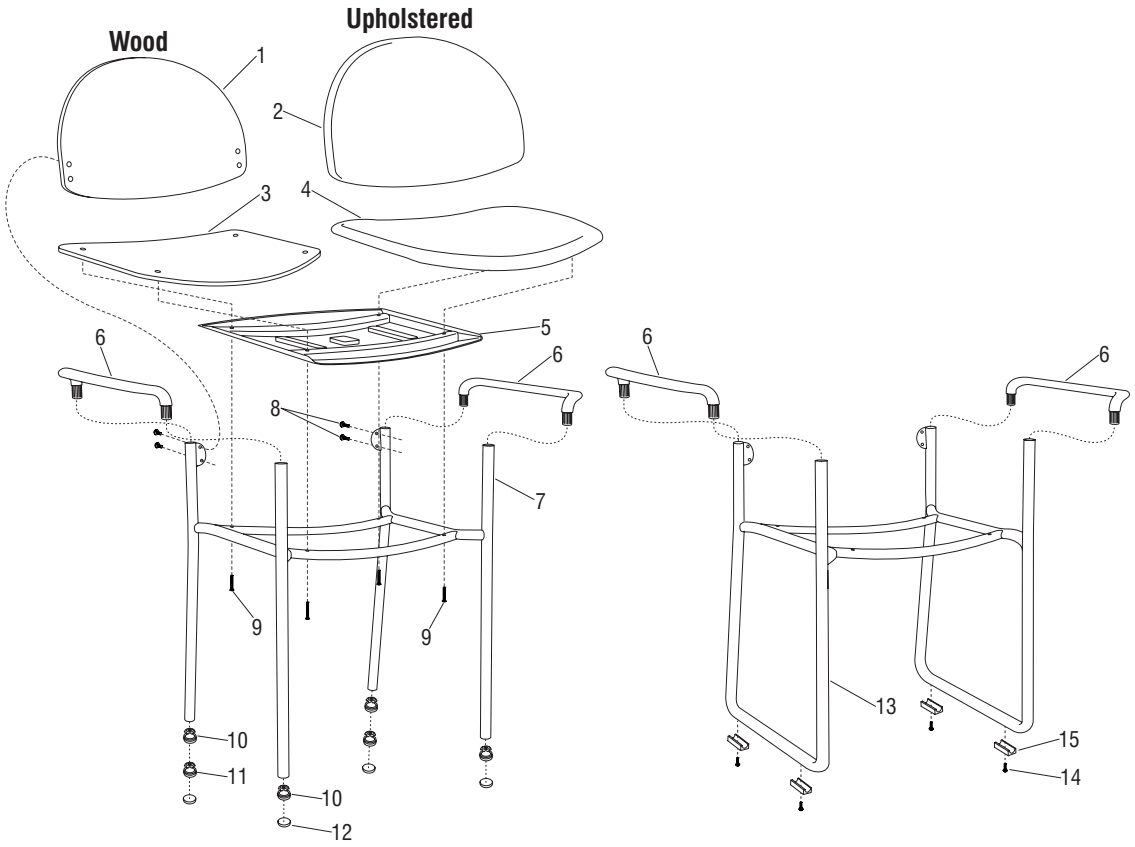

Furnishing Knowledge®

Versa® Standard Armchair

Parts Diagrams

.XX = Select Color

Note 1: Wallsaver chairs are only offered with steel glides. The rear legs use glide #10.0192.X and the front use #10.0190.X.

Note 2: Item 16, glide cap removal tool, is used to remove glide caps for replacement. Glides 10.0220.X and 10.0222.X have caps that can be removed/interchanged with Item 12, Felt Cap 10.0223.X & Plastic Cap 10.0221.X.

Note 3: Items 17 & 18, ganger kits, are shipped unassmebled. It is only used on armchairs with poly arms.

Item	Part Number	Item Description
1	VRPW	Back, Versa Std, Round Back, Wood (shown, includes Item 8)
		Back, Versa Std, Square Back, Wood (includes Item 8)
2	VSRC	Back, Versa Std, Round Back, Upholstered (shown, includes Item 8)
		Back, Versa Std, Square Back, Upholstered (includes Item 8)
3	VRPW	Seat, Versa Std, Wood (includes Item 9)
4	VSRC	Seat, Versa Std, Upholstered (includes Item 9)
5	85.4961.BLX	Seat Pan, Versa Std
6	85.4926.XX.X	Arm, Versa Std, Poly
	85.4928.X	Arm, Versa Std, Chrome Plated
7	VSFR	Chair Frame, Four-Leg Armchair (includes Items 6 and 10)
	VSFR	Chair Frame, Four-Leg Armchair Wallsaver (includes Items 6, 10 & 11)
	VSFR	Chair Frame, Four-Leg Armchair Ganging (includes Items 6, 10 & 17)
	VSFR	Chair Frame, Four-Leg Armchair Wallsaver Ganging (includes Items 6, 10, 11 & 17)
8	12.0903.X	Screw, $^1/_4$-20 x $^1/_2$" UNBREAKO BTN SHCS (wood back to frame)
	12.0241.BLX	Screw, $^1/_4$-20 X $^3/_4$" UNBREAKO BTN SHCS (attach upholstered back to frame)
9	12.0661.X	Screw, #10-24 x $1^1/_4$" PH OVL HD (wood or upholstered seat to frame)
10	10.0190.X	Glide, Steel
	10.0220.X	Glide, Swivel Plastic (see Note 2) (includes Item 12)
	10.0222.X	Glide, Swivel Felt (see Note 2) (includes Item 12)
11	10.0192.X	Glide, Steel Swivel (see Note 1)
12	10.0223.X	Cap, Felt (see Note 2)
	10.0221.X	Cap, Plastic (see Note 2)
13	VSFR	Chair Frame, Sled Base Armchair (includes Items 6, 14 & 15)
	VSFR	Chair Frame, Sled Base Armchair Ganging (includes Items 6, 14, 15 & 17)
14	PC.12.0583.X	Screw, #8 x 1/2" PFH Type B
15	10.0127.X	Glide, Sled Base PVC Non-Skid
16	10.0138.X	Removal Tool, Swivel Glide Cap (not shown, see Note 2)
17	13.0199.X	Ganger Kit, 1 Pack (see Note 3, components for one chair, not shown)
18	13.0198.X	Ganger Kit, 2 Pack (see Note 3, components for two chairs, not shown)

1330 Bellevue Street • P.O. Box 8100 • Green Bay, WI 54308-8100 • Tel 1-800-424-2432 • www.ki.com


© 2019 Krueger International, Inc. All Rights Reserved • Code KI-61632R5/KI/PDF/0919

Furnishing Knowledge®

Parts Diagram ■

Versa® Standard Armless Chair

September 2019

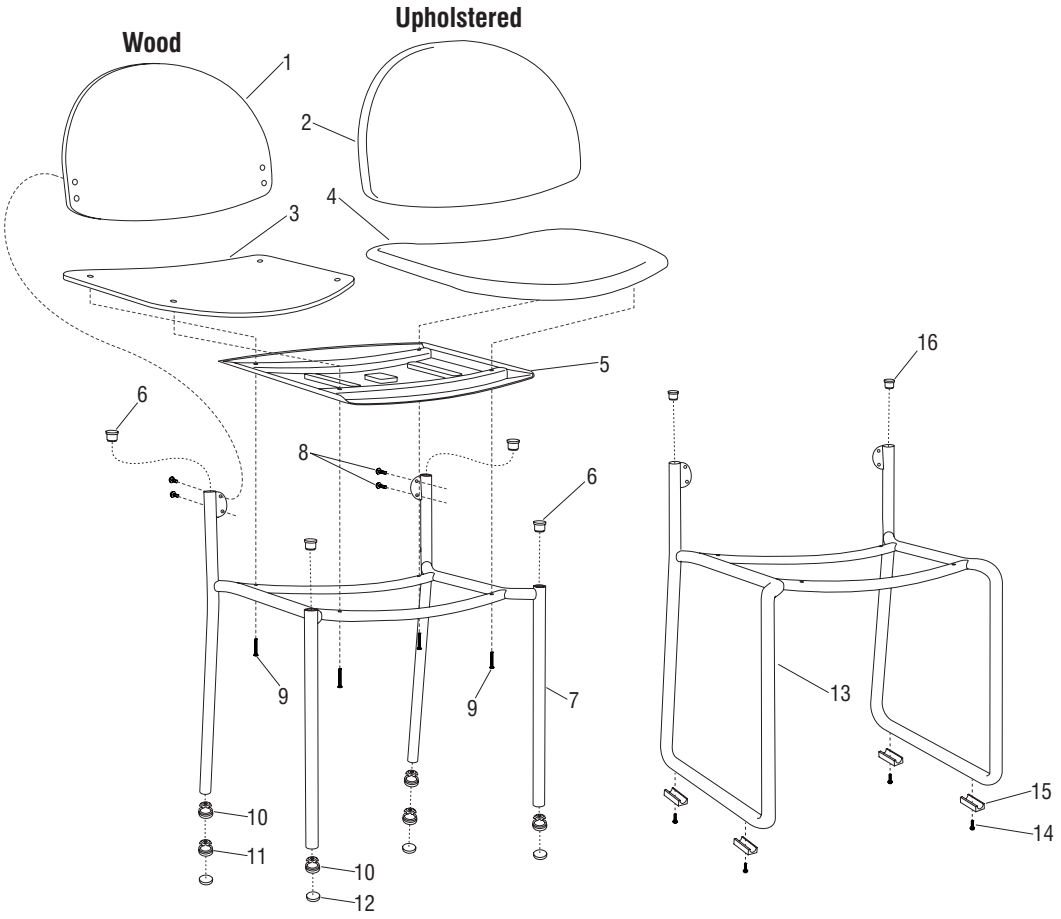

Furnishing Knowledge®

Versa® Standard Armless Chair

Parts Diagrams

.XX = Select Color

Note 1: Wallsaver chairs are only offered with steel glides. The rear legs use glide #10.0192.X and the front use #10.0190.X.

Note 2: Item 17, glide cap removal tool, is used to remove glide caps for replacement. Glides 10.0220.X and 10.0222.X have caps that can be removed/interchanged with Item 12, Felt Cap 10.0223.X & Plastic Cap 10.0221.X.

Item	Part Number	Item Description
1	VRPW	Back, Versa Std, Round Back, Wood (shown, includes Item 8)
		Back, Versa Std, Square Back, Wood (includes Item 8)
2	VSRC	Back, Versa Std, Round Back, Upholstered (shown, includes Item 8)
		Back, Versa Std, Square Back, Upholstered (includes Item 8)
3	VRPW	Seat, Versa Std, Wood (includes Item 9)
4	VSRC	Seat, Versa Std, Upholstered (includes Item 9)
5	85.4961.BLX	Seat Pan, Versa Std
6	53.6550.XX.X	End Cap, Leg Tube
7	VSFR	Chair Frame, Four-Leg Armless (includes Items 6 and 10)
	VSFR	Chair Frame, Four-Leg Armless Wallsaver (includes Items 6, 10 & 11)
	VSFR	Chair Frame, Four-Leg Armless Ganging (includes Items 6 and 10)
	VSFR	Chair Frame, Four-Leg Armless Wallsaver Ganging (includes Items 6, 10 & 11)
8	12.0903.X	Screw, 1/4-20 x 1/2" UNBREAKO BTN SHCS (wood back to frame)
	12.0241.BLX	Screw, 1/4-20 X 3/4" UNBREAKO BTN SHCS (attach upholstered back to frame)
9	12.0661.X	Screw, #10-24 x 1 1/4" PH OVL HD (wood or upholstered seat to frame)
10	10.0190.X	Glide, Steel
	10.0220.X	Glide, Swivel Plastic (see Note 2) (includes Item 12)
	10.0222.X	Glide, Swivel Felt (see Note 2) (includes Item 12)
11	10.0192.X	Glide, Steel Swivel (see Note 1)
12	10.0223.X	Cap, Felt (see Note 2)
	10.0221.X	Cap, Plastic (see Note 2)
13	VSFR	Chair Frame, Sled Base Armless (includes Items 14, 15 & 16)
	VSFR	Chair Frame, Sled Base Armless Ganging (includes Items 14, 15 & 16)
14	PC.12.0583.X	Screw, #8 x 1/2" PFH Type B
15	10.0127.X	Glide, Sled Base PVC Non-Skid
16	53.6551.XX.X	End Cap, Sled Base
17	10.0138.X	Removal Tool, Swivel Glide Cap (not shown, see note)

1330 Bellevue Street • P.O. Box 8100 • Green Bay, WI 54308-8100 • Tel 1-800-424-2432 • www.ki.com

© 2019 Krueger International, Inc. All Rights Reserved • Code KI-61633R5/KI/PDF/0919

Furnishing Knowledge®